


Service Manual

Quartz Direct Drive Automatic Turntable System

SL-J2/(K)

[E], [EK], [XL], [EG], [EB],
[EH], [EF], [Ei], [EC], [XA], [XM]

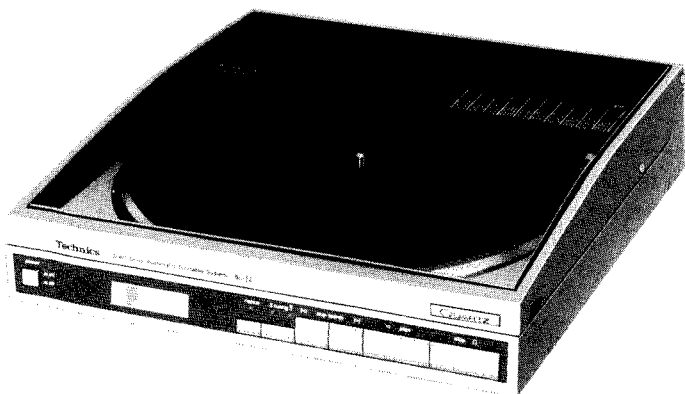

is the standard mark for the "P-mount" plug-in-connector system. Products carrying this mark are inter-changeable and compatible with each other.

- *The colors of this model include silver and black.
- *The black type model is provided with (K) in the Service Manual.

Areas

- * [E] is available in Switzerland and Scandinavia.
- * [EK] is available in United Kingdom.
- * [XL] is available in Australia.
- * [EG] is available in F.R. Germany.
- * [EB] is available in Belgium.
- * [EH] is available in Holland.
- * [EF] is available in France.
- * [Ei] is available in Italy.
- * [EC] is available in Czechoslovakia.
- * [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- * [XM] is available in Central South America.

Please use this manual together with the service manual for Model No. SL-J2, Order No. DAD84050089C1.

English

Specifications

Specifications are subject to change without notice for further improvement.
Weight and dimensions shown are approximate.

■ General

Power supply: ~220 V, 50 Hz
Power consumption: 12 W
Dimensions: 31.5 × 8.8 × 31.5 cm
 (12-1/2" × 3-1/2" × 12-1/2")
 (Maximum height when dust cover is open.)
 39 cm (15-23/64")
Weight: 4.3 kg (9.5lb.)

■ Turntable section

Type: Quartz direct drive
 Fully automatic turntable
 Auto start/Auto lead-in
Features: Auto return
 Auto stop
 Repeat play
 Direct music select play
 Forward and backward skip play
 Forward and backward search play
 Auto size select
 Record presence detection
Drive method: Direct drive
Motor: Brushless DC motor

Drive control method: Quartz-phase-locked control
Turntable platter: Aluminum die-cast
 Diameter 30 cm (12")
Turntable speeds: 33-1/3 rpm and 45 rpm
 Auto speed select
 (Manual selection possible)

Wow and flutter: 0.012% WRMS*
 0.025% WRMS (JIS C5521)
 ±0.035% peak
 (IEC 98A Weighted)

*Measured by obtaining signal from built-in frequency generator of motor assembly.

Rumble: -56 dB (IEC 98A Unweighted)
 -78 dB (IEC 98A Weighted)

■ Tonearm section

Type: Linear tracking tonearm
 4-pivot gimbal suspension
Effective length: 10.5 cm (4-1/8")
Tracking error angle: Within ±0.1°
Effective mass: 9 g (including cartridge)
Resonance frequency: 12 Hz
Tonearm drive motor: DC motor
Phono cable capacitance: 150 pF

Technics

Matsushita Electric Trading Co., Ltd.
 P.O. Box 288, Central Osaka Japan

■ Cartridge section

Type:	Moving magnet stereo cartridge	Channel separation:	22 dB at 1 kHz
Magnetic circuit:	All laminated core	Channel balance:	Within 1.8 dB at 1 kHz
Frequency response:	10 Hz ~ 40 kHz 20 Hz ~ 10 kHz ± 1 dB	Recommended load impedance:	47 k Ω ~100 k Ω
Output voltage:	2.5 mV at 1 kHz 5 cm/s. zero to peak lateral velocity (7 mV at 1 kHz, 10 cm/s. zero to peak 45° velocity [DIN 45 500])	Compliance (dynamic):	12 $\times 10^{-6}$ cm/dyne at 100 Hz
		Stylus pressure range:	1.25 ± 0.25 g (12.5 ± 2.5 mN)
		Weight:	6 g (cartridge only)
		Replacement stylus:	EPS-30ES

- The power supply for this unit varies depending upon the areas. Also, the parts used for power supply are different. So, refer to the circuit diagram and the replacement parts list.
- ★ 220V (50/60 Hz) for Continental Europe.
- ★ 240V (50/60 Hz) for United Kingdom and Australia.
- ★ 110V-120V/220V-240V (50/60 Hz) for other areas.
- ★ [EK], [XA], and [XM] areas are provided with voltage selector.

Deutsch

TECHNISCHE DATEN

Änderungen der technischen Daten vorbehalten.
Die angegebenen Gewichts- und Abmessungsdaten sind circa Werte.

■ Allgemeine Daten

Stromversorgung:	~220 V, 50 Hz Wechselstrom
Leistungsaufnahme:	12 W
Abmessungen: (B \times H \times T)	31,5 \times 8,8 \times 31,5 cm 31,5 \times 39 \times 31,5 cm (Maximale Höhe bei vollständig geöffnetem Gehäuseoberteil)
Gewicht:	4,3 kg

■ Plattenteller

Typ:	Vollautomatischer Plattenspieler mit Quarz-Direktantrieb
Eigenschaften:	Auto-Start/Auto-Zuführung Rückführautomatik Stopautomatik Wiederholtes Abspiel Abspiel mit Direktmusikwahl Vorwärts- und Rückwärtssprungabspiel Vorwärts- und Rückwärtssuchspiel Autom.Plattengrößewahl Schallplattendetektion Direktantrieb Kollektorloser Gleichstrommotor
Antrieb:	Quarz-Steuerung QPL
Motor:	Aluminium-Druckguß
Antriebsregel-Methode:	Durchmesser 30 cm
Plattenteller:	
Plattenteller-Drehzahlen:	33-1/3 und 45 U./min. Automatische Drehzahlwahl (manuelle Wahl möglich)

Gleichlaufschwankungen:	0,012% WRMS* 0,025% WRMS (JIS C5521) $\pm 0,035\%$ Spitze (IEC 98A bewertet)
--------------------------------	---

*Gemessen anhand von Signalen vom eingebauten Frequenzgenerator des Motorteils.

Rumpeln:	-56 dB (IEC 98A unbewertet) -78 dB (IEC 98A bewertet)
-----------------	--

■ Tonarm

Typ:	Linearabstastungs-Tonarm mit Kardan-aufhängung mit 4-Punkt-Drehlager
Effektive Länge:	10,5 cm
Spurfehlwinkel:	Innerhalb $\pm 0,1^\circ$
Effektive Masse:	9 g (einschließlich Tonabnehmer)
Resonanzfrequenz:	12 Hz
Tonarm-Antriebsmotor:	Gleichstrommotor
Phonokabel-Kapazität:	150 pF

■ Tonabnehmer

Typ:	Stereo-Magnet-Tonabnehmer
Magnetkreis:	Ganzlamellenkern
Frequenzgang:	10 Hz bis 40 kHz 20 Hz bis 10 kHz ± 1 dB
Ausgangsspannung:	2,5 mV bei 1 kHz 5 cm/s. Null-zu-Spitze, lateral [7 mV bei 1 kHz 10 cm/s. Null- zu-Spitze, 45° (DIN 45 500)]
Kanaltrennung:	22 dB bei 1 kHz
Kanalabweichung:	Innerhalb 1,8 dB bei 1 kHz
Empfohlene Endimpedanz:	47 k Ω ~100 k Ω
Nachgiebigkeit (dynamisch):	12 $\times 10^{-6}$ cm/dyn bei 100 Hz
Auflagekraft-Einstellbereich:	1,25 $\pm 0,25$ g (12,5 $\pm 2,5$ mN)
Gewicht:	6 g (nur Tonabnehmer)
Ersatznadel:	EPS-30ES

CARACTERISTIQUES

Les spécifications sont susceptibles d'être modifiées sans préavis.
Le poids et les dimensions donnés sont approximatifs.

■ Généralités

Alimentation: Alternatif 220 V, 50 Hz
Consommation: 12 W
Dimensions: 31,5 × 8,8 × 31,5 cm
(L × H × P) 31,5 × 39 × 31,5 cm
(Hauteur maximum lorsque le dessus (couvercle protège-poussière) est ouvert.)
Poids: 4,3 kg

■ Platine de lecture

Type: Entraînement direct par quartz
Platine entièrement automatique
Caractéristiques: Démarrage automatique/Entrée automatique
Retour automatique
Arrêt automatique
Audition répétée
Audition sélectionnée musicale directe
Audition par saut vers l'avant et vers l'arrière
Audition de recherche vers l'avant et vers l'arrière
Sélection automatique du diamètre des disques
Détection de la présence d'un disque.

Système d'entraînement: Entraînement direct
Moteur: Moteur C.C. sans balai
Système de commande d'entraînement: Réglage d'accrochage de phase par quartz
Plateau de lecture: Aluminium moulé sous pression
Diamètre 30 cm
Vitesses de la platine: 33-1/3 et 45 t/p.m.
Sélecteur de vitesse automatique (Sélection manuelle possible)

Pleurage et scintillement: 0,012% de valeur efficace*
0,025% de valeur efficace (JIS C5521)
±0,035% de crête (IEC 98A Pondéré)
*Mesuré par l'obtention d'un signal provenant du générateur de fréquences incorporé de l'ensemble du moteur.
Ronflement: -56 dB (IEC 98A Non pondéré)
-78 dB (IEC 98A Pondéré)

■ Bras de lecture

Type: Bras de lecture d'alignement linéaire de type à suspension à la cardan à 4 pivots
Longueur effective: 10,5 cm
Angle d'erreur de piste: En deçà de ±0,1°
Masse réelle: 9 g (y compris la cellule pick-up)
Fréquence de résonance: 12 Hz
Moteur d'entraînement du bras de lecture: Moteur C.C.
Capacitance du câble phono: 150 pF

■ Cellule pick-up

Type: Cellule pick-up stéréo à aimant mobile
Circuit magnétique: Noyau entièrement feuilleté
Réponse en fréquence: 10 Hz à 40 kHz
20 Hz à 10 kHz ±1 dB
Tension de sortie: 2,5 mV à 1 kHz; 5 cm/s. zéro à vitesse latérale de crête (7 mV à 1 kHz; 10 cm/s. zéro à vitesse 45° de crête [DIN 45 500])
Séparation des canaux: 22 dB à 1 kHz
Equilibrage des canaux: En deçà de 1,8 dB à 1 kHz
Impédance de charge recommandée: 47 kΩ~100 kΩ
Elasticité (dynamique): 12×10⁻⁶cm/dyne à 100 Hz
Plage de la force verticale d'appui: 1,25±0,25 g (12,5±2,5 mN)
Poids: 6 g (cellule seule)
Remplacement de la pointe de lecture: EPS-30ES (Forme elliptique)

ESPECIFICACIONES

Las especificaciones quedan sujetas a cambios sin aviso previo.
Los pesos y las dimensiones indicados son aproximativos.

■ En general

Alimentación de corriente: ~ 220 V, 50 Hz
Consumo de corriente: 12 W
Dimensiones: 31,5 × 8,8 × 31,5 cm
(Ancho × Alto × Prof.) 31,5 × 39 × 31,5 cm
(Altura máxima cuando la tapa contra el polvo está abierta.)
Peso: 4,3 kg

■ Sección del plato giratorio

Tipo: Plato giratorio totalmente automático por accionamiento directo controlado por cuarzo.
Ventajas: Arranque/descenso automáticos
Retorno automático
Parada automática
Ejecución repetida
Ejecución con selección directa de la música
Ejecución saltando hacia adelante o hacia atrás
Ejecución con búsqueda hacia adelante o hacia atrás
Selección automática de tamaño
Detección de presencia de discos
Método de accionamiento: Accionamiento directo
Motor: Motor de corriente continua sin escobillas

Método de control de accionamiento: Control enclavado de fase de cuarzo
Platillo del plato giratorio: Aluminio fundido
30 cm de diámetro

Velocidades del plato giratorio: 33-1/3 y 45 rpm
Selección automática de la velocidad (También posibilidad de seleccionar a mano)
Ululaciones y trémolo: 0,012% WRMS*
0,025% WRMS (JIS C5521)
± 0,035% cresta (IEC 98A Ponderado)

* Medido obteniendo una señal proveniente del generador de frecuencias incorporado del conjunto del motor.

Ruido de rodadura: -56 dB (IEC 98A Non ponderado)
-78 dB (IEC 98A ponderado)

■ Sección del brazo sonoro

Tipo: Brazo sonoro de seguimiento lineal de tipo con equilibrio dinámico con suspensión cardánica de 4-pivotes
10,5 cm
Longitud efectiva:
Angulo de error de seguimiento: Inferior a 0,1° aproxim.
Masa efectiva: 9 g (incluyendo el cartucho)
Frecuencia de resonancia: 12 Hz
Motor de accionamiento del brazo sonoro: Motor de corriente continua
Capitancia del cable del fonógrafo: 150 pF

Sección del cartucho

Tipo: Cartucho estereofónico de imán móvil
Circuito magnético: Núcleo totalmente laminado
Respuesta de frecuencia: 10 Hz a 40 kHz
20 Hz a 10 kHz ± 1 dB
2,5 mV a 1 kHz
Voltaje de salida: Velocidad lateral de cero a cresta de 5 cm/s. (7 mV a 1 kHz. Velocidad de 45° de cero a cresta de 10 cm/s. [DIN 45 000])
22 dB a 1 kHz
Separación de canales: Inferior a 1,8 dB a 1 kHz
Equilibrio de canales:
Impedancia de carga recomendada: 47 kΩ a 100 kΩ
Elasticidad (dinámica): 12 × 10⁻⁶ cm/dina a 100 Hz
Radio de presión de la aguja: 1,25 ± 0,25 g (12,5 ± 2,5 mN)
Peso: 6 g (cartucho solamente)
Aguja de recambio: EPS-30ES

■ MESSUNGEN UND JUSTIERUNGEN ————— Deutsch

● Verwendete Geräte und Zustand des Gerätes

1. Oszilloskop
2. Gleichstrom-Voltmeter

3. Plate (SFTR007) für Justierung
4. Den Empfindlichkeits-Wahlschalter des optischen Sensors auf "M" stellen.

Schritt	Gegenstand	Vorbereitungen für die Justierung	Zu justierende Teile	Justiermethode
1	Startposition	1. Das Gehäuseoberteil öffnen und die Platte auflegen. 2. Den Ein/Aus-Schalter einschalten. 3. Den Startschalter drücken.	Absenkpositions-Justierschraube (Abb. 15)	1. Die Startposition-Justierschraube drehen. Falls er zwischen Musikstücken absenkt, die Schraube entgegen dem Uhrzeigersinn drehen.
2	Uhrfrequenz	1. Leistungsdraht mit Klemme an IC301, Stift 29 und Stift 1 der Betriebs-Platine anschließen. 2. Das Oszilloskop an IC301 Stift 18 anschließen.	VR301 (Abb. 16)	1. Den Ein/Aus-Schalter einschalten. 2. VR301 so justieren, daß der Zyklus der Ausgangswellenform 1,36 msec. \pm 0,07 msec. beträgt. (Abb. 17)
3	Sensorver-stärkung	1. Gleichstrom-Voltmeter an IC401, Stift 12 (+) und Stift 14 (–) anschließen. 2. Die Platte für Justierung mit Seite A auflegen.	VR401 (Abb. 16)	1. Den Ein/Aus-Schalter einschalten. 2. Der Tonarm ist in der Ruheposition. (Unbespielter Teil der Platte.) 3. VR401 so abgleichen, daß die Ausgangsspannung 8V \pm 0,4V verträgt.
4	Sensor-auflösung	1. Das Oszilloskop an IC401, Stift 9 (+) und Stift 14 (–) anschließen. 2. Die Platte für Justierung mit Seite A auflegen.	VR402 (Abb. 16)	1. Den Ein/Aus-Schalter einschalten. 2. Den F-Überspring-Schalter gedrückt halten, um den Tonarm zu bewegen. (Ausgangsleistung tritt auf zwischen den Musikstücken.) 3. VR402 so abgleichen, daß die maximale Ausgangsleistung zwischen den Musikstücken 3V \pm 0,3V beträgt. (Abb. 18)
5	Nadel-Absenkposition	1. Das Gehäuseoberteil öffnen und den Gehäuseschalter mit Klebband in der gedrückten Stellung arretieren. 2. Die Platte für Justierung mit Seite B auflegen. 3. Das Gehäuseoberteil schließen. 4. Das Gerät an den Verstärker anschließen. (Die Lautsprecher an die Lautsprecher-Anschlüsse anschließen.)	VR302 (Abb. 19)	1. Den Ein/Aus-Schalter einschalten. 2. Den F-Überspring-Schalter zweimal drücken und dann die Start-Taste drücken. 3. Nach beendetem Absenken den B-Überspring-Schalter nochmals drücken, zum Zwecke des Absenkens, wie bereits erwähnt. 4. Überprüfen, daß die Absenkposition bei "18 ~ 19" liegt. 5. VR302 so justieren, daß die Absenkposition bei "18 ~ 19" auf der Skala ist.
6	Tonarm-Spurfehlwinkel	1. Die Staubabdeckung entfernen. (Siehe "ANLEITUNG FÜR DIE DEMONTAGE".) 2. Das Gehäuseoberteil öffnen und den Gehäuseschalter mit Klebband in der gedrückten Stellung arretieren. 3. Das Gehäuseoberteil schließen. 4. Eine Platte auflegen.	Justierschraube (Abb. 19)	1. Den Ein/Aus-Schalter einschalten. 2. Den F-Überspring-Schalter gedrückt halten, um den Tonarm zu bewegen. 3. Die Justierschraube so weit drehen, daß die Tonarmmitte mit der V-Kerbe der Liftstange übereinstimmt.
7	Servo-Verstärkung und Offsetspannung	1. Die Staubabdeckung entfernen. (Siehe "ANLEITUNG FÜR DIE DEMONTAGE".) 2. Das Gehäuseoberteil öffnen und den Gehäuseschalter mit Klebband in der gedrückten Stellung arretieren. 3. Das Gleichstrom-Voltmeter an CN301, Stift 5 (+) und Stift 2 (–) anschließen. 4. Die Sensorabdeckung entfernen.	VR501 (Servo Verstärkung) Schraube (Offset-Spannung) (Abb. 20)	1. Den Ein/Aus-Schalter einschalten. 2. Den F-Überspring-Schalter gedrückt halten, um den Tonarm zu bewegen. 3. Das Gehäuseoberteil öffnen. 4. Den Tonarm ganz nach links bewegen. Dann VR501 so justieren, daß die Spannung 3,6V beträgt. (Servo-Verstärkung) 5. Den Tonarm zur Mitte hin stellen und überprüfen, daß die Ausgangsspannung 1,8V beträgt. 6. Falls die Spannung nicht 1,8V beträgt, ist die Schraube so zu justieren, daß die Ausgangsspannung 1,8V beträgt. (Offset-Spannung)

■ MESURAGES ET REGLAGES ————— Français

● Equipement utilisé et conditions de service de l'appareil


1. Oscilloscope
2. Voltmètre à C.C.
3. Disque (SFTR007) pour la mise au point
4. Régler le sélecteur de sensibilité de détecteur optique sur "M".

Etape	Article	Préparatifs pour la réglage	Portion du réglage	Méthode de mise au point
1	Position de démarrage	1. Ouvrir la boîte supérieure et installer un disque. 2. Mettre en circuit l'interrupteur d'alimentation. 3. Appuyer sur la touche "Start" (mise en marche).	Vis d'ajustement de la position descendante. (Fig. 15)	1. Tourner la vis de réglage du positionnement de démarrage. Si elle descend entre les plages, la tourner dans le sens inverse des aiguilles d'une montre.
2	Fréquences des impulsions de rythme	1. Raccorder le fil de jonction avec attache à la broche 1 et à la broche 29 de IC301 du circuit de fonctionnement. 2. Raccorder l'oscilloscope à la broche 18 de IC301.	VR301 (Fig. 16)	1. Mettre en circuit l'interrupteur d'alimentation. 2. Ajuster VR301 de telle sorte que le cycle de la forme d'onde de sortie soit de 1,36 msec. \pm 0,07 msec. (Fig. 17).
3	Gain du dispositif détecteur	1. Raccorder le voltmètre à C.C. à la broche 12 (+) et à la broche 14 (–) de IC401. 2. Installer le disque pour la mise au point avec le côté A vers le haut.	VR401 (Fig. 16)	1. Mettre en marche l'interrupteur d'alimentation. 2. Le bras de lecture est à la position de repos. (Zone vierge du disque.) 3. Ajuste VR401 de telle sorte que la tension de sortie soit de 8V \pm 0,4V.
4	Résolution du dispositif détecteur	1. Raccorder l'oscilloscope à la broche 9 (+) et à la broche 14 (–) de IC401. 2. Installer le disque pour la mise au point avec le côté A vers la haut.	VR402 (Fig. 16)	1. Mettre en circuit l'interrupteur d'alimentation. 2. Maintenir enfoncé le commutateur de saut F pour déplacer le bras de lecture. (La puissance de sortie est délivrée entre les plages.) 3. Ajuster VR402 de telle sorte que la puissance de crête entre les plages soit de 3V \pm 0,3V. (Fig. 18)
5	Position de pose/relevage de la pointe de lecture	1. Ouvrir le boîtier supérieur et maintenir appuyée la touche du boîtier avec une bande adhésive. 2. Installer le disque pour la mise au point avec le côté B vers le haut. 3. Refermer le boîtier supérieur. 4. Raccorder l'appareil à o'amplificateur. (Raccorder les haut-parleurs aux bornes des haut-parleurs.)	VR302 (Fig. 19)	1. Mettre en circuit l'interrupteur d'alimentation. 2. Appuyer deux fois sur le commutateur de saut F, puis appuyer sur le commutateur de mise en route. 3. Après l'achèvement de la pose/relevage, appuyer à nouveau sur le commutateur de saut B en vue de la pose, comme il a été mentionné auparavant. 4. S'assurer que la position descendante est au comptage de "18 ~ 19". 5. Régler VR302 de telle sorte que la position descendante soit au comptage de "18 ~ 19".
6	Angle de décalage du bras de lecture	1. Retirer le couvercle protège-poussière. (Se référer aux "INSTRUCTIONS POUR LE DÉMONTAGE".) 2. Ouvrir la boîte supérieure et maintenir appuyée la touche du boîtier avec une bande adhésive. 3. Refermer le boîtier supérieur. 4. Installer un disque.	Vis de réglage (Fig. 19)	1. Mettre en circuit l'interrupteur d'alimentation. 2. Maintenir enfoncé le commutateur de saut F pour déplacer le bras de lecture. 3. Tourner la vis de réglage de façon à ce que le centre de bras coincide avec la rainure en V de la tige d'élévation.
7	Amplification servo-mécanique et tension d'écart de réglage	1. Retirer le couvercle protège-poussière. (Se référer aux "INSTRUCTIONS POUR LE DÉMONTAGE".) 2. Ouvrir le boîtier supérieur et maintenir appuyée la touche du boîtier avec une bande adhésive. 3. Raccorder le voltmètre à C.C. à la broche 5 (+) et à la broche 2 (–) de CN301. 4. Retirer le couvercle du dispositif détecteur.	VR501 (Amplification servo-mécanique) Plaquette à Vis. (Tension de décalage) (Fig. 20)	1. Mettre en circuit l'interrupteur d'alimentation. 2. Maintenir enfoncé le commutateur de saut F pour déplacer le bras de lecture. 3. Ouvrir le boîtier supérieur. 4. Déplacer complètement le bras de lecture vers la gauche. Puis, ajuster VR501 de telle sorte que la tension soit de 3,6V. (Amplification servo-mécanique) 5. Régler le bras de lecture au centre et s'assurer que la tension de sortie soit de 1,8V. 6. Si la tension n'est pas de 1,8V, ajuster la vis de telle sorte que la tension de sortie soit de 1,8V. (Tension de décalage)

Ref. No.	Change of Part No.		Part Name & Description	Per Set (Pcs.)	Remarks
	SL-J2 [M]	SL-J2 / (K)			
CABINET and CHASSIS PARTS					
25	SFNNJ02M01	SFNNJ02S01 [E, EC]	Name Plate	1	
		SFNNJ02G01 [EK]	Name Plate	1	
		SFNNJ02X01 [XA, XM]	Name Plate	1	
		SFNNJ02L01 [XL]	Name Plate	1	
		SFNNJ02R01 [Other areas]	Name Plate	1	
TONEARM PARTS					
71	SFPABJ0204A	Deletion	-----	0	
72	Addition	EPC-P30S	Cartridge	1	
73	Addition	EPS-30ES	Stylus	1	
ACCESSORIES					
A1	SFNUJ02M01	SFNUJ02I01 [Ei]	Instruction Book	1	
		SFNUJ02G01 [EK]	Instruction Book	1	
		SFNUJ02R01 [EG]	Instruction Book	1	
		SFNUJ02F01 [EF]	Instruction Book	1	
		SFNUJ02X01 [XL, XA, XM]	Instruction Book	1	
		SFNUJ02S01 [Other areas]	Instruction Book	1	
A4	SFDAC05M01	SFDAC05G02 [EK]	AC Cord	1	⚠
		SFDAC05L01 [XL]	AC Cord	1	⚠
		SFDAC05X02 [XA, XM]	AC Cord	1	⚠
		SFDAC05E02 [Other areas]	AC Cord	1	⚠
A5	Addition	SFDK119118 [XA, XM] only	2 Pin Plug	1	⚠
PACKING PARTS					
P1	SFHPJ02M01	SFHPJ02C01 [EF] only	Carton Box, (Silver)	1	○
		SFHPJ02M01 [Other areas]	Carton Box, (Silver)	1	○
		SFHPJ02C21 [EF] only	Carton Box, (Black)	1	Ⓚ
		SFHPJ02M21 [Other areas]	Carton Box, (Black)	1	Ⓚ


EXPLODED VIEW

- Tonearm part

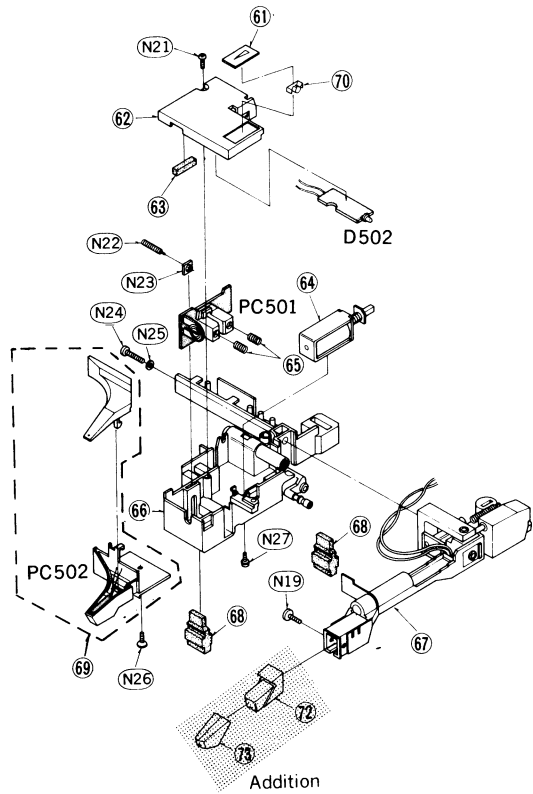


SCHEMATIC DIAGRAM


※ Product for continental Europe

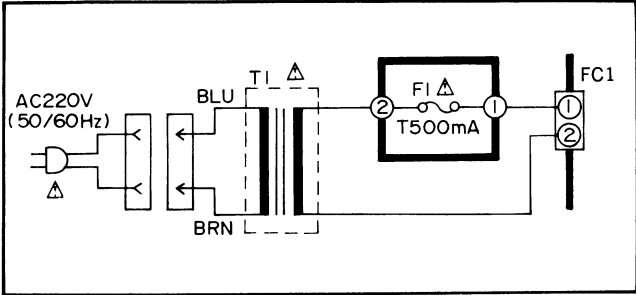

※ Product for Australia.

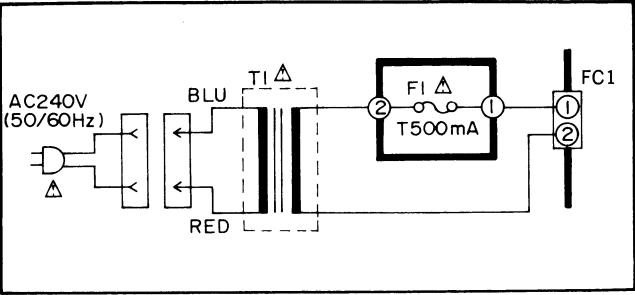


※ Product for United Kingdom, Southeast Asia, Oceania, Africa, Middle Near East and Central South America.

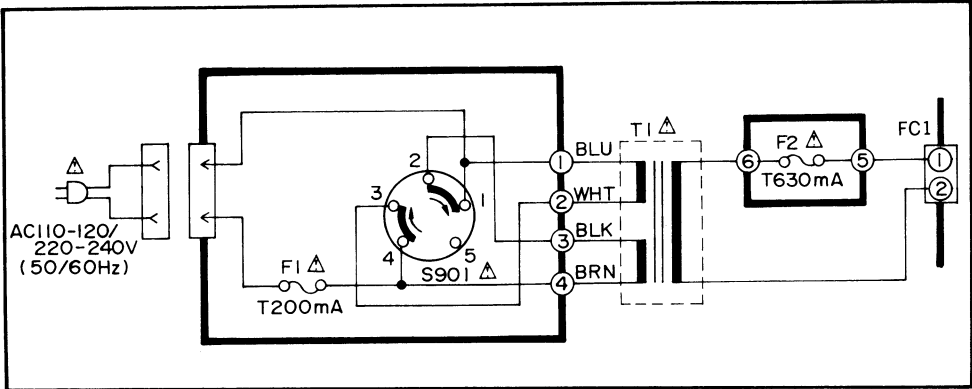


PRINTED CIRCUIT BOARD

- Power source circuit

※ Product for Continental Europe and Australia.

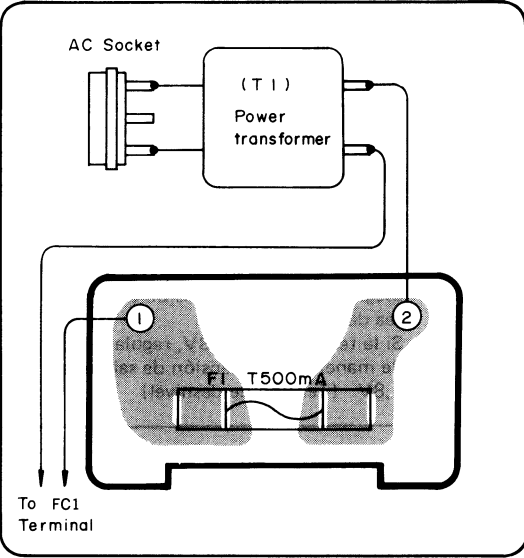

※ Product for United Kingdom, Southeast Asia, Oceania, Africa, Middle Near East and Central South America.

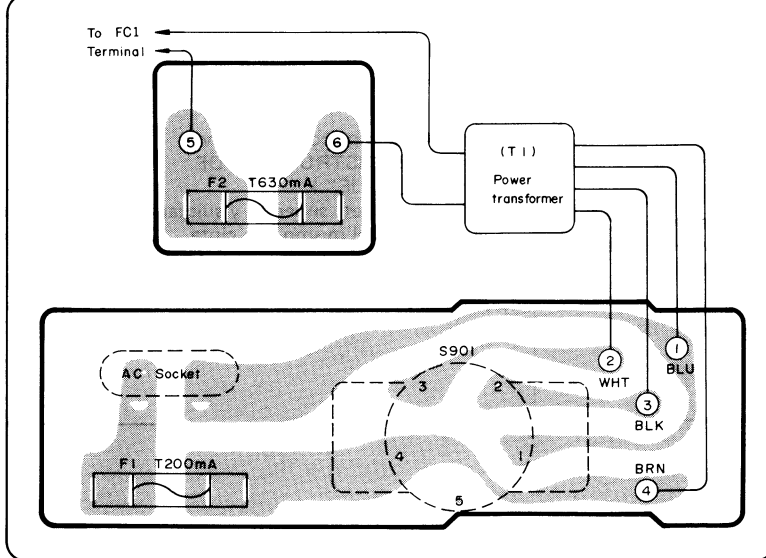

MEDICIONES Y AJUSTE

Español

Equipos usados y estado del aparato

1. Osciloscopio

2. Voltímetro de corriente continua
3. Disco (SFTR007) de ajuste






4. Poner el selector de sensibilidad del sensor óptico en "M".

Paso	Punto tratado	Preparativos para el ajuste	Porción a ajustar	Manera de hacer el ajuste
1	Posición de arranque	1. Abrir el gabine superior y colocar el disco. 2. Encender el interruptor de la corriente. 3. Empujar el interruptor de arranque ("Start").	Tornillo de regulación de la posición de descenso (Fig. 15)	1. Hacer girar el tornillo de regulación de la posición de descenso. Si se deposita en medio de una pieza, girar el tornillo hacia la izquierda.
2	Frecuencia del reloj	1. Conectar el hilo conductor con clip a 29 pernos y 1 perno de IC301 de tablero de circuitos de operación. 2. Conectar el osciloscopio al pasador 18 de IC301.	VR301 (Fig. 16)	1. Encender el interruptor de la corriente. 2. Regular VR301 de manera que el ciclo de forma de onda de salida sea 1,36 mseg. ± 0,07 mseg. (Fig. 17)
3	Ganancia del sensor	1. Conectar el voltímetro de CC a 12 pernos (+) y 14 pernos (—) de IC401. 2. Colocar el disco de ajuste con el lado A mirando hacia arriba.	VR401 (Fig. 16)	1. Encender el interruptor de la corriente. 2. El brazo sonoro está en la posición de descanso. (Area negra del disco.) 3. Regular VR401 de manera tel que la tensión de salida sea de 8V ± 0,4V.
4	Rasolución del sensor	1. Conectar el osciloscopio a 9 pernos (+) y 14 pernos (—) de IC401. 2. Colocar el disco de ajuste con el lado A mirando hacia arriba.	VR402 (Fig. 16)	1. Encender el interruptor de la corriente. 2. Mantener el interruptor de salto F oprimido para mover el brazo sonoro. (La salida se suministra entre las piezas.) 3. Regular VR402 de manera tal que la salida de cresta entre las piezas sea de 3V ± 0,3V. (Fig. 18)
5	Posición de descenso de aguja.	1. Abrir el gabinete superior y sujetar el interruptor del mismo con cinta. 2. Colocar el disco de ajuste con el lado B mirando hacia arriba. 3. Cerrar el gabinete superior. 4. Conectar el aparato al amplificador. (Conectar los altoparlantes a los bornes para conexión de los mismos.)	VR302 (Fig. 19)	1. Encender el interruptor de la corriente. 2. Apretar el interruptor de salto F dos veces y luego apretar el interruptor de arranque. 3. Después de completar el descenso, de nuevo apretar el interruptor de salto B con el fin de descenso como mencionado previamente. 4. Asegurarse de que la posición de descenso se encuentre el el número "18 ~ 19". 5. Regular VR302 de manera que la posición de descenso esté en conteo "18 ~ 19".
6	Angulo de descentramiento del brazo sonoro	1. Remover la tapa contra el polvo. (Referir a "INSTRUCCION DE DESMONTAJE".) 2. Abrir el gabinete superior y sujetar el interruptor del mismo con cinta. 3. Cerrar el gabinete superior. 4. Colocar el disco.	Tornillo de ajuste (Fig. 19)	1. Encender el interruptor de la corriente. 2. Mantener el interruptor de salto F oprimido para mover el brazo sonoro. 3. Girar el tornillo de ajuste de manera tal que el centro del brazo concuerde con la ranura en V de la barra de elevación.
7	Canancia del servomecanismo y tensión de desnivel	1. Remover la tapa contra el polvo. (Referir a "INSTRUCCION DE DESMONTAJE".) 2. Abrir el gabinete superior y sujetar el interruptor del mismo con cinta. 3. Conectar el voltímetro de CC a 5 pernos (+) y 2 pernos (—) de CN301. 4. Remover la cubierta de sensor.	VR501 (Ganancia del servomecanismo) Tornillo (Tensión de desnivel) (Fig. 20)	1. Encender el interruptor de la corriente. 2. Mantener el interruptor de salto F oprimido para mover el brazo sonoro. 3. Abrir el gabinete superior. 4. Mover completamente el brazo sonoro a la izquierda. Luego, regular VR501 de manera que la tensión sea 3,6V. (Ganancia del servomecanismo.) 5. Colocar el brazo sonoro en el centro y asegurarse de que la tension de salida sea de 1,8V. 6. Si la tensión no es 1,8V, regular el tornillo de manera que la tensión de salida sea 1,8V. (Tensión de desnivel)

CHANGES

REPLACEMENT PARTS LIST

Notes:

1. Mentioned in this parts list are only those changed in Model No. SL-J2 for destination [M] area.
2. Important safety notice:
Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
3. The "S" mark is service standard parts and may differ from production parts.
4. -marked parts are used for black only, while -marked parts are for silver type only.
5. Parts other than -and -marked are used for both black and silver types.
6. This replacement parts list contains the main parts changed from those of former types. For the detailed replacement parts list, refer to pages 11, 12.

Areas


- * [E] is available in Switzerland and Scandinavia.
- * [EK] is available in United Kingdom.
- * [XL] is available in Australia.
- * [EG] is available in F.R. Germany.
- * [EB] is available in Belgium.
- * [EH] is available in Holland.
- * [EF] is available in France.
- * [Ei] is available in Italy.
- * [EC] is available in Czechoslovakia.
- * [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- * [XM] is available in Central South America.

Black type model No. : SL-J2 (K)

Ref. No.	Change of Part No.		Part Name & Description	Per Set (Pcs.)	Remarks
	SL-J2 [M]	SL-J2 / (K)			
SWITCH					
S901	Addition	SFDSHXW225—2 [EK, XA and XM areas]	Voltage selector	1	⚠
PHOTO INTERRUPTOR					
PC502	SFPABJ0204A	SFPABJ0205R	Blank Groove Sensor Ass'y	1	
POWER TRANSFORMER					
T1	SLT48DTL3A	SLT57DT7E [EK, XA and XM areas]	Power Source	1	⚠
		SLT48DTE13E [XL]	Power Source	1	⚠
		SLT48DT10E [Other areas]	Power Source	1	⚠
FUSES					
F1	Addition	XBA2C02T1B [EK, XA and XM areas]	250V, T200mA	1	⚠
		XBA2C05T1B [Other areas]	250V, T500mA	1	⚠
F2	Addition	XBA2C06T1B [EK, XA and XM areas]	250V, T630mA	1	⚠
CABINET and CHASSIS PARTS					
1	SFADJ02M01E	SFADJ02M01E	Dust Cover (Silver)	1	○
		SFADJ02M21E	Dust Cover (Black)	1	Ⓚ
2	SFUMQ06N08	SFUMQ06N08	Latch, Dust Cover (Silver)	2	○
		SFUMQ06N22	Latch, Dust Cover (Black)	2	Ⓚ
3	SFUMD04N07	SFUMD04N07	Latch, Dust Cover (Silver)	2	○
		SFUMC02N14	Latch, Dust Cover (Black)	2	Ⓚ
4	SFGZQ06N01	SFGZQ06N01	Rubber, Latch (Silver)	2	○
		SFGZC02N01	Rubber, Latch (Black)	2	Ⓚ
15	SFKKJ02N01	SFKKJ02S01	Ornament Plate (Silver)	1	○
		SFKKJ02S21	Ornament Plate (Black)	1	Ⓚ
16	SFUMJ02N01	SFUMJ02N01	Front Panel (Silver)	1	○
		SFUMJ02N21	Front Panel (Black)	1	Ⓚ
18	SFACJ02N01	SFACJ02N01	Cabinet (Silver)	1	○
		SFACJ02N21	Cabinet (Black)	1	Ⓚ
22	SFGCQ06N02	SFGCQ06X01 [EK, XA and XM areas]	Cushion Rubber, Power Transformer	2	
		SFGCQ06N02 [Other areas]	Cushion Rubber, Power Transformer	2	
23	SFDJHSC0491	SFDJHSC0491 [XL]	AC Socket	1	⚠
		SFDJHSC04912 [XA, XM]	AC Socket	1	⚠
		SFDJHSC0516 [Other areas]	AC Socket	1	⚠

REPLACEMENT PARTS LIST

Notes:

- Part numbers are indicated on most mechanical parts.
Please use this part number for parts orders.
- Important safety notice:
Components identified by  mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.
- Bracketed indications in Ref. No. columns specify the area.
Parts without these indications can be used for all areas.
- The "S" mark is service standard parts and may differ from production parts.
- The parenthesized numbers in the columns of description stand for the quantity per set.
- (K)-marked parts are used for black only, while (O)-marked parts are for silver type only.
- Parts other than (K)- and (O)-marked are used for both black and silver types.

Areas

- * [E] is available in Switzerland and Scandinavia.
- * [EK] is available in United Kingdom.
- * [XL] is available in Australia.
- * [EG] is available in F.R. Germany.
- * [EB] is available in Belgium.
- * [EH] is available in Holland.
- * [EF] is available in France.
- * [Ei] is available in Italy.
- * [EC] is available in Czechoslovakia.
- * [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- * [XM] is available in Central South America.

Black type model No. : SL-J2 /(K)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
INTEGRATED CIRCUITS			D501	MA162A	Switching	HALL ELEMENTS		
IC1	AN7812	Regulator,12V	D502	SVDEBR3432S	Tonearm Position Indicator	H101,102	0H-002	Turntable Position Det.
IC101	AN6638	Turntable Drive	D701	MA162A	Switching	PHOTO INTERRUPTERS		
IC201	AN6683	Turntable Control	SWITCHES			PC501	0N1186	Offset Angle Sensor
IC301	MN1420FPL	Micro Computer	S1	SFDSC02N02	Power	PC502	SFPABJ0205R	Blank Groove Sensor
IC302	AN6914	Comparator	S301~306	EVQQS405K	Stop,Start,Skip-Search, Cueing & Repeat	PC601	0N1161	Tonearm Position Sensor
IC401	AN6690	Arm Motor Drive & Blank Groove Detection	S307	SFDSC05N01	Reset	POWER TRANSFORMER		
TRANSISTORS			S308,309	SFDSHSW0699	Size Selector & Speed Selector	T1[EK,XA,XM]	SLT57DT7E	Power Source
Q1	2SC1383	Regulator,5V	S401	SFDSHSW0699	Sensor Gain Selector	T1[XL]	SLT48DTE13E	Power Source
Q301	2SD636	LED Drive	S601	SFDSC02N03	Rest	T1[other areas]	SLT48DT10E	Power Source
Q302	2SD892	Cueing Control	S901	SFDSHXW225-2	Voltage Selector	FUSE		
Q303,304	2SD636	Speed Selector & Synchro Rec Drive	VARIABLE RESISTORS			F1[EK,XA,XM]	XBA2C02T1B	250V,T200mA
Q305~307	2SB641	Switching	VR301	EVN61AA00B54	Clock Frequency Adj,50KΩ/B	F1[other areas]	XBA2C05T1B	250V,T500mA
Q308	2SD636	Relay Drive	VR302	EVJE1AF20B54	Stylus Cue-down Position Adj,50KΩ/B	F2[EK,XA,XM]	XBA2C06T1B	250V,T630mA
Q309,310	2SB641	Shaping	VR401	EVN61AA00B55	Sensor Gain Adj,500KΩ/B	COMPONENT COMBINATION		
Q311	2SD636	LED Drive	VR402	EVN61AA00B25	Sensor Resolution Adj., 200KΩ/B	RX301	EXBP87681J	680Ω×7
Q312	2SB641	Switching	VR501	EVNM0AA00B14	Servo Gain Adj.,10KΩ/B			
DIODES			RELAY					
D1	SVDS1RBA20Z	Rectifier	RL701	SFDYQ11N02	Muting Relay			
D5	MA4056	Zener,5.6V	RL701	SFDYG5A237P	Muting Relay			
D301~306	MA165	Switching	CRYSTAL					
D307	SVDZJ02N02	Repeat Indicator	X201	SVQSH41TR	4.193MHz			
D308	MA4075	Zener,7.5V						
D309	SVDZJ02N03	Cue-down Indicator						
D310	SVDZJ02N02	Cue-Up Indicator						
D311~317	MA165	Switching						
D311B	LN513RA	Music Select Indicator						
D401	MA4068	Zener,6.8V						

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
CABINET AND CHASSIS PARTS			8	SFTEQ05N01	Turntable Platter (1)	22[EK,EX,XM]	SFGCQ06X01	Cushion Rubber,Power Transformer (2)
1	SFADJ02M01E	Dust Cover Ass'y (Silver) (1)	9	SFTMC07-01E	Rotate Magnet (1)	22[other areas]	SFGCQ06N02	Cushion Rubber, Power Transformer (2)
1	SFADJ02M21E	Dust Cover Ass'y (Black) (1)	10	SFAUJ02N01	Bottom Board (1)	23[XL]	SFDJHSC0491	AC Socket (1)
1-1	SFKBJ02M01	Badge,Dust Cover (1)	11	SFOCC05N01	Spring,Insulator (4)	23[XA,XM]	SFDJHSC04912	AC Socket (1)
1-2	SFGZJ02N01	Cushion Rubber, Dust Cover (2)	12	SFGAC05N02	Insulator (4)	23[other areas]	SFDJHSC0516	AC Socket (1)
2	SFUMQ06N08	Lutch,Dust Cover (Silver) (2)	13	SFUMJ02N02	Rod,Power Switch (1)	24	SFATQ06N01E	Hinge (2)
2	SFUMQ06N22	Lutch,Dust Cover (Black) (2)	14	SFUMJ02N03	Filter,Front Panel (1)	25[E,EC]	SFNNJ02S01	Name Plate (1)
3	SFUMD04N07	Lutch,Dust Cover (Silver) (2)	15	SFKKJ02S01	Ornament Plate (Silver) (1)	25[EK]	SFNNJ02G01	Name Plate (1)
3	SFUMC02N14	Lutch,Dust Cover (Black) (2)	15	SFKKJ02S21	Ornament Plate (Black) (1)	25[XA,XM]	SFNNJ02X01	Name Plate (1)
4	SFGZQ06N01	Rubber,Dust Cover (Silver) (2)	16	SFUMJ02N01	Front Panel(Silver) (1)	25[XL]	SFNNJ02L01	Name Plate (1)
4	SFGZC02N01	Rubber,Dust Cover (Black) (2)	16	SFUMJ02N21	Front Panel(Black) (1)	25[other areas]	SFNNJ02R01	Name Plate (1)
5	SFTGQ06N01	Turntable Mat (1)	17	SFKTC06N04	Button,Power Switch (1)	26	SFGKQ06N01	Rubber Cap (1)
6	SFWEC06N01	Adaptor,45r.p.m (1)	18	SFACJ02N01	Cabinet(Silver) (1)	27	SFUML11R03	Wheel,Tonearm Drive (1)
7	SFQAC06N01	Spring,45r.p.m Adaptor (1)	18	SFACJ02N21	Cabinet(Black) (1)	28	SFUZC05N02E	Rope Ass'y, Tonearm Drive (1)
			19	SFKTJ02N01	Button,Operation (1)	29	SFUMV05N23	Cap,Pulley (1)
			20	SFKTJ02N02	Knob,Selectors (3)	30	SFUMC05N22	Pulley (1)
			21	SFDJC01N01	Jack,Synchro Rec (1)	31	SFGB010-01	Belt,Tonearm Drive Motor (1)

Ref. No	Part No.	Description
32	SFMHJ02N01E	Motor Ass'y, (1) Tonearm Drive
33	SFUMQ06N06A	Worm Gear Ass'y (1)
34	SFUZC02N01	Rod, Rest Switch (1)
35	SFUMC02N05	Lever, Rest Switch (1)
36	SFQHQ34N22	Spring, Rest (1) Switch Lever
37	SFUMC02N06	Base, Rest Switch (1)
38	SFUMQ06N09	Holder, Rest Switch (1)
39	SFUPBL3N11E	Base, Tonearm Drive (1) Motor
40	SFUMC02N10	Rope Guide (1)
41	SFQA913-01	Spring, Adjustment Screw (1)
42	SFUMQ06N07	Clamper, Guide Rail (1)
43	SFGCQ06N01	Cushion Rubber, (1) Guide Rail
44	SFXJQ06N01	Guide Rail, Tonearm (1)
45	SFGCC05N05	Cushion Rubber, (1) Guide Rail
46	SFUMC02N12	Clamper, Lead Wires (1)
47	SFGCQ06N04	Cushion Rubber, (1) Dust Cover
48	SFGZBL3N02	Spacer (1)
49	SFUMC05N15	Holder, Reset Switch (1)
50	SFQPC05N01	Spring, Reset Switch (1)
52	SFKTQ06N02	Knob, Cueing Down (1) Position Control
53	SFDJJ02N04E	Jack, Phono Output (1)
54	SFUKQ06N02E	Base Ass'y, Tonearm (1)
55	SFMGQ34N01	Cover, Stator Coil (1)
56	SFMZC06N01R	Stator Frame Ass'y (1)
ONEARM PARTS		
61	SFPAK0Q601	Indicator Plate (1)
62	SFPC0Q601	Indicator Cover (1)
63	SFPGM0Q601	Rubber (1)
64	SFDZC05N01E	Solenoid Ass'y (1)
65	SFPSP00302	Spring, Adjustment (1)

Ref. No	Part No	Description
66	SFPKD00301R	Base, Tonearm (1)
67	SFPAMJ0201A	Tonearm Ass'y (1)
68	SFPGML1101	Cushion Rubber (2)
69	SFPABJ0205R	Blank Groove Sensor (1) A'ssy (PC502)
70	SFPCS00502	Light Concentrator (1)
72	EPC-P30S	★Cartridge (1)
73	EPS-30ES	★Stylus (1)
SCREWS, WASHERS AND NUT		
N1	XTV3+8BFN	Screw, $\pm 3 \times 8$ (12)
N2	XTV3+6BFZ	Screw, $\pm 3 \times 6$ (6)
N3	XSN3+5S	Screw, $\pm 3 \times 5$ (3)
N4	XTW3+14QFYR	Screw, $\pm 3 \times 14$ (4)
N5	XTN3+6B	Screw, $\pm 3 \times 6$ (1)
N6	XTWS3+14TFZ	Screw, $\pm 3 \times 14$ (2)
N7	XTN16+10G	Screw, $\pm 1.6 \times 10$ (1)
N9	XTV3+20J	Screw, $\pm 3 \times 20$ (1)
N10	SFXGQ06N01	Screw (1)
N11	XSN3+30S	Screw, $\pm 3 \times 30$ (1)
N12	XWE3D10	Washer, $\phi 3$ (1)
N13	XWE3A8BW	Washer, $\phi 3$ (2)
N14	CSTW3	Washer (1)
N15	XWC3B	Washer, $\phi 3$ (1)
N16	XWC26B	Washer, $\phi 2.6$ (1)
N17	XNC3HS	Nut, $\phi 3$ (1)
N18	SFXWC06N02	Washer (1)
N19	SFPEV0Q601	Screw, Cartridge (1)
N20	XTV3+6BFN	Screw, $\pm 3 \times 6$ (6)
N21	XTN23+6JFZ	Screw, $\pm 2.3 \times 6$ (1)
N22	SFPTN00301	Screw, Offset Adj. (1)
N23	SFXN623-1	Nut (1)
N24	XSN3+12S	Screw, $\pm 3 \times 12$ (1)
N25	XWA3B	Washer, $\phi 3$ (1)
N26	XTS26+6JFZ	Screw, $\pm 2.6 \times 6$ (1)
N27	XYN2+C4FZ	Screw, $\pm 2 \times 4$ (1)
N28	XTN2+8B	Screw, $\pm 2 \times 8$ (1)
ACCESSORIES		
A1(EI)	SFNUJ02I01	Insturction Book (1)


Ref. No.	Part No.	Description
A1(EK)	SFNUJ02G01	Insturction Book (1)
A1(EG)	SFNUJ02R01	Insturction Book (1)
A1(EF)	SFNUJ02F01	Insturction Book (1)
A1(XL, XA, XM)	SFNUJ02X01	Insturction Book (1)
A1[other] [areas]	SFNUJ02S01	Insturction Book (1)
A2	SFDHC05N01	Phono Output Cord (1)
A3	SFDLJ02N01	Ground Wire (1)
A4(EK) \triangle	SFDAC05G02	AC Cord (1)
A4(XL) \triangle	SFDAC05L01	AC Cord (1)
A4(XA, XM) \triangle	SFDAC05X02	AC Cord (1)
A4[other] [areas]	SFDAC05E02	AC Cord (1)
A5(XA, XM) only \triangle	SFDKI19118	2Pin Plug (1)
PACKING PARTS		
P1(EF) \bigcirc	SFHPJ02C01	Carton Box (Silver) (1)
P1[other] \bigcirc [areas]	SFHPJ02M01	Carton Box (Silver) (1)
P1(EF) \otimes	SFHPJ02C21	Carton Box (Black) (1)
P1[other] \otimes [areas]	SFHPJ02M21	Carton Box (Black) (1)
P2	SFHHJ02N01	Pad, Front (1)
P3	SFHHJ02N02	Pad, Rear (1)
P4	SFHKC05N01	Clamper, Turntable Platter (2)
P5	SFHKQ06N01	Spacer, Tonearm (1)
P6	SFHSC06N01	Spcer, Dust Cover (1)
P7	SFYH45 \times 60	Polyethylene Bag, Unit (1)
P8	SFHDN05M01	Sheet (1)
P9	SFYF33B35	Polyethylene Bag, Turntable Mat (1)
P10	SFHDD04N01	Pad, Turntable Mat (1)
P11	SFYH17 \times 16	Polyethylene Bag, Accessories (1)

Service Manual

Quartz Direct Drive Fully Automatic Turntable System

SL-J2

[M], [MC]

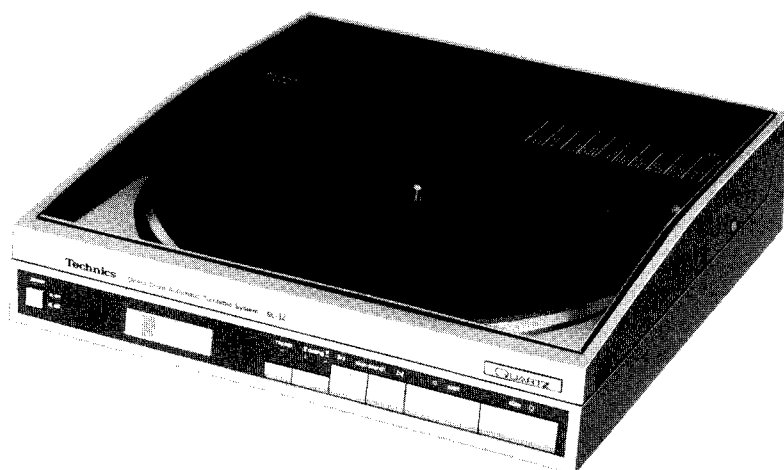

is the standard mark for the "P-mount" plug-in-connector system. Products carrying this mark are inter-changeable and compatible with each other.

Areas

- * [M] is available in U.S.A.
- * [MC] is available in Canada.

* The cartridge shown here is an option.

Specifications

Specifications are subject to change without notice further improvement.
Weight and dimensions shown are approximate.

■ General

Power supply: 120 V AC, 60 Hz
Power consumption: 10 W
Dimensions: 31.5 × 8.8 × 31.5 cm
 (12-1/2" × 3-1/2" × 12-1/2")
 (Maximum height when dust cover is open.)
Weight: 39 cm (15-23/64")
 4.3 kg (9.5lb.)

■ Turntable section

Type: Quartz direct drive
 Fully automatic turntable
Features: Auto start/Auto lead-in
 Auto return
 Auto stop
 Repeat play
 Direct music select play
 Forward and backward skip play
 Forward and backward search play
 Auto size select
 Record presence detection
Drive method: Direct drive
Motor: Brushless DC motor
Drive control method: Quartz-phase-locked control

Turntable platter: Aluminum die-cast
 Diameter 30 cm (12")
Turntable speeds: 33-1/3 rpm and 45 rpm
 Auto speed select
 (Manual selection possible)
Wow and flutter: 0.012% WRMS*
 0.025% WRMS (JIS C5521)
 ±0.035% peak
 (IEC 98A Weighted)

*Measured by obtaining signal from built-in frequency generator of motor assembly.

Rumble: -56 dB (IEC 98A Unweighted)
 -78 dB (IEC 98A Weighted)

■ Tonearm section

Type: Linear tracking tonearm
 4-pivot gimbal suspension
Effective length: 10.5 cm (4-1/8")
Tracking error angle: Within ±0.1°
Effective mass: 9 g (including cartridge)
Resonance frequency: 12 Hz
Tonearm drive motor: DC motor
Phono cable capacitance: 150 pF

Technics

Matsushita Engineering and
 Service Company
 50 Meadowland Parkway,
 Secaucus, New Jersey 07094

Panasonic Hawaii Inc.
 91-238 Kauh St. Ewa Beach
 P.O. Box 774
 Honolulu, Hawaii 96808-0774

Matsushita Electric
 of Canada Limited
 5770 Ambler Drive, Mississauga,
 Ontario, L4W 2T3

Panasonic Sales Company,
 Division of Matsushita Electric
 of Puerto Rico, Inc.
 Ave. 65 De Infanteria, KM 9.7
 Victoria Industrial Park
 Carolina, Puerto Rico 00630

■ CONTENTS

	Page		Page
SAFETY PRECAUTION	2	REPLACEMENT PARTS LIST	14, 15
LOCATION OF CONTROLS	3	EXPLODED VIEW	15 ~ 17
DISASSEMBLY INSTRUCTIONS	4 ~ 7	CIRCUIT BOARDS AND WIRING	
MEASUREMENTS AND ADJUSTMENT	8, 9	CONNECTION DIAGRAM	18 ~ 20
TROUBLE SHOOTING	10 ~ 12	SCHEMATIC DIAGRAM	21 ~ 24
HOW TO SET THE TONEARM DRIVE ROPE	13	BLOCK DIAGRAM	25 ~ 27
RESISTORS AND CAPACITORS	13, 14	PACKING	28


■ SAFETY PRECAUTION

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.

● INSULATION RESISTANCE TEST


1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
2. Turn on the power switch.
3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between $3M\Omega$ and $5.2M\Omega$ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

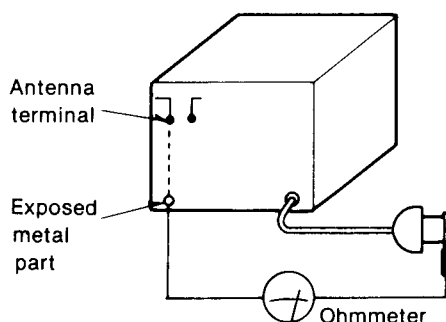

(Fig. A)

Resistance = $3M\Omega$ — $5.2M\Omega$

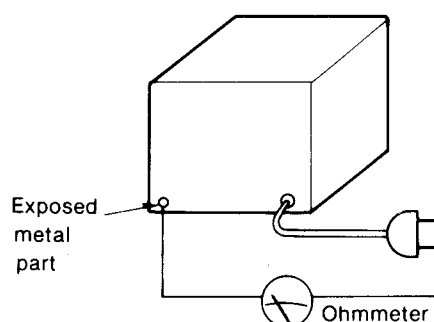


(Fig. B)

Resistance = Approx ∞

4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.

■ LOCATION OF CONTROLS

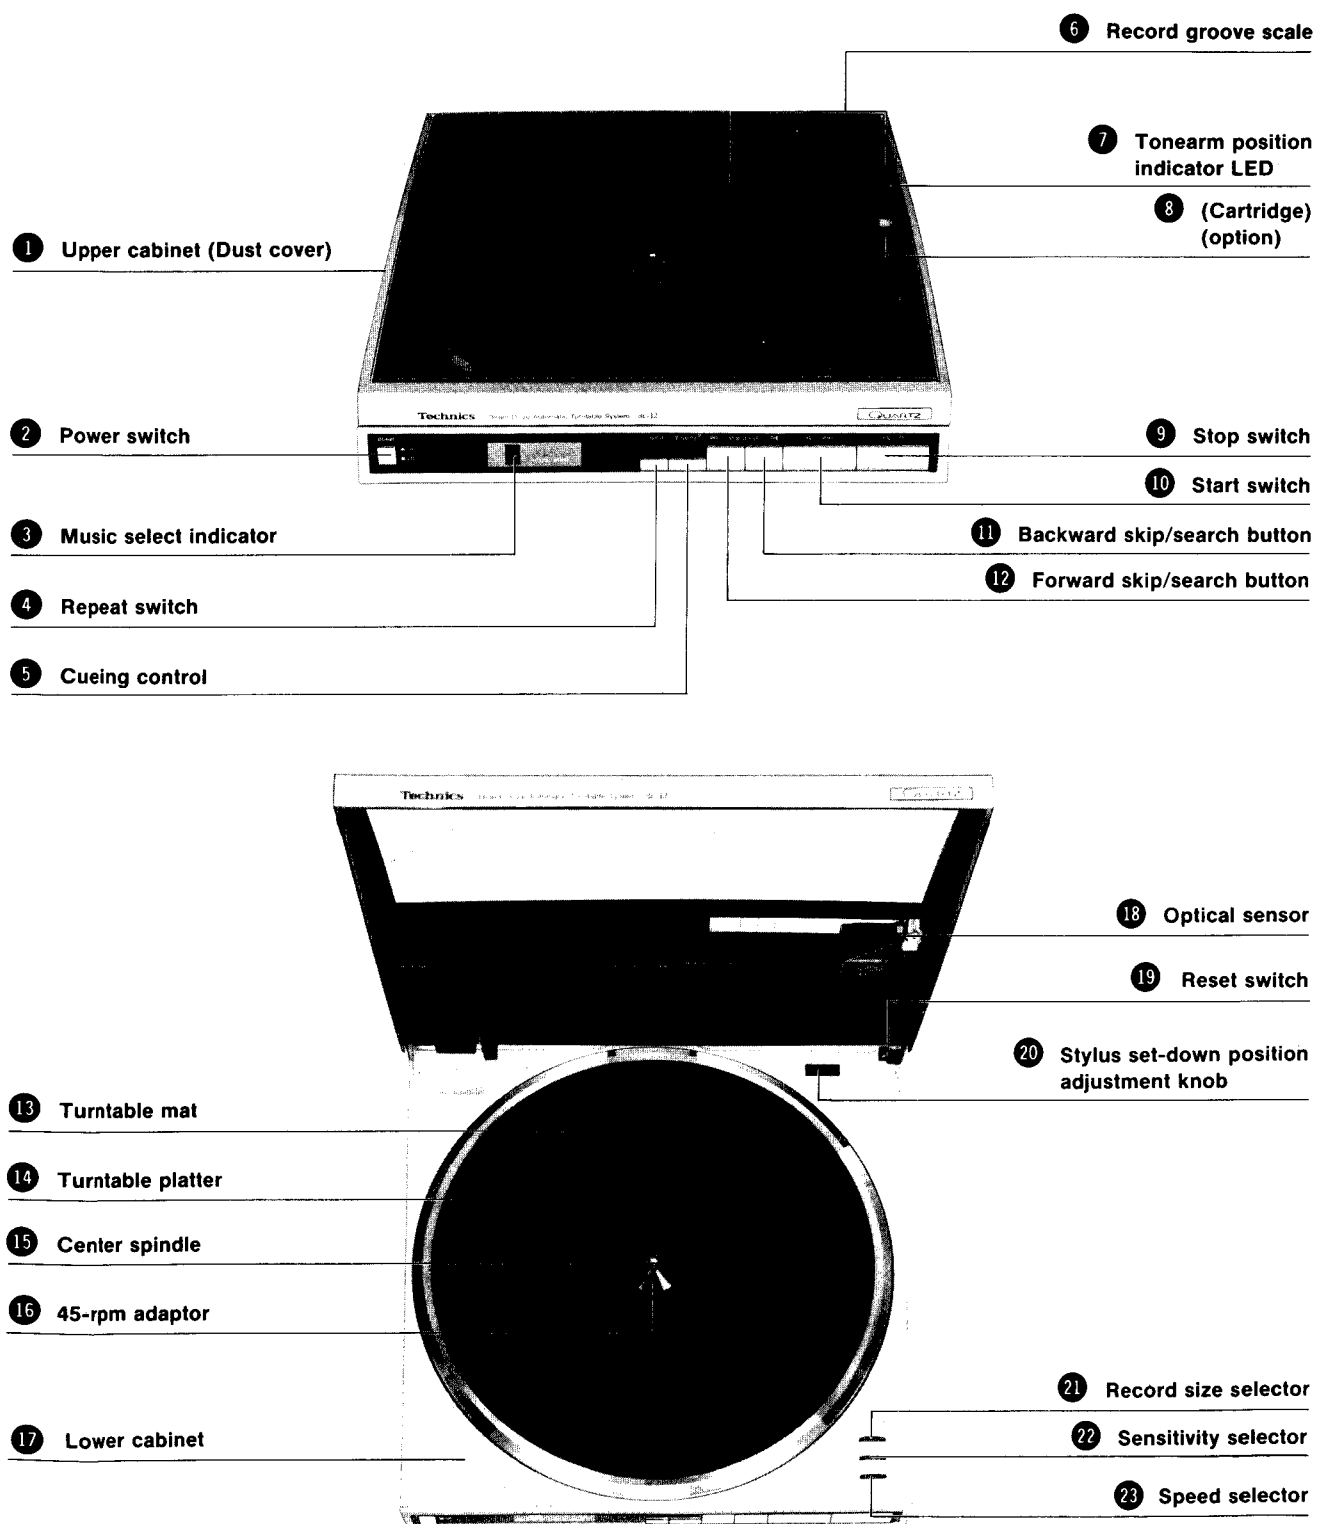

DISASSEMBLY INSTRUCTIONS

How to remove the cartridge

1. Open the upper cabinet.
2. Down the tonearm by finger in order to make cueing down position.
3. Remove the cartridge setscrew (Fig. 1: ❶), and pull out the cartridge.

Note: When attaching the cartridge again, match the tonearm connector with the cartridge pins, then completely insert it and tighten the screw.

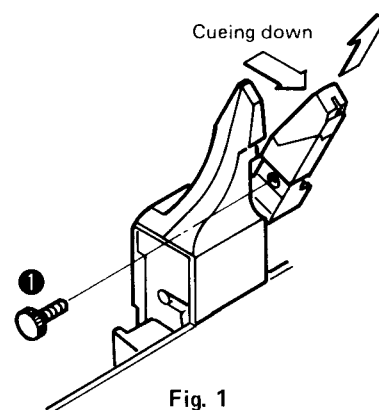


Fig. 1

How to remove the turntable platter

1. Open the upper cabinet.
2. Remove the turntable mat, and lift the turntable platter. (Fig. 2)

Note:

- (1) When removing the turntable platter, it is not necessary to remove the 45 r.p.m. adaptor.
- (2) The turntable platter is tight fitted on to the center spindle. When removing the turntable platter, take care not to give damage to the upper cabinet, arm motor cover and tonearm cover.

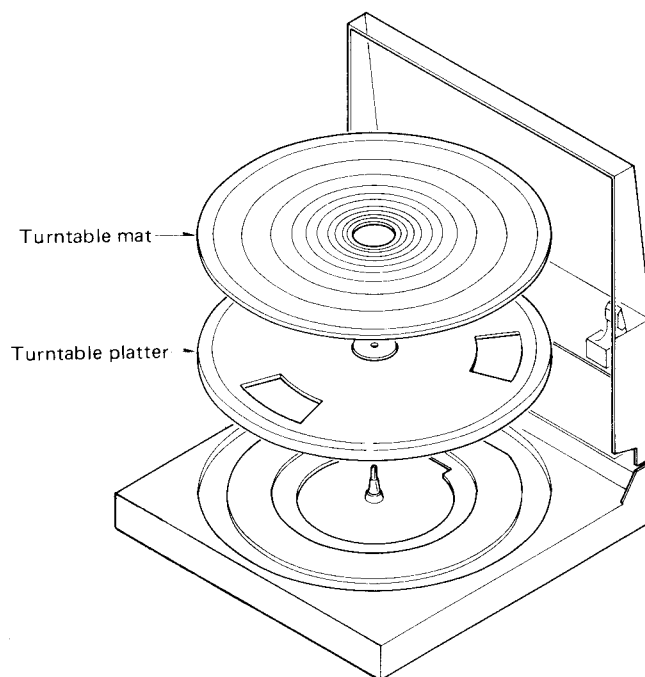


Fig. 2

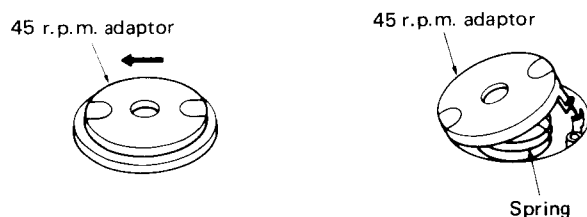


Fig. 3

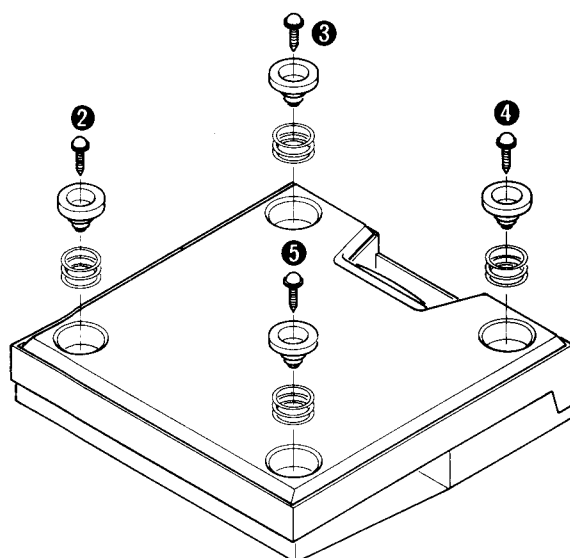


Fig. 4

How to remove the 45 r.p.m. adaptor (Fig. 3)

1. Remove the turntable platter. (Refer to "How to remove the turntable platter".)
2. Turn the 45 r.p.m. adaptor counter clockwise to raise it from the turntable platter surface.
3. Push the claw by the blade screwdriver in the direction of the arrow, then remove the 45 r.p.m. adaptor.

Note: When removing the 45 r.p.m. adaptor, remove the turntable platter, otherwise the 45 r.p.m. adaptor claws will be broken.

How to remove the bottom board

1. Remove the turntable platter. (Refer to "How to remove the turntable platter".)
2. Close the upper cabinet and turn over the unit on a soft cloth taking care not to damage the upper cabinet.
3. Remove the 4 bottom board setscrews. (Fig. 4: ❷ ~ ❺).

● How to remove the main circuit board

1. Remove the bottom board. (Refer to "How to remove the bottom board.")
2. Remove the select switch holder setscrew (Fig. 5 : ⑥) and the select switch holder. (Fig. 5)
3. Remove the 4 main circuit board setscrews (Fig. 6 : ⑦ ~ ⑩)
4. Pull out the power switch rod from the power switch in the direction of the arrow. Then, lift the main circuit board in the direction of the arrow.

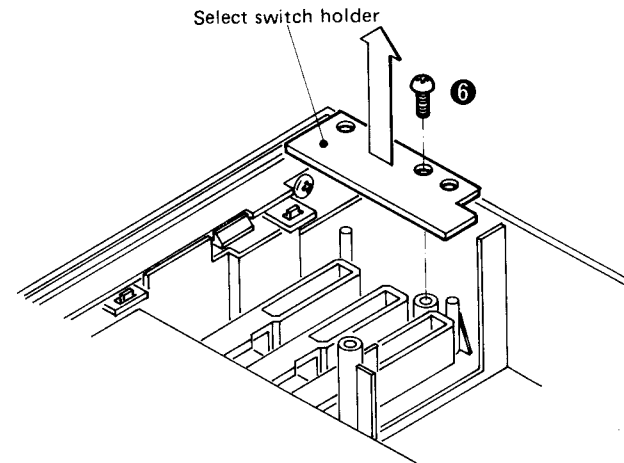


Fig. 5

● How to remove the operation button

1. Remove the main circuit board. (Refer to "How to remove the main circuit board.")
2. Remove the 2 connectors (Fig. 6 : CN302 and CN304), and then, lift the front panel. (Fig. 6)
3. Remove the 3 operation circuit board setscrews (Fig. 7 : ⑪ ~ ⑬).
4. Release the 5 claws, then the operation circuit board can be removed. (Fig. 7)
5. Release the 4 claws and gently pull the operation button. (Fig. 7)

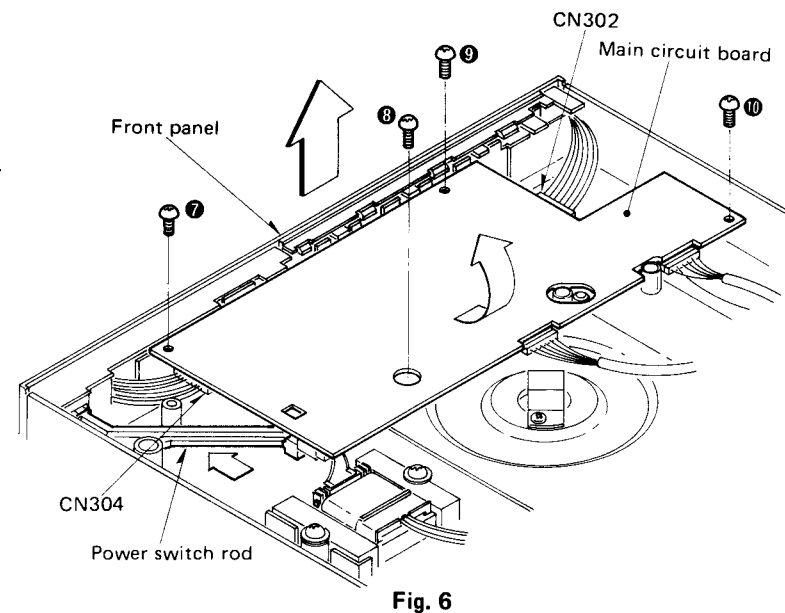


Fig. 6

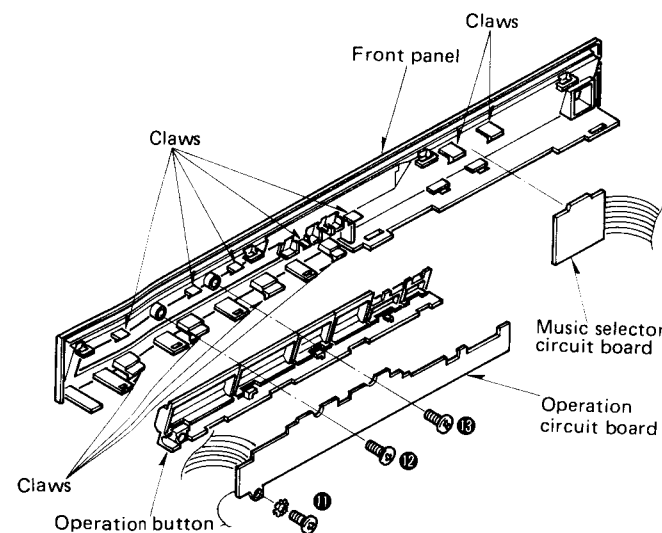


Fig. 7

● How to remove the stator frame and drive circuit board

1. Remove the main circuit board. (Refer to "How to remove the main circuit board.")
2. Remove the 3 stator frame setscrews (Fig. 8: ⑮ ~ ⑰) and the 2 drive circuit board setscrews (Fig. 8: ⑱, ⑳).
3. Cut off the stopper by nippers and remove the 4 setscrews (Fig. 9: ㉑ ~ ㉔) to separate the stator frame and drive circuit board.

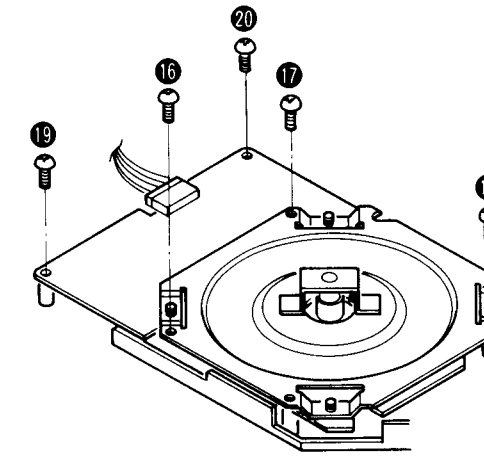


Fig. 8

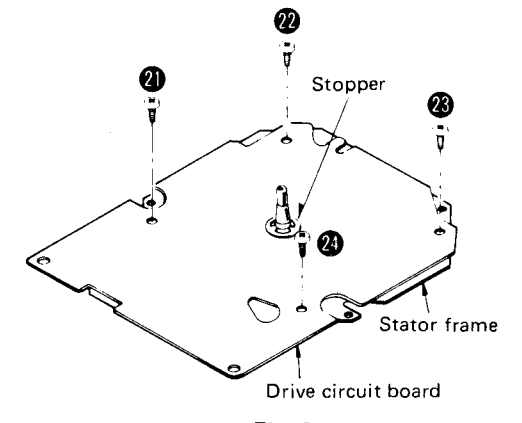


Fig. 9

● How to remove the reset switch

1. Remove the bottom board. (Refer to "How to remove the bottom board")
2. Remove the switch holder setscrew (Fig. 10: ㉕).
3. Release the 2 claws of switch holder and remove the reset switch circuit board.
4. Unsolder the 2 switch terminals, then the reset switch can be removed.

Note: When replacing the reset switch, be sure to open the upper cabinet.

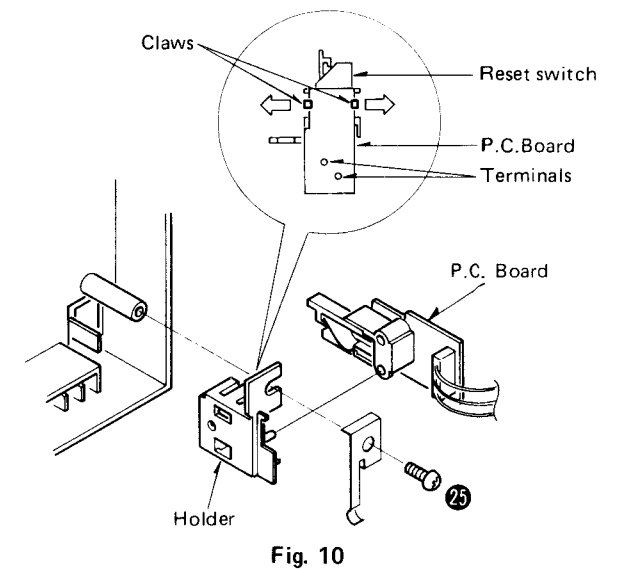


Fig. 10

● How to remove the Hall element

1. Remove the turntable platter.
2. Remove the terminal solder by use of solder sucker.
3. Hold the Hall element with a tweezers and remove it while touching the soldering iron to the terminal. (Fig. 11)

● How to remove the dust cover

1. Pull out the 4 right and left rivets and 2 right and left rivet holders. (Fig. 12)
2. Lift the dust cover in the direction of the arrow. (Fig. 12) Then the dust cover can be removed.

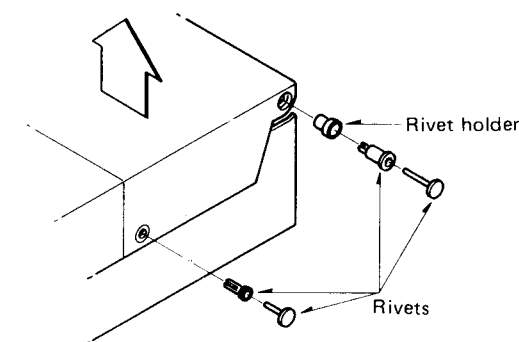


Fig. 12

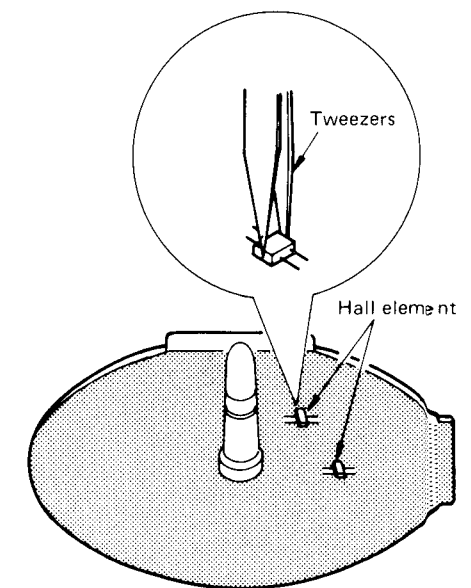


Fig. 11

● How to remove the music select circuit board

1. Remove the front panel. (Refer to "How to remove the operation button", item 2.)
2. Release the 2 claws, then the music select circuit board can be removed. (Fig. 7)

● How to remove the tonearm

- 1. Remove the dust cover. (Refer to "How to remove the dust cover.")
- 2. Remove the shield cover setscrew (Fig. 13 : 26) and shield cover.
- 3. Unsolder the 5 lead wires from Tonearm.
- 4. Turn the worm gear by finger to move the tonearm center inward.
- 5. Remove the tonearm setscrew. (Fig. 14 : 27)
- 6. Remove the guide rail clamber, and pull out the guide rail, the remove the tonearm in the direction of the arrow A.

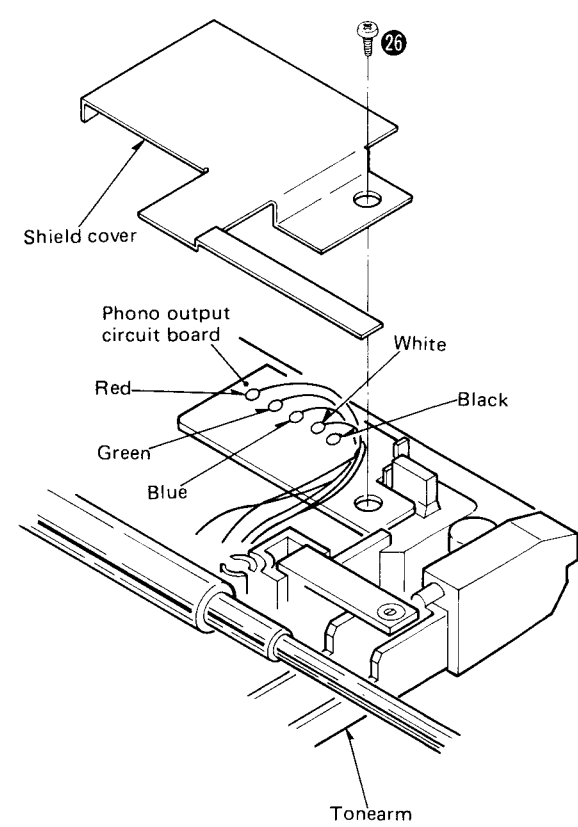


Fig. 13

● How to remove the offset angle detection circuit board

- 1. Remove the dust cover. (Refer to "How to remove the dust cover.")
- 2. Remove the indicator cover setscrew (Fig. 14: 28) and the indicator cover in the direction of the arrow B . (Fig. 14)
- 3. Remove the offset angle detection circuit board adjustment screw (Fig. 14: 29), then the offset angle detection circuit board can be removed.

Note: When replacing the offset angle detection circuit board, be sure to adjust the servo gain and offset voltage.

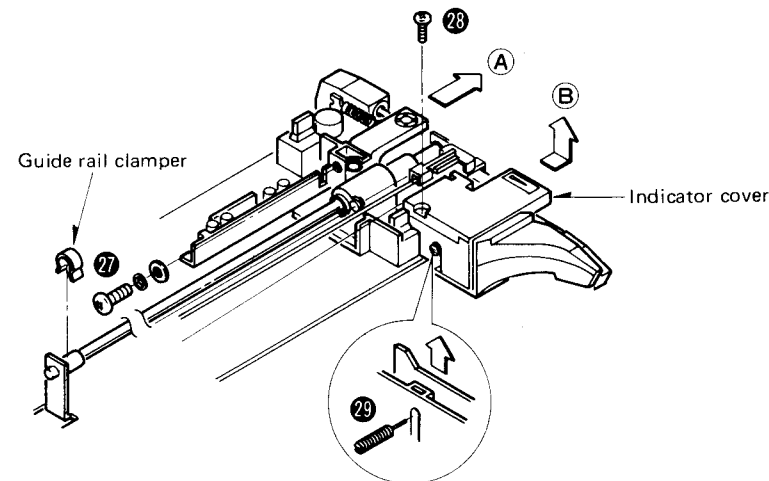


Fig. 14

■ MEASUREMENTS AND ADJUSTMENT

● Equipment used and condition of the set

- 1. Oscilloscope
- 2. DC voltmeter
- 3. Record (SFTR007) for adjustment
- 4. Set the optical sensor sensitivity selector to "M".

Step	Item	Preparations for adjustment	Adjusting portion	Adjusting method
1	Start position	1. Open the upper cabinet and put on the record. 2. Turn the power switch on. 3. Push the "start" switch.	Start position adjusting screw (Fig. 15)	1. Turn the start position adjusting screw. If it descends between turns, turn the screw counter clockwise.
2	Clock frequency	1. Connect lead wire with clip to IC301 29-pin and 1-pin of operation circuit board. 2. Connect the oscilloscope to IC301 8-pin.	VR301 (Fig. 16)	1. Turn the power switch on. 2. Adjust VR301 so that the cycle of output waveform is 1.36msec. ± 0.07msec. (Fig. 17)
3	Sensor gain	1. Connect the DC voltmeter to IC401 12-pin (+) and 14-pin (-). 2. Put on the record for adjustment with side A up.	VR401 (Fig. 16)	1. Turn the power switch on. 2. Tonearm is on the rest position. (Blank area of the record.) 3. Adjust VR401 so that the output voltage is 8V ± 0.4V.
4	Sensor resolution	1. Connect the oscilloscope to IC401 9-pin (+) and 14-pin (-). 2. Put on the record for adjustment with side A up.	VR402 (Fig. 16)	1. Turn the power switch on. 2. Keep the F skip switch depressed to move the tonearm. (Output is delivered between the turns.) 3. Adjust VR402 so that the peak output between tunes is 3V ± 0.3V. (Fig. 18)
5	Stylus cue-down position	1. Open the upper cabinet and hold the cabinet switch with tape. 2. Put on the record for adjustment with side B up. 3. Close the upper cabinet. 4. Connect the unit it the amplifier. (Connect the speakers to the speaker terminals.)	VR302 (Fig. 16)	1. Turn the power switch on. 2. Press the F skip switch twice and then press the start switch. 3. After completion of cueing, again press the B skip switch for the purpose of cueing down as previously mentioned. 4. Make sure that descending position is at count "18 ~ 19". 5. Adjust VR302 so that the decending position is at count "18 ~ 19".
6	Tonearm offset angle	1. Remove the dust cover. (Refer to "DISASSEMBLY INSTRUCTION") 2. Open the upper cabinet and hold the cabinet switch with tape. 3. Close the upper cabinet. 4. Put on the record.	Adjusting screw (Fig. 19)	1. Turn the power switch on. 2. Keep the F skip switch depressed to move the tonearm. 3. Turn the adjusting screw so that the arm center matches the V-groove of the of the lift bar.
7	Servo gain and offset voltage	1. Remove the dust cover. (Refer to "DISASSEMBLY INSTRUCTION") 2. Open the upper cabinet and hold the cabinet switch with tape. 3. Connect the DC voltmeter to CN301 5-pin (+) and 2-pin (-). 4. Remove the sensor cover.	VR501 (Servo gain) Screw (Offset voltage) (Fig. 20)	1. Turn the power switch on. 2. Keep the F skip switch depressed to move the tonearm. 3. Open the upper cabinet. 4. Completely shift the tonearm to the left. Then, adjust VR501 so that the voltage is 3.6V (Servo gain) 6. If the voltage is not 1.8V, adjust screw so that the output voltage is 1.8V. (Offset voltage)

• Adjustment points

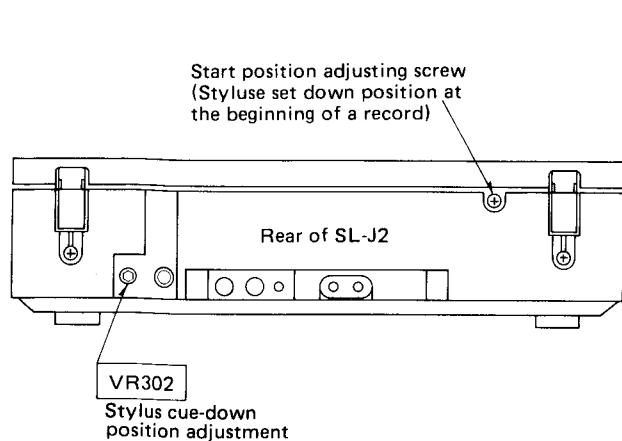


Fig. 15

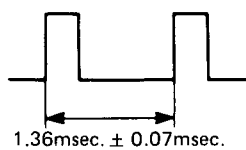


Fig. 17

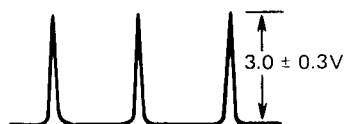


Fig. 18

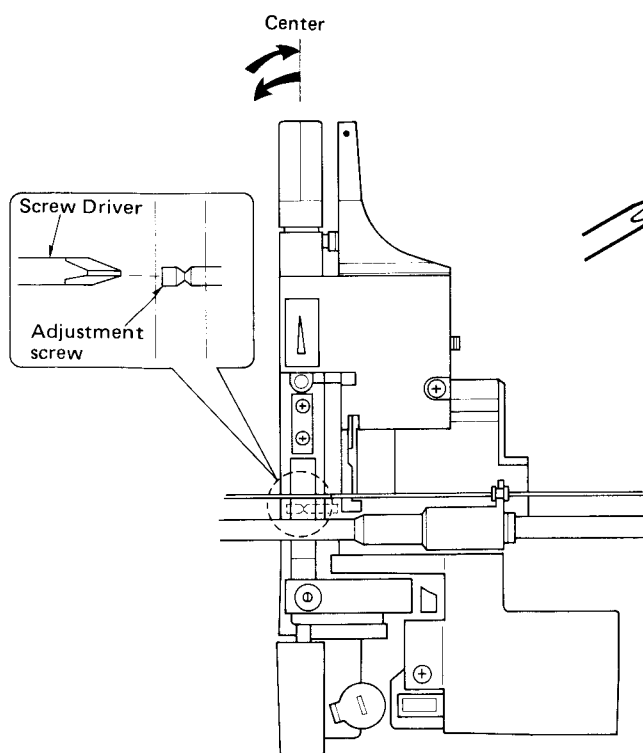


Fig. 19

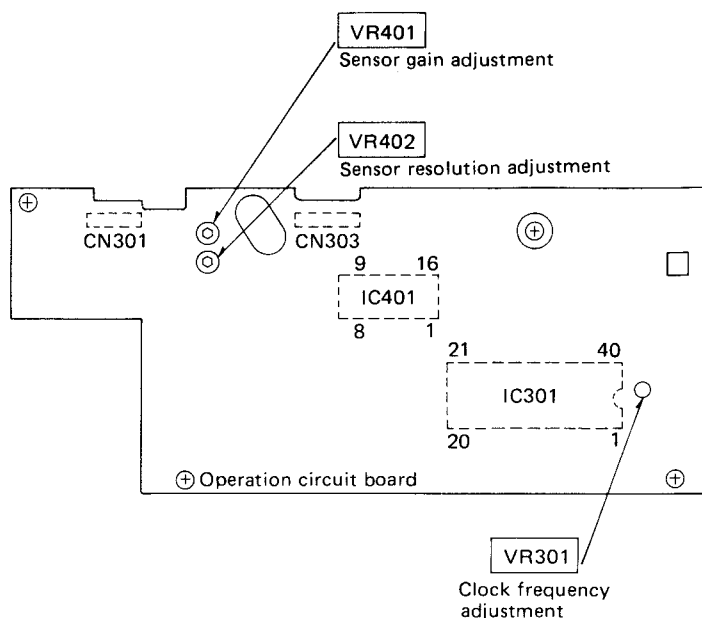


Fig. 16

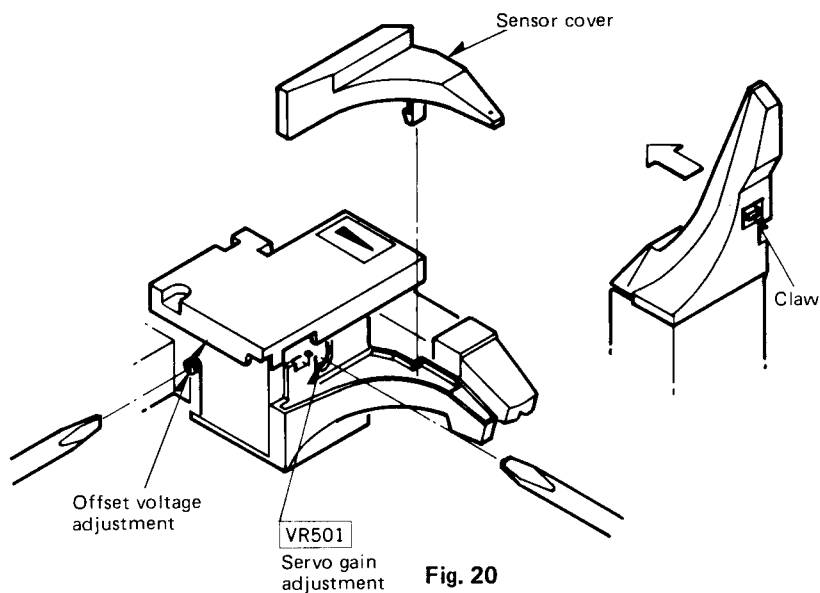


Fig. 20

■ TROUBLE SHOOTING

1. How to use the repair table (Fig. 21)

- ① Remove the bottom board.
- ② Remove the main circuit board and connect the P.C.B. ground terminal to the chassis (Stator frame).
- ③ Put the unit on the repair table.
- ④ Fit the turntable platter and put on the turntable mat.
- ⑤ Put on the record and check the circuits from under the unit.

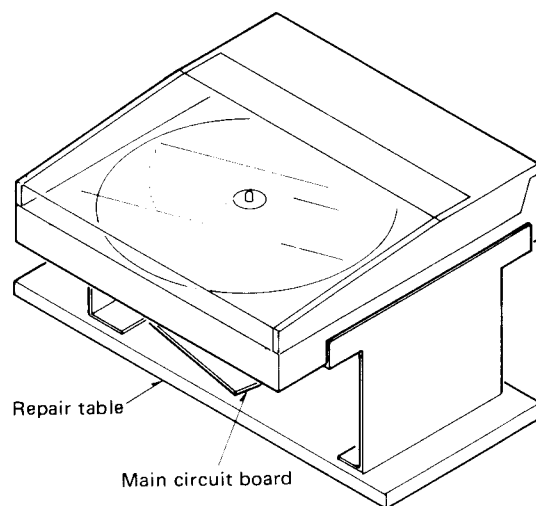


Fig. 21

2. How to raise the unit (Fig. 22)

Note: Turntable platter is not fixed on the center spindle.
Take care so that the turntable platter will not come loose. Also, take care allow the set to fall down.

- ① Remove the bottom board.
- ② Completely open the upper cabinet.
- ③ Hold the cabinet (Reset) switch with tape.
- ④ Fit the turntable platter.
- ⑤ Raise the unit and check the circuits.

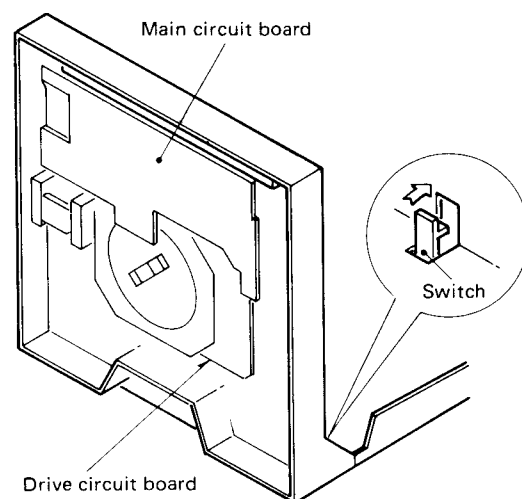


Fig. 22

3. How to turn over the unit (Fig. 23)

Note: This purpose is to check the voltage of each circuit during stop of the turntable.

- ① Remove the turntable platter and turn over the unit.
- ② Remove the bottom board.
- ③ Turn the power switch "on" and check the voltage.



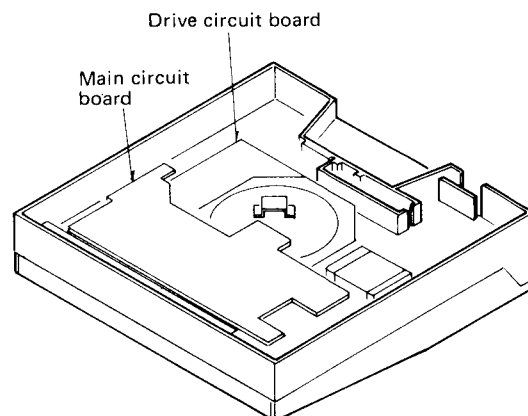


Fig. 23

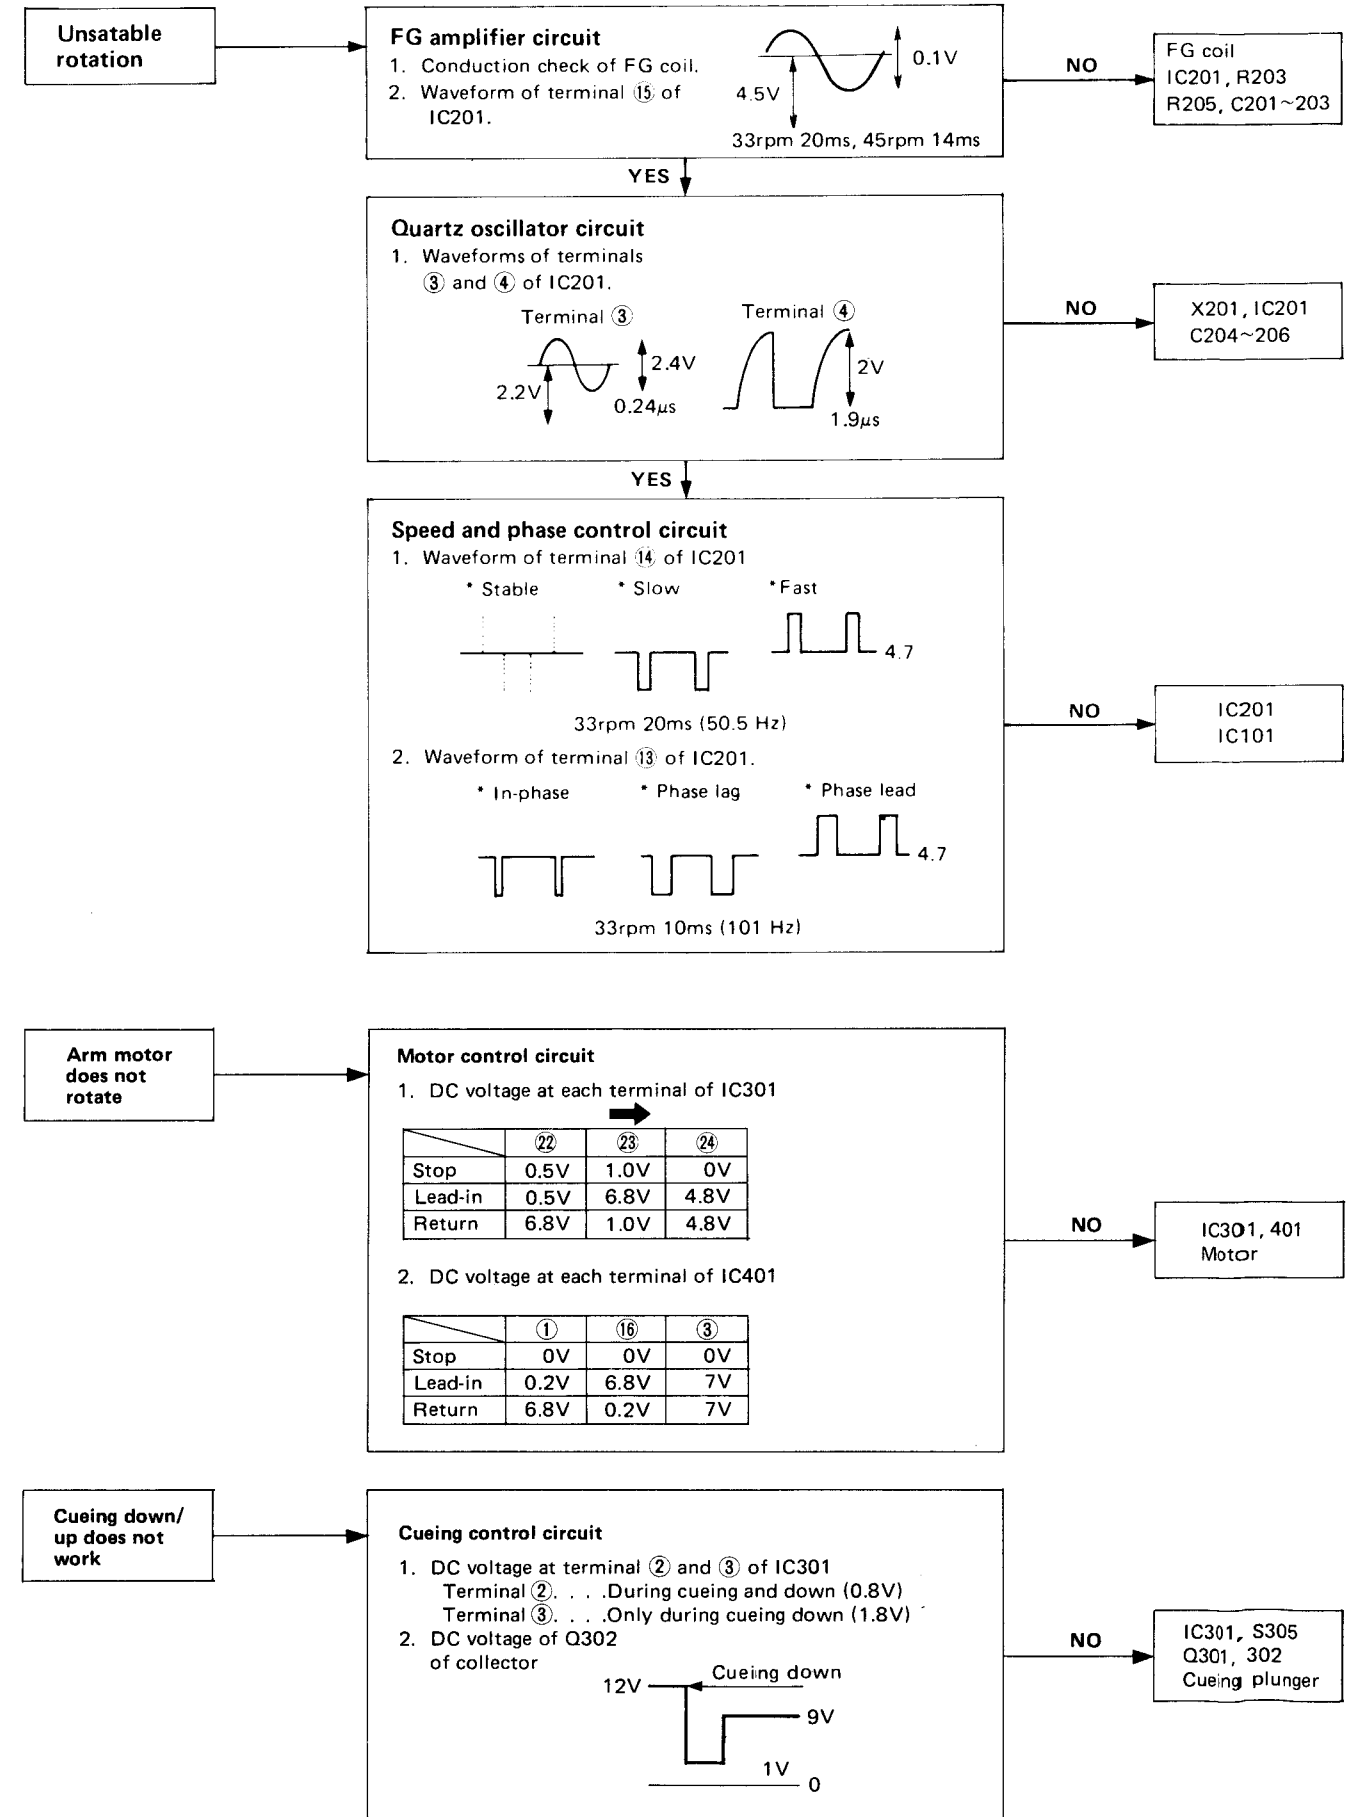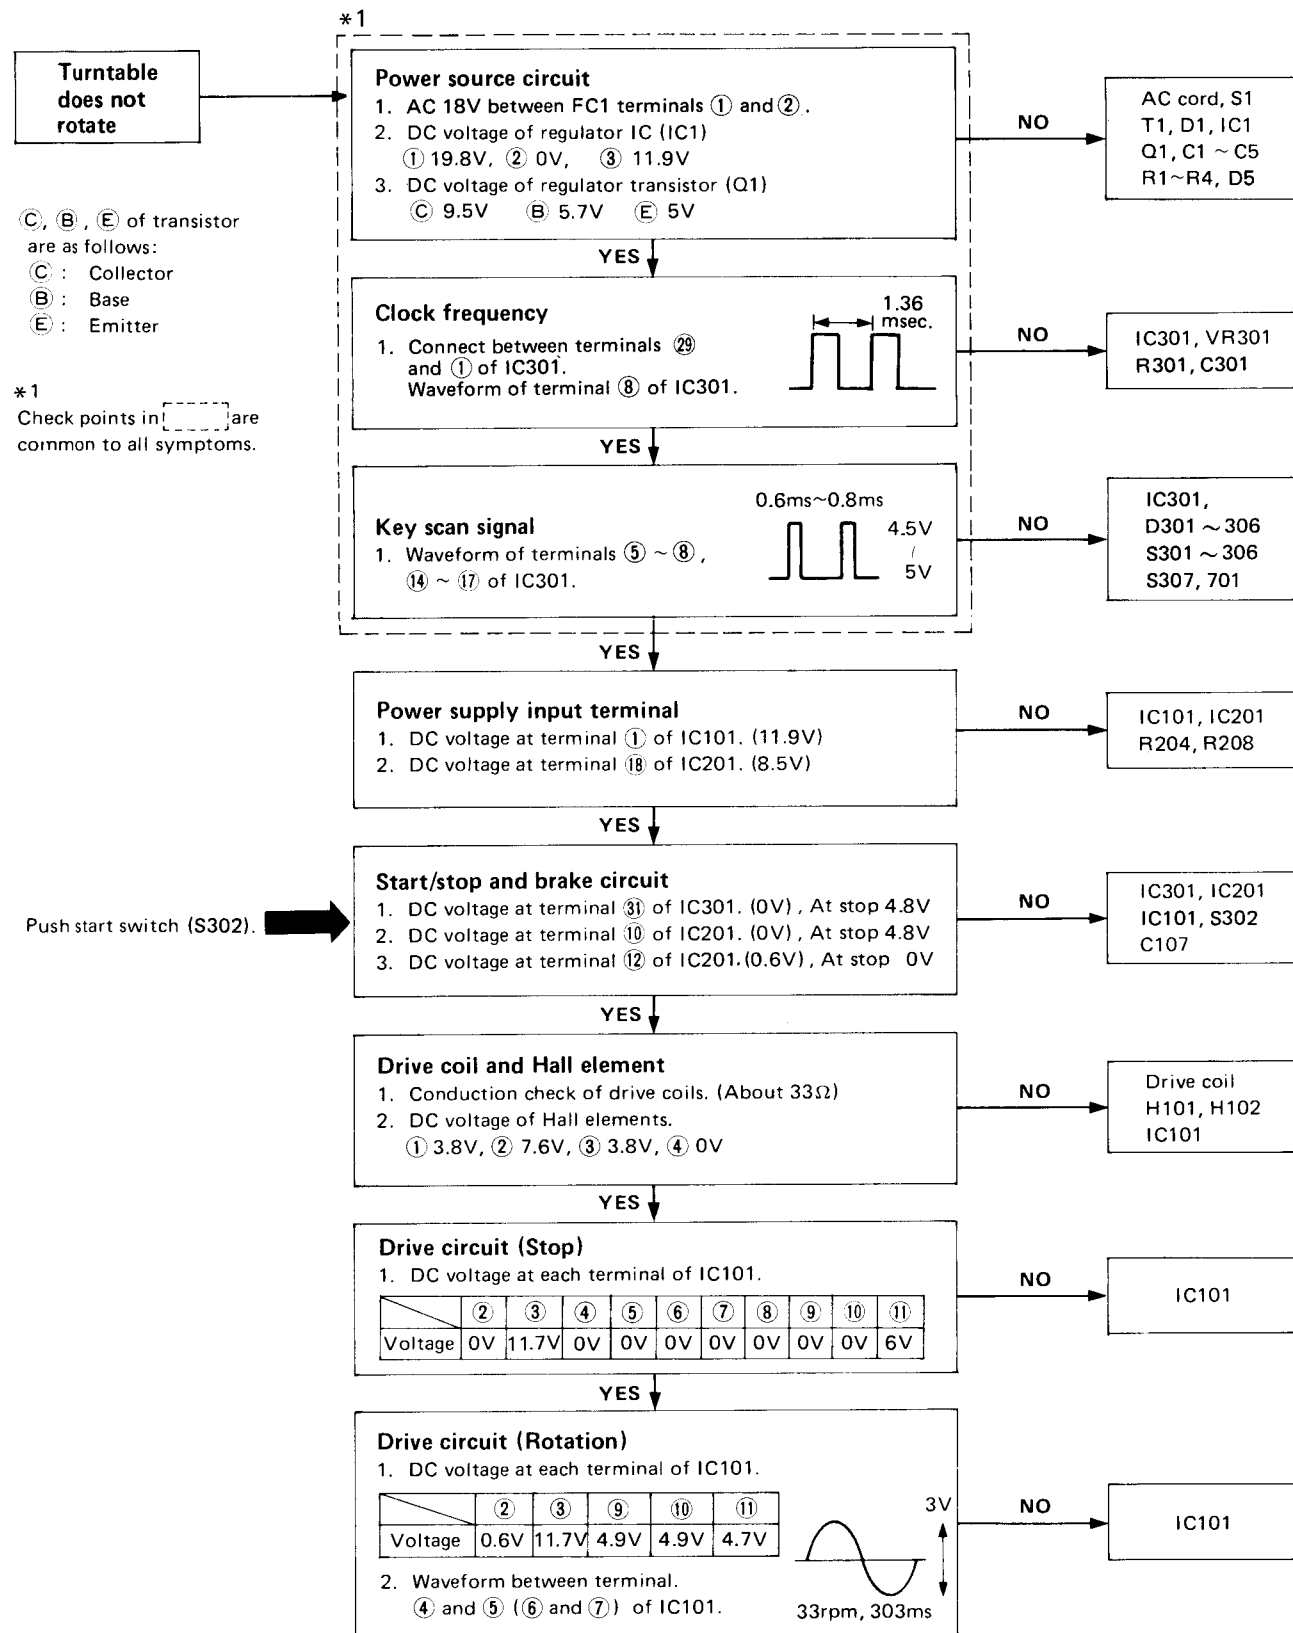

■ HOW TO SET THE TONEARM DRIVE ROPE

When setting the rope, follow the procedure given below.

1. Remove the dust cover and tonearm cover. (Refer to "How to remove the dust cover.")
2. Remove the roller cover. (Fig. 24)
3. Set the rope in the order of 1 ~ 5 (Fig. 24)
4. Fit the rope connector to the tonearm.
5. Set the roller cover and turn the worm gear by hand to see that the tonearm moves.

Note: The arm drive wheel is not fixed. So, take care not to let it come loose during servicing. (Stop it with C-ring to prevent its removal.)

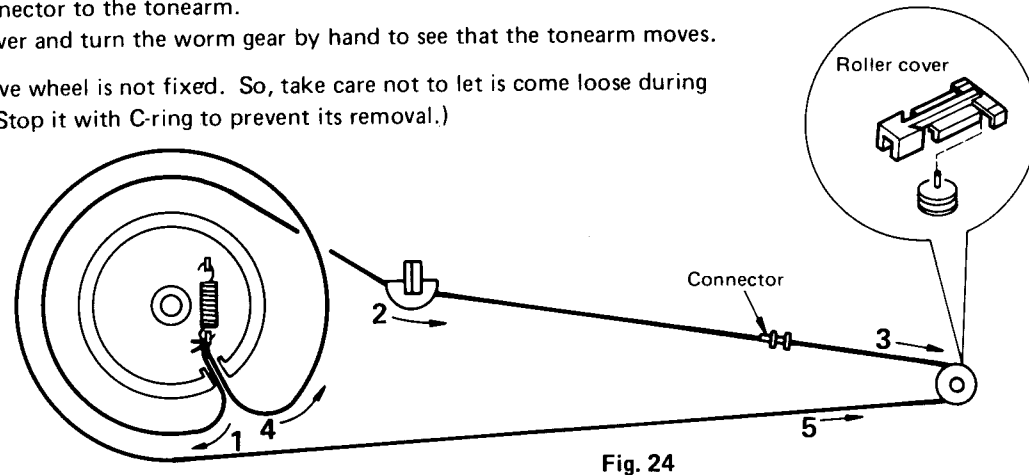


Fig. 24

■ RESISTORS AND CAPACITORS

- Notes:**
1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 2. Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 3. This "S" mark is service standard parts and may differ from production parts.
 4. Unless otherwise specified. All resistors are in OHMS (Ω), K = 1000 Ω , M = 1000k Ω . All capacitors are in MICROFARADS (μ F), P = 10⁻⁶ μ F.

Numbering System of Resistor

Example

ERD	25	F	J	101
Type	Wattage	Shape	Tolerance	Value
ERG	1	AN	J	2R2
Type	Wattage	Shape	Tolerance	Value

Numbering System of Capacitor

Example

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity
ECEA	50	M	R47	R
Type	Voltage	Peculiarity use	Value	Special use

Resistor Type	Wattage	Tolerance
ERD : Carbon	25 : 1/4W	F : \pm 1%
ERG : Metal Oxide	1 : 1W	J : \pm 5%
ERX : Metal Film	2 : 2W	G : \pm 2%

ERD2FCG□□□ → Fuse type carbon (1/4W)
 ERD10TLJ□□□ → Chip type carbon (1/8W)
 ERDS2TJ□□□ → Small type carbon (1/4W)
 ECUV1H□□□ → Chip type ceramic capacitor

Capacitor Type	Voltage		Tolerance
	ECEA Type	Others	
ECEA : Electrolytic	1A : 10V	1H : 50V DC	J : \pm 5%
ECKD : Ceramic	1C : 16V	2H : 500V DC	K : \pm 10%
ECQM : Polyester	1E : 25V	1 : 100V	Z : +80%, -20%
ECCD : Ceramic	1V : 35V		P : +100%, -0%
ECKF : Ceramic	1H : 50V		M : \pm 20%
ECEB : Electrolytic	1J : 63V		
	50 : 50V		

Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
RESISTORS			R315	ERDS2TJ101	100K	R347, 348	ERDS2TJ681	680	C203	ECQM1H683JZ	0.0068
R1	ERDS2TJ101	100	R316	ERDS2TJ394	390K	R349, 350	ERDS2TJ681	680	C204	ECUV1H121JCM	120P
R2	ERDS2TJ221	220	R317	ERDS2TJ333	33K	R351	ERDS2TJ103	10K	C205	ECUV1H330JCM	33P
R3	ERG2S330	33	R318	ERDS2TJ103	10K	R353A	ERDS2TJ333	33K	C206	ECUV1H121JCM	120P
R4	ERDS2TJ221	220	R319	ERDS2TJ223	22K	R353B	ERDS2TJ331	330	C207	ECEA1AU470	47
R103	ERD10TLJ104U	100K	R320	ERDS2TJ392	3.9K	R401	ERDS2TJ563	56K	C208	ECEA1AU470	47
R104	ERX1ANJ2R7	2.7	R321	ERDS2TJ272	2.7K	R402, 403	ERDS2TJ123	12K	C301	ECCD1H101K	100P
R105	ERD10TLJ270U	27	R322	ERDS2TJ332	3.3K	R404, 405	ERDS2TJ474	470K	C302	ECFR1H104ZF	0.1
R201	ERD10TLJ273U	27K	R323, 324	ERDS2TJ103	10K	R406	ERDS2TJ104	100K	C303	ECEA1CU330	33
R202	ERD10TLJ394U	390K	R325, 326	ERDS2TJ332	3.3K	R407	ERDS2TJ563	56K	C304	ECFR1H104ZF	0.1
R203	ERD10TLJ680U	68	R327	ERDS2TJ472	4.7K	R408	ERDS2TJ154	150K	C305	ECEA50M1R	1
R204	ERD10TLJ151U	150	R328	ERDS2TJ471	470	R501	ERD25FJ271	270	C306	ECQM1H104JZ	0.1
R205	ERD10TLJ223U	22K	R329, 330	ERDS2TJ103	10K	R502	ERD25FJ391	390	C307	ECEA1HU4R7	4.7
R207	ERD10TLJ102U	1K	R331, 332	ERDS2TJ272	2.7K	R503	ERD25FJ561	560	C308	ECFR1H104ZF	0.1
R208	ERD10TLJ680U	68	R333	ERDS2TJ332	3.3K	CAPACITORS			C309, 310	ECKD1H681KB	680P
R301	ERDS2TJ562	5.6K	R334	ERDS2TJ271	270	C1, 2, 3	ECQM1223KZ	0.022	C311	ECCD1H101J	100P
R302, 303	ERDS2TJ102	1K	R335	ERDS2TJ821	820	C4	ECEB1EU222	2200	C312, 313	ECFR1H10ZF	0.1
R304, 305	ERDS2TJ331	330	R336	ERDS2TJ103	10K	C5	ECEA1CU330	33	C401	ECEA1HUR47	0.47
R306	ERDS2TJ333	33K	R337	ERDS2TJ472	4.7K	C101	ECEA1CU330	33	C402	ECEA1CN100S	10
R307	ERDS2TJ681	680	R338	ERDS2TJ563	56K	C102	ECEA50ZR22	0.22	C403, 404	ECFR1H10ZF	0.047
R309	ERDS2TJ152	1.5K	R339	ERDS2TJ103	10K	C103	ECQV05274JZ	0.27	C405	ECEA1HU2R2	2.2
R310	ERDS2TJ272	2.7K	R340	ERDS2TJ333	33K	C105, 106	ECEA1CN470S	47	C601	ECFB1B104ZM	0.1
R311	ERDS2TJ562	5.6K	R341	ERDS2TJ683	68K	C107	ECEA50Z1	1	C701	ECEA1CU101	100
R312, 313	ERDS2TJ103	10K	R342	ERDS2TJ563	56K	C201	ECEA1AU470	47			
R314	ERDS2TJ332	3.3K	R343, 344	ERDS2TJ681	680	C202	ECEA50ZR22	0.22			
			R345, 346	ERDS2TJ681	680						

■ REPLACEMENT PARTS LIST

- Notes:**
1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 2. Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 3. Bracketed indications is Ref. No. columns specify the area. Parts without these indications can be used for all areas.
 4. The "S" mark is service standard parts and may differ from production parts.
 5. The parenthesized numbers in the columns of description stand for the quantity per set.
- Areas**
- * [M] is available in U.S.A.
 - * [MC] is available Canada.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
INTEGRATED CIRCUITS			SWITCHES			PHOTO INTERRUPTERS		
IC1	AN7812	Regulator, 12V	S1	SFDS02N02	Power	PC501	ON1186	Offset Angle Sensor
IC101	AN6638	Turntable Drive	S301~306	EVQSQ405K	Stop, Start, Skip-Search, Cueing & Repeat	PC502	SFPABJ0204A	Blank Groove Sensor
IC201	AN6683	Turntable Control	S307	SFDS05N01	Reset	PC601	ON1161	Tonearm Position Sensor
IC301	MN1420FPL	Micro Computer	S308, 309	SFDSHSW0699	Size Selector & Speed Selector	POWER TRANSFORMER		
IC302	AN6914	Computer	S401	SFDSHSW0699	Sensor Gain Selector	T1(M)	SLT48DTL3A	Power Source
IC401	AN6690	Arm Motor Drive & Blank Groove Detection	S601	SFDS02N03	Reset	T1(MC)	SLT48DT11C	Power Source
TRANSISTORS			VARIABLE RESISTORS			FUSE		
Q1	2SC1383	Regulator, 5V	VR301	EVN61AA00B54	Clock Frequency Adj., 50K Ω /B	F1(MC) only	XBA2F08NU100	250V, 800mA
Q301	2SD636	LED Drive	VR302	EVJE1AF20B54	Stylus Cue-down Position Adj., 50K Ω /B	COMPONENT COMBINATION		
Q302	2SD892	Cueing Control	VR401	EVN61AA00B55	Sensor Gain Adj., 500K Ω /B	RX301	EXBP87681J	680 Ω \times 7
Q303, 304	2SD636	Speed Selector & Synchro Rec Drive	VR402	EVN61AA00B25	Sensor Resolution Adj., 200K Ω /B			
Q305~307	2SB641	Switching	VR501	EVNM0AA00B14	Servo Gain Adj., 10K Ω /B			
Q308	2SD636	Relay Drive	RELAY					
Q309, 310	2SB641	Shaping	RL701	SFDYQ11N02	Muting Relay			
Q311	2SD636	LED Drive	RL701	SFDYG5A237P	Muting Relay			
Q312	2SB641	Switching	CRYSTAL					
DIODES			X201	SVQSH41TR	4.193MHz			
D1	SVDS1RBA20F	Rectifier	HALL ELEMENTS					
D5	MA4056	Zener, 5.6V	H101, 102	OH-002	Turntable Position Det.			
D301~306	MA165	Switching						
D307	SVZJ02N02	Repeat Indicator						
D308	MA4075	Zener, 7.5V						
D309	SVZJ02N03	Cue-down Indicator						
D310	SVZJ02N02	Cue-Up Indicator						
D311~317	MA165	Switching						
D311B	LN513RA	Music Select Indicator						
D401	MA4068	Zener, 6.8V						
D501	MA162A	Switching						
D502	SVDEBR3432S	Tonearm Position Indicator						
D701	MA162A	Switching						

Caution:


Two types of muting relay (RL701) are used. When placing an order, confirm the caution mentioned in the explosion view on page 17.

Ref. No.	Part No.	Description
CABINET AND CHASSIS PARTS		
1	SFADJ02M01E	Dust Cover Ass'y (1)
1-1	SFKBJ02M01	Badge, Dust Cover (1)
1-2	SFGZJ02N01	Cushion Rubber (1)
2	SFUMQ06N08	Lutch, Dust Cover (2)
3	SFUMD04N07	Lutch, Dust Cover (2)
4	SFGZQ06N01	Rubber, Lutch (2)
5	SFTGQ06N01	Turntable Mat (1)
6	SFWEQ06N01	Adaptor, 45r.p.m (1)
7	SFQAC06N01	Spring, 45r.p.m (1)
8	SFTEQ05N01	Adaptor (1)
9	SFTMC07-01E	Turntable Platter (1)
10	SFAUJ02N01	Rotate Magnet (1)
11	SFQCC05N01	Bottom Board (1)
12	SFGAC05N02	Spring, Insulator (4)
13	SFUMJ02N02	Insulator (4)
14	SFUMJ02N03	Rod, Power Switch (1)
15	SFUMJ02N03	Filter, Front Panel (1)
16	SFKKJ02N01	Ornament Plate (1)
17	SFUMJ02N01	Front Panel (1)
18	SFKTC06N04	Button, Power Switch (1)
19	SFACJ02N01	Cabinet (1)
20	SFKTJ02N01	Button, Operation (1)
21	SFKTJ02N02	Knob, Selectors (3)
22	SFDJC01N01	Jack, Synchro Rec (1)
23	SFGCQ06N02	Cushion Rubber, Power Transformer (2)
24	SFATQ06N01E	AC Socket Hinge (2)
25(M)	SFNNJ02M01	Name Plate (1)
25(MC)	SFNNJ02C01	Name Plate (1)
26	SFGKQ06N01	Rubber Cap (1)
27	SFUML11R03	Wheel, Tonearm Drive (1)
28	SFUZC05N02E	Rope Ass'y, Tonearm Drive (1)
29	SFUMV05N23	Cap, Pulley (1)
30	SFUMC05N22	Pulley (1)
31	SFGBC10-01	Belt, Tonearm Drive Motor (1)
32	SFMHJ02N01E	Motor Ass'y, Tonearm Drive (1)
33	SFUMQ06N06A	Worm Gear Ass'y (1)
34	SFUZC02N01	Rod, Rest Switch (1)
35	SFUMC02N05	Lever, Rest Switch (1)
36	SFQHQ34N22	Spring, Rest Switch Lever (1)
37	SFUMC02N06	Base, Rest Switch (1)
38	SFUMQ06N09	Holder, Rest Switch (1)
39	SFUPBL3N11E	Base, Tonearm Drive Motor (1)
40	SFUMC02N10	Rope Guide (1)
41	SFQA913-01	Spring, Adjustment Screw (1)
42	SFUMQ06N07	Clamper, Guide Rail (1)
43	SFGCQ06N01	Cushion Rubber, Guide Rail (1)
44	SFXJQ06N01	Guide Rail, Tonearm (1)
45	SFGCC05N05	Cushion Rubber, Guide Rail (1)
46	SFUMC02N12	Clamper, Lead Wires (1)
47	SFGCQ06N04	Cushion Rubber, Dust Cover (2)
48	SFGZBL3N02	Spacer (1)
49	SFUMC05N15	Holder, Reset Switch (1)
50	SFQPC05N01	Spring, Reset Switch (1)
51	SFACJ02N013	Cover, Lead Wires (1)
52	SFKTQ06N02	Knob, Cueing Down Position Control (1)
53	SFDJJ02N04E	Jack, Phono Output (1)
54	SFUKQ06N02E	Base Ass'y, Tonearm (1)
55	SFMGQ34N01	Cover, Stator Coil (1)
56	SFMZC06N01R	Stator Frame Ass'y (1)
57	SFACJ02N012	Cover, Cabinet (1)


Ref. No.	Part No.	Description
TONEARM PARTS		
61	SFPAK0Q601	Indicator Plate (1)
62	SFPCS0Q601	Indicator Cover (1)
63	SFPGM0Q601	Rubber (1)
64	SFDZC05N01E	Solenoid Ass'y (1)
65	SFSP00302	Spring, Adjustment (1)
66	SFPAK0Q301R	Base, Tonearm (1)
67	SFPAMJ0201A	Tonearm Ass'y (1)
68	SFPGML1101	Cushion Rubber (2)
69	SFPABJ0205R	Cover, Sensor Case (1)
70	SFPCS00502	Light Concentrator (1)
71	SFPABJ0204A	Blank Groove Sensor A'ssy (PC502) (1)
SCREWS, WASHERS AND NUT		
N1	XTV3+8BFN	Screw, $\pm 3 \times 8$ (12)
N2	XTV3+6BFZ	Screw, $\pm 3 \times 6$ (6)
N3	XSN3+5S	Screw, $\pm 3 \times 5$ (3)
N4	XTWS3+14QFYR	Screw, $\pm 3 \times 14$ (4)
N5	XTN3+6B	Screw, $\pm 3 \times 6$ (2)
N6	XTWS3+14TFZ	Screw, $\pm 3 \times 14$ (2)
N7	XTN16+10G	Screw, $\pm 1.6 \times 10$ (1)
N9	XTV3+20J	Screw, $\pm 3 \times 20$ (1)
N10	SFXGQ06N01	Screw (1)
N11	XSN3+30S	Screw, $\pm 3 \times 30$ (1)
N12	XWE3D10	Washer, $\phi 3$ (1)
N13	XWE3A8BW	Washer, $\phi 3$ (2)
N14	CSTW3	Washer (2)
N15	XWC3B	Washer, $\phi 3$ (2)
N17	XNC3HS	Nut, $\phi 3$ (1)
N18	SFXWC06N02	Washer (1)
N19	SFPEV0Q601	Screw, Cartridge (1)
N20	XTV3+6BFN	Screw, $\pm 3 \times 6$ (6)
N21	XTN23+6JFZ	Screw, $\pm 2.3 \times 6$ (1)
N22	SFPTN00301	Screw, Offset Adj. (1)
N23	SFXN623-1	Nut (1)
N24	XSN3+12S	Screw, $\pm 3 \times 12$ (1)
N25	XWA3B	Washer, $\phi 3$ (1)
N26	XTS26+6JFZ	Screw, $\pm 2.6 \times 6$ (1)
N27	XYN2+C4FZ	Screw, $\pm 2 \times 4$ (1)
N28	XTN2+8B	Screw, $\pm 2 \times 8$ (1)

Ref. No.	Part No.	Description
ACCESSORIES		
A1(M)	SFNUJ02M01	Instruction Book (1)
A1(MC)	SFNUJ02C01E	Instruction Book (1)
A2	SFDHC05N01	Phono Output Cord (1)
A3	SFDLJ02N01	Ground Wire (1)
A4	SFDAC05M01	AC Cord (1)
PACKING PARTS		
P1(M)	SFHPJ02M01	Carton Box (1)
P1(MC)	SFHPJ02C01	Carton Box (1)
P2	SFHHJ02N01	Pad, Front (1)
P3	SFHHJ02N02	Pad, Rear (1)
P4	SFHKC05N01	Clamper, Turntable Platter (2)
P5	SFHKQ06N01	Spacer, Tonearm (1)
P6	SFHC06N01	Spacer, Dust Cover (1)
P7	SFYH45X60	Polyethylene Bag, Unit Sheet (1)
P8	SFHDN05M01	Polyethylene Bag, Turntable Mat (1)
P9	SFYF33B35	Polyethylene Bag, Accessories (1)

Tonearm Part

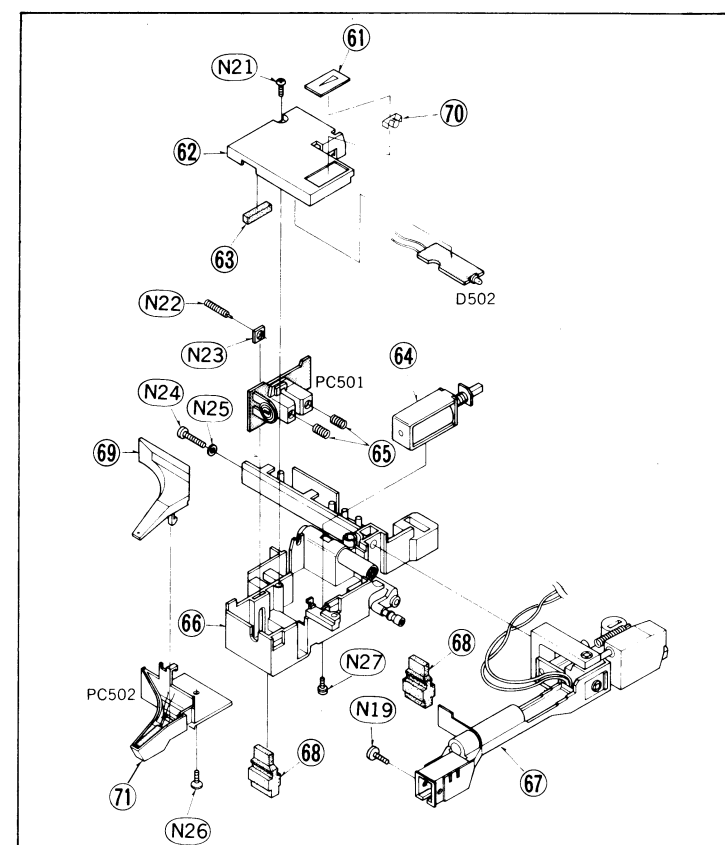


EXPLODED VIEW

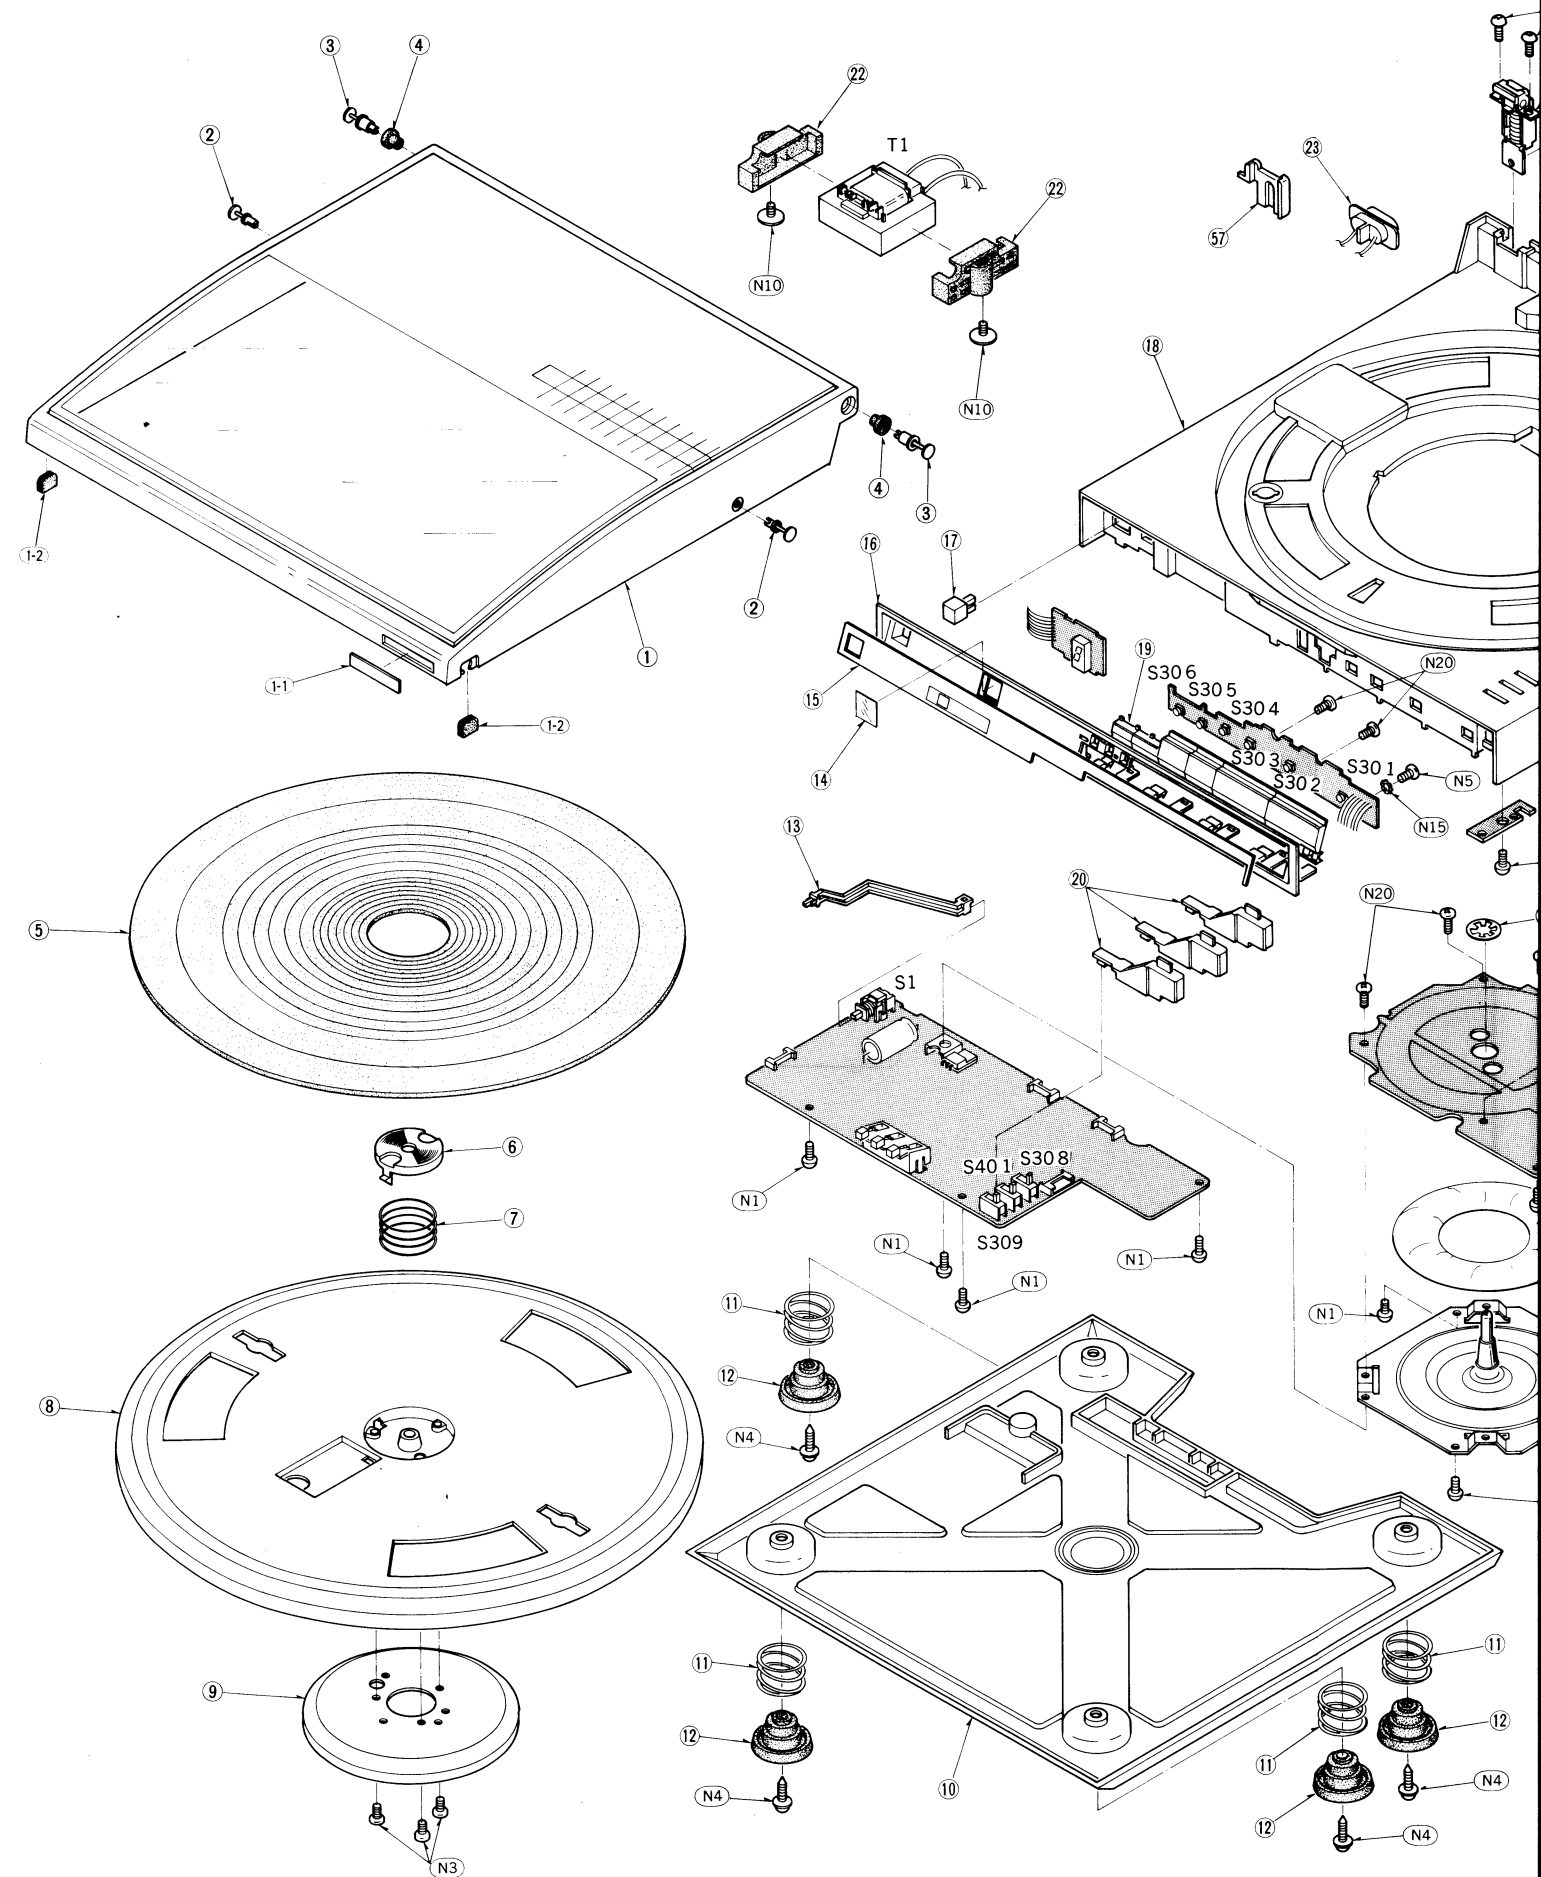

EXPLODED VIEW

Description		
01	Instruction Book	(1)
01E	Instruction Book	(1)
01	Phono Output Cord	(1)
01	Ground Wire	(1)
01	AC Cord	(1)

01	Carton Box	(1)
01	Carton Box	(1)
01	Pad,Front	(1)
02	Pad,Rear	(1)
01	Clamper,Turntable Platter	(2)
01	Spacer,Tonearm	(1)
01	Spacer,Dust Cover	(1)
0	Polyethylene Bag,Unit	(1)
01	Sheet	(1)
	Polyethylene Bag,	
	Turntable Mat	(1)
01	Pad,Turntable Mat	(1)
	Polyethylene Bag,	
	Accessories	(1)

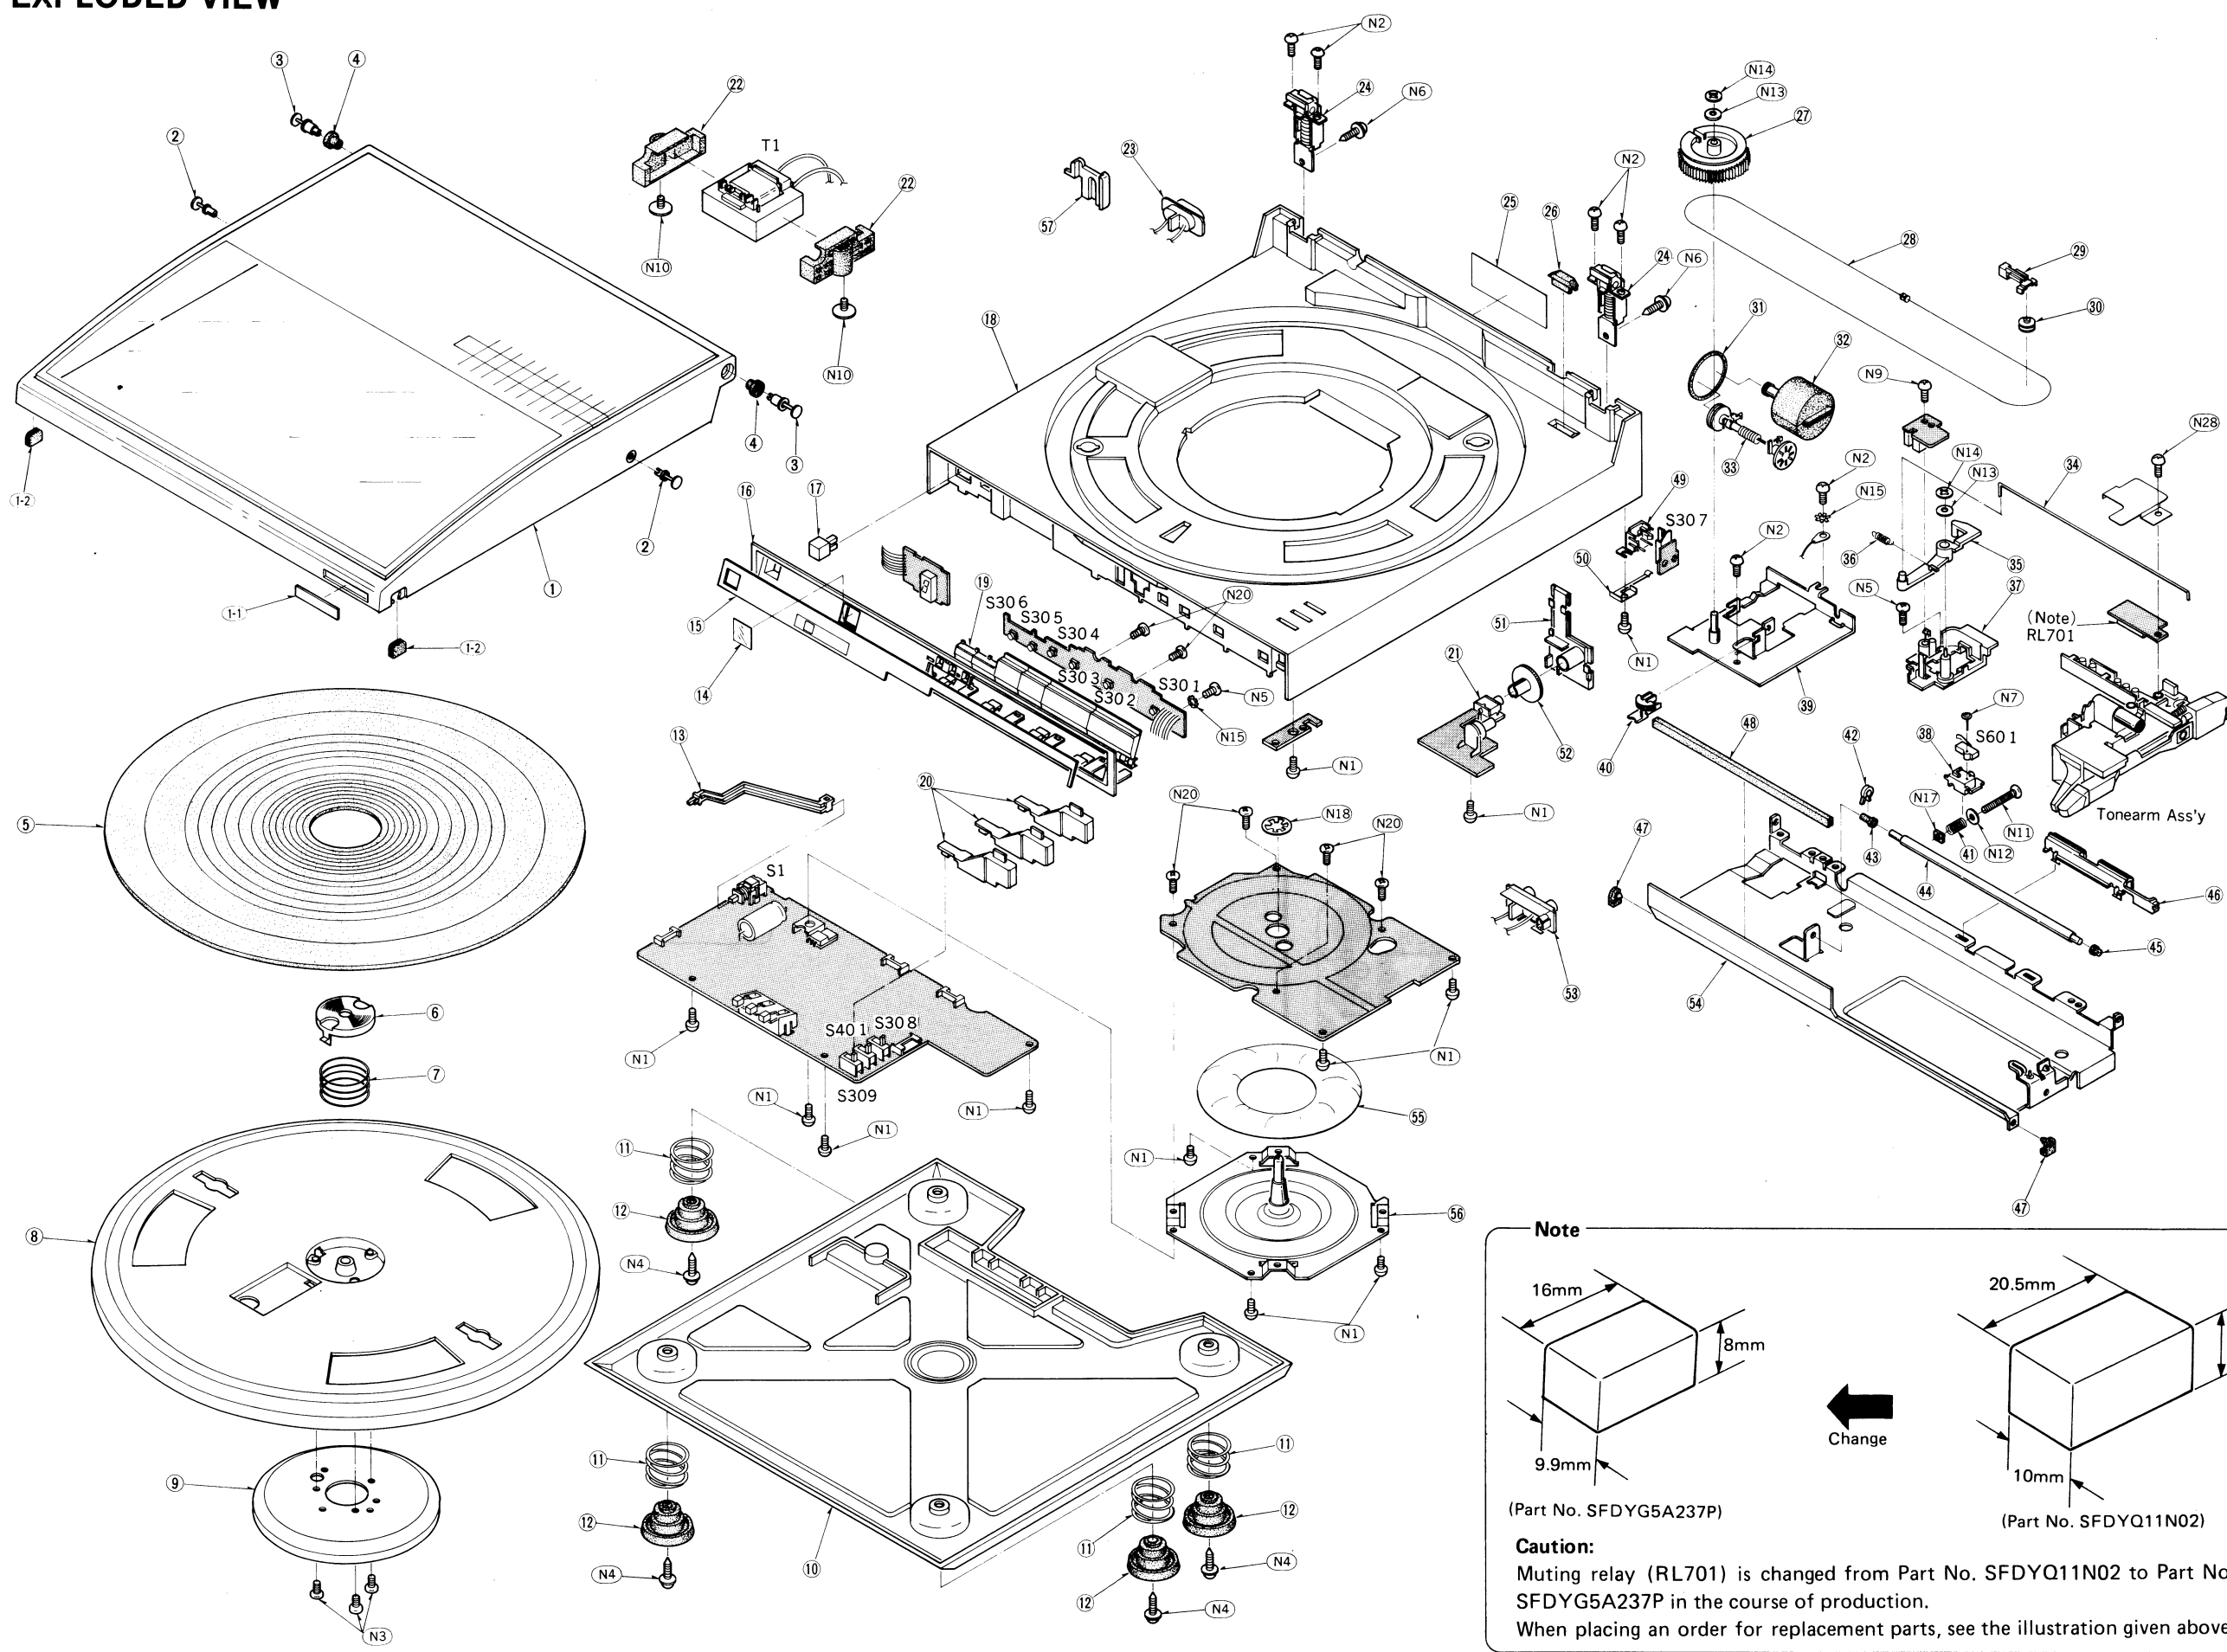

Note

16mm
20.5mm
8mm
9.9mm


Change

20.5mm
10mm
11mm



(Part No. SFDYG5A237P) (Part No. SFDYQ11N02)


Caution:
Muting relay (RL701) is changed from Part No. SFDYQ11N02 to Part No. SFDYG5A237P in the course of production.
When placing an order for replacement parts, see the illustration given above.


CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

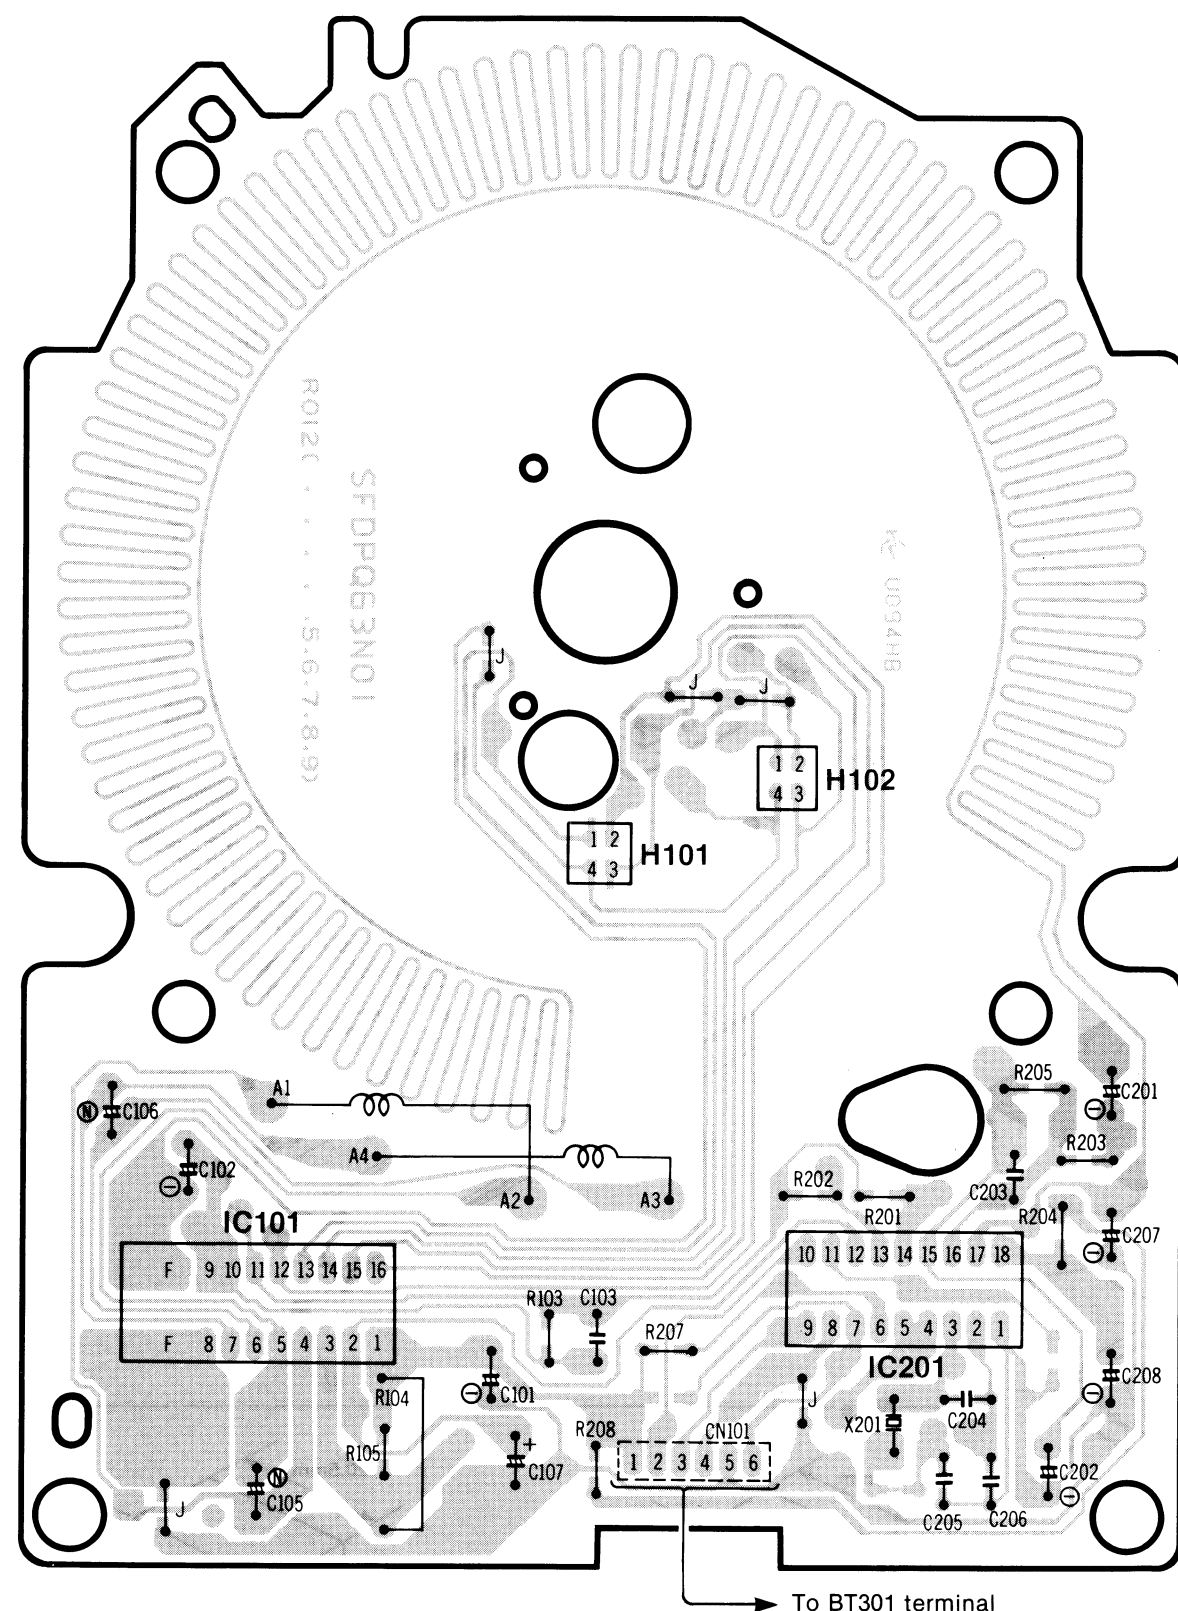

Terminal guide of transistors, and IC's

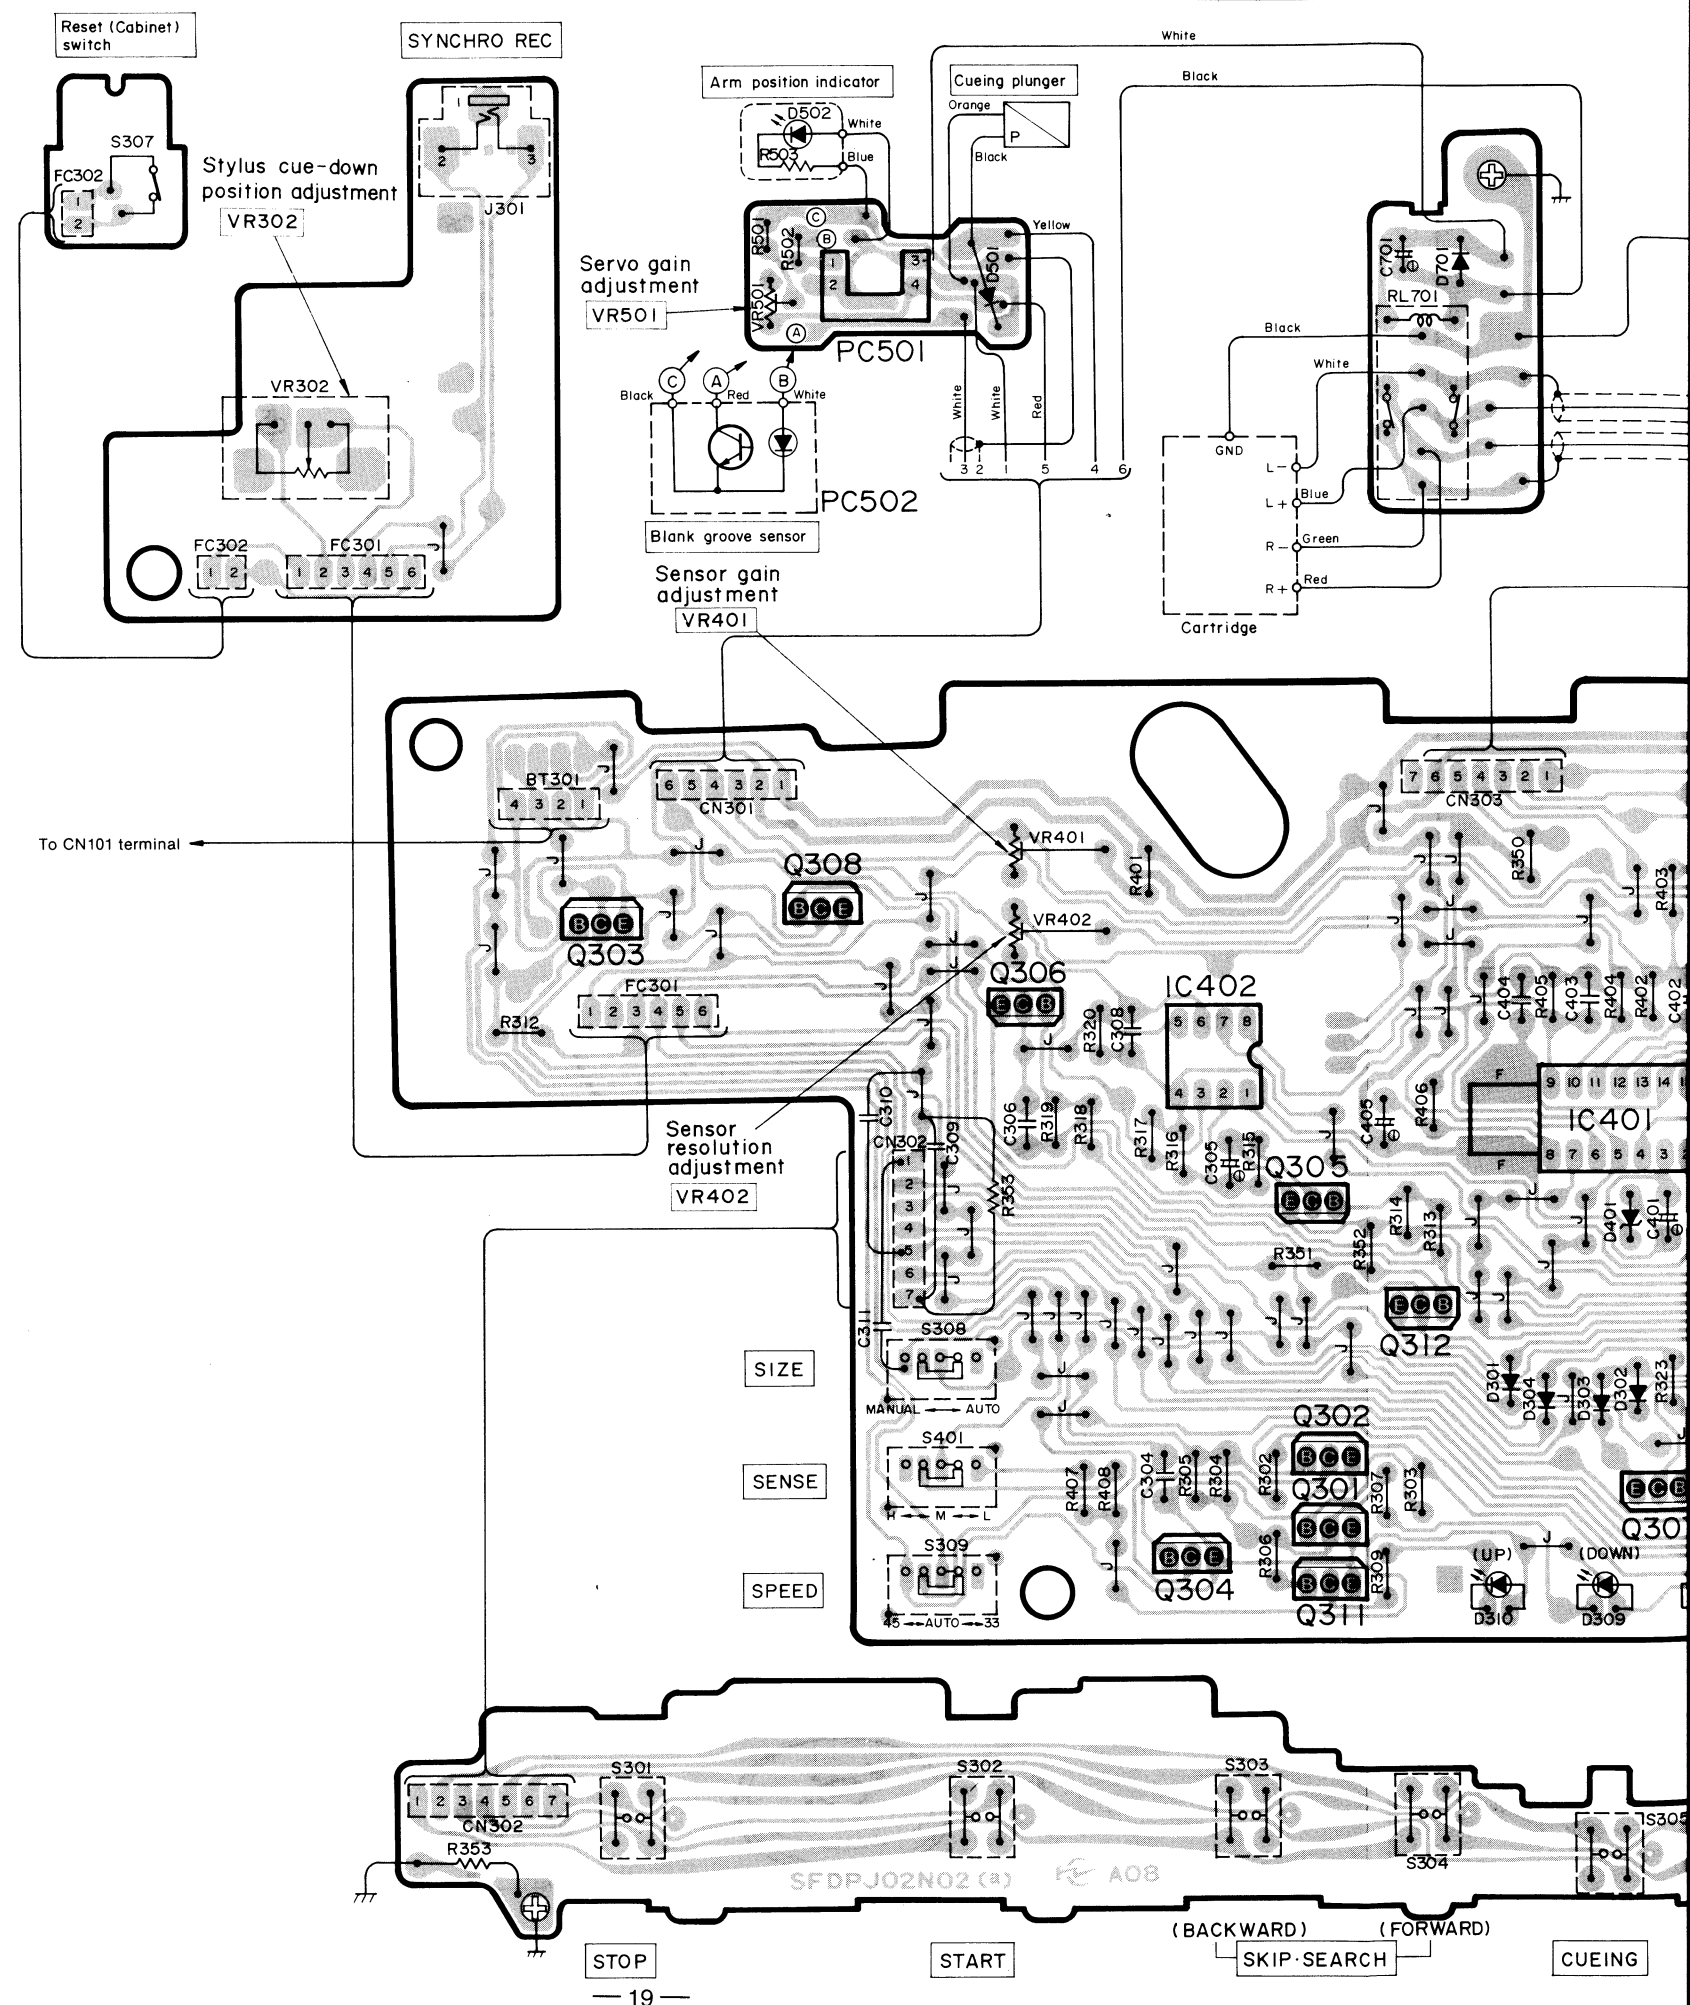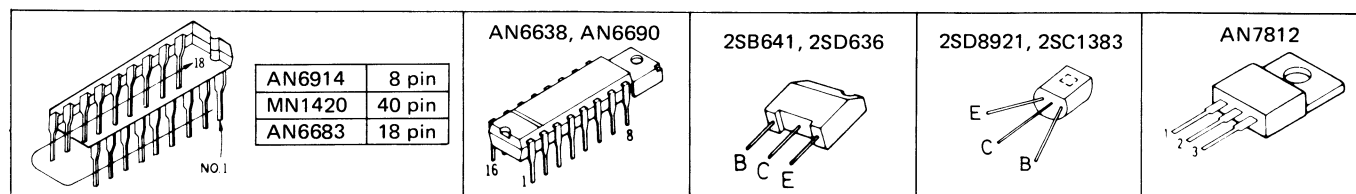

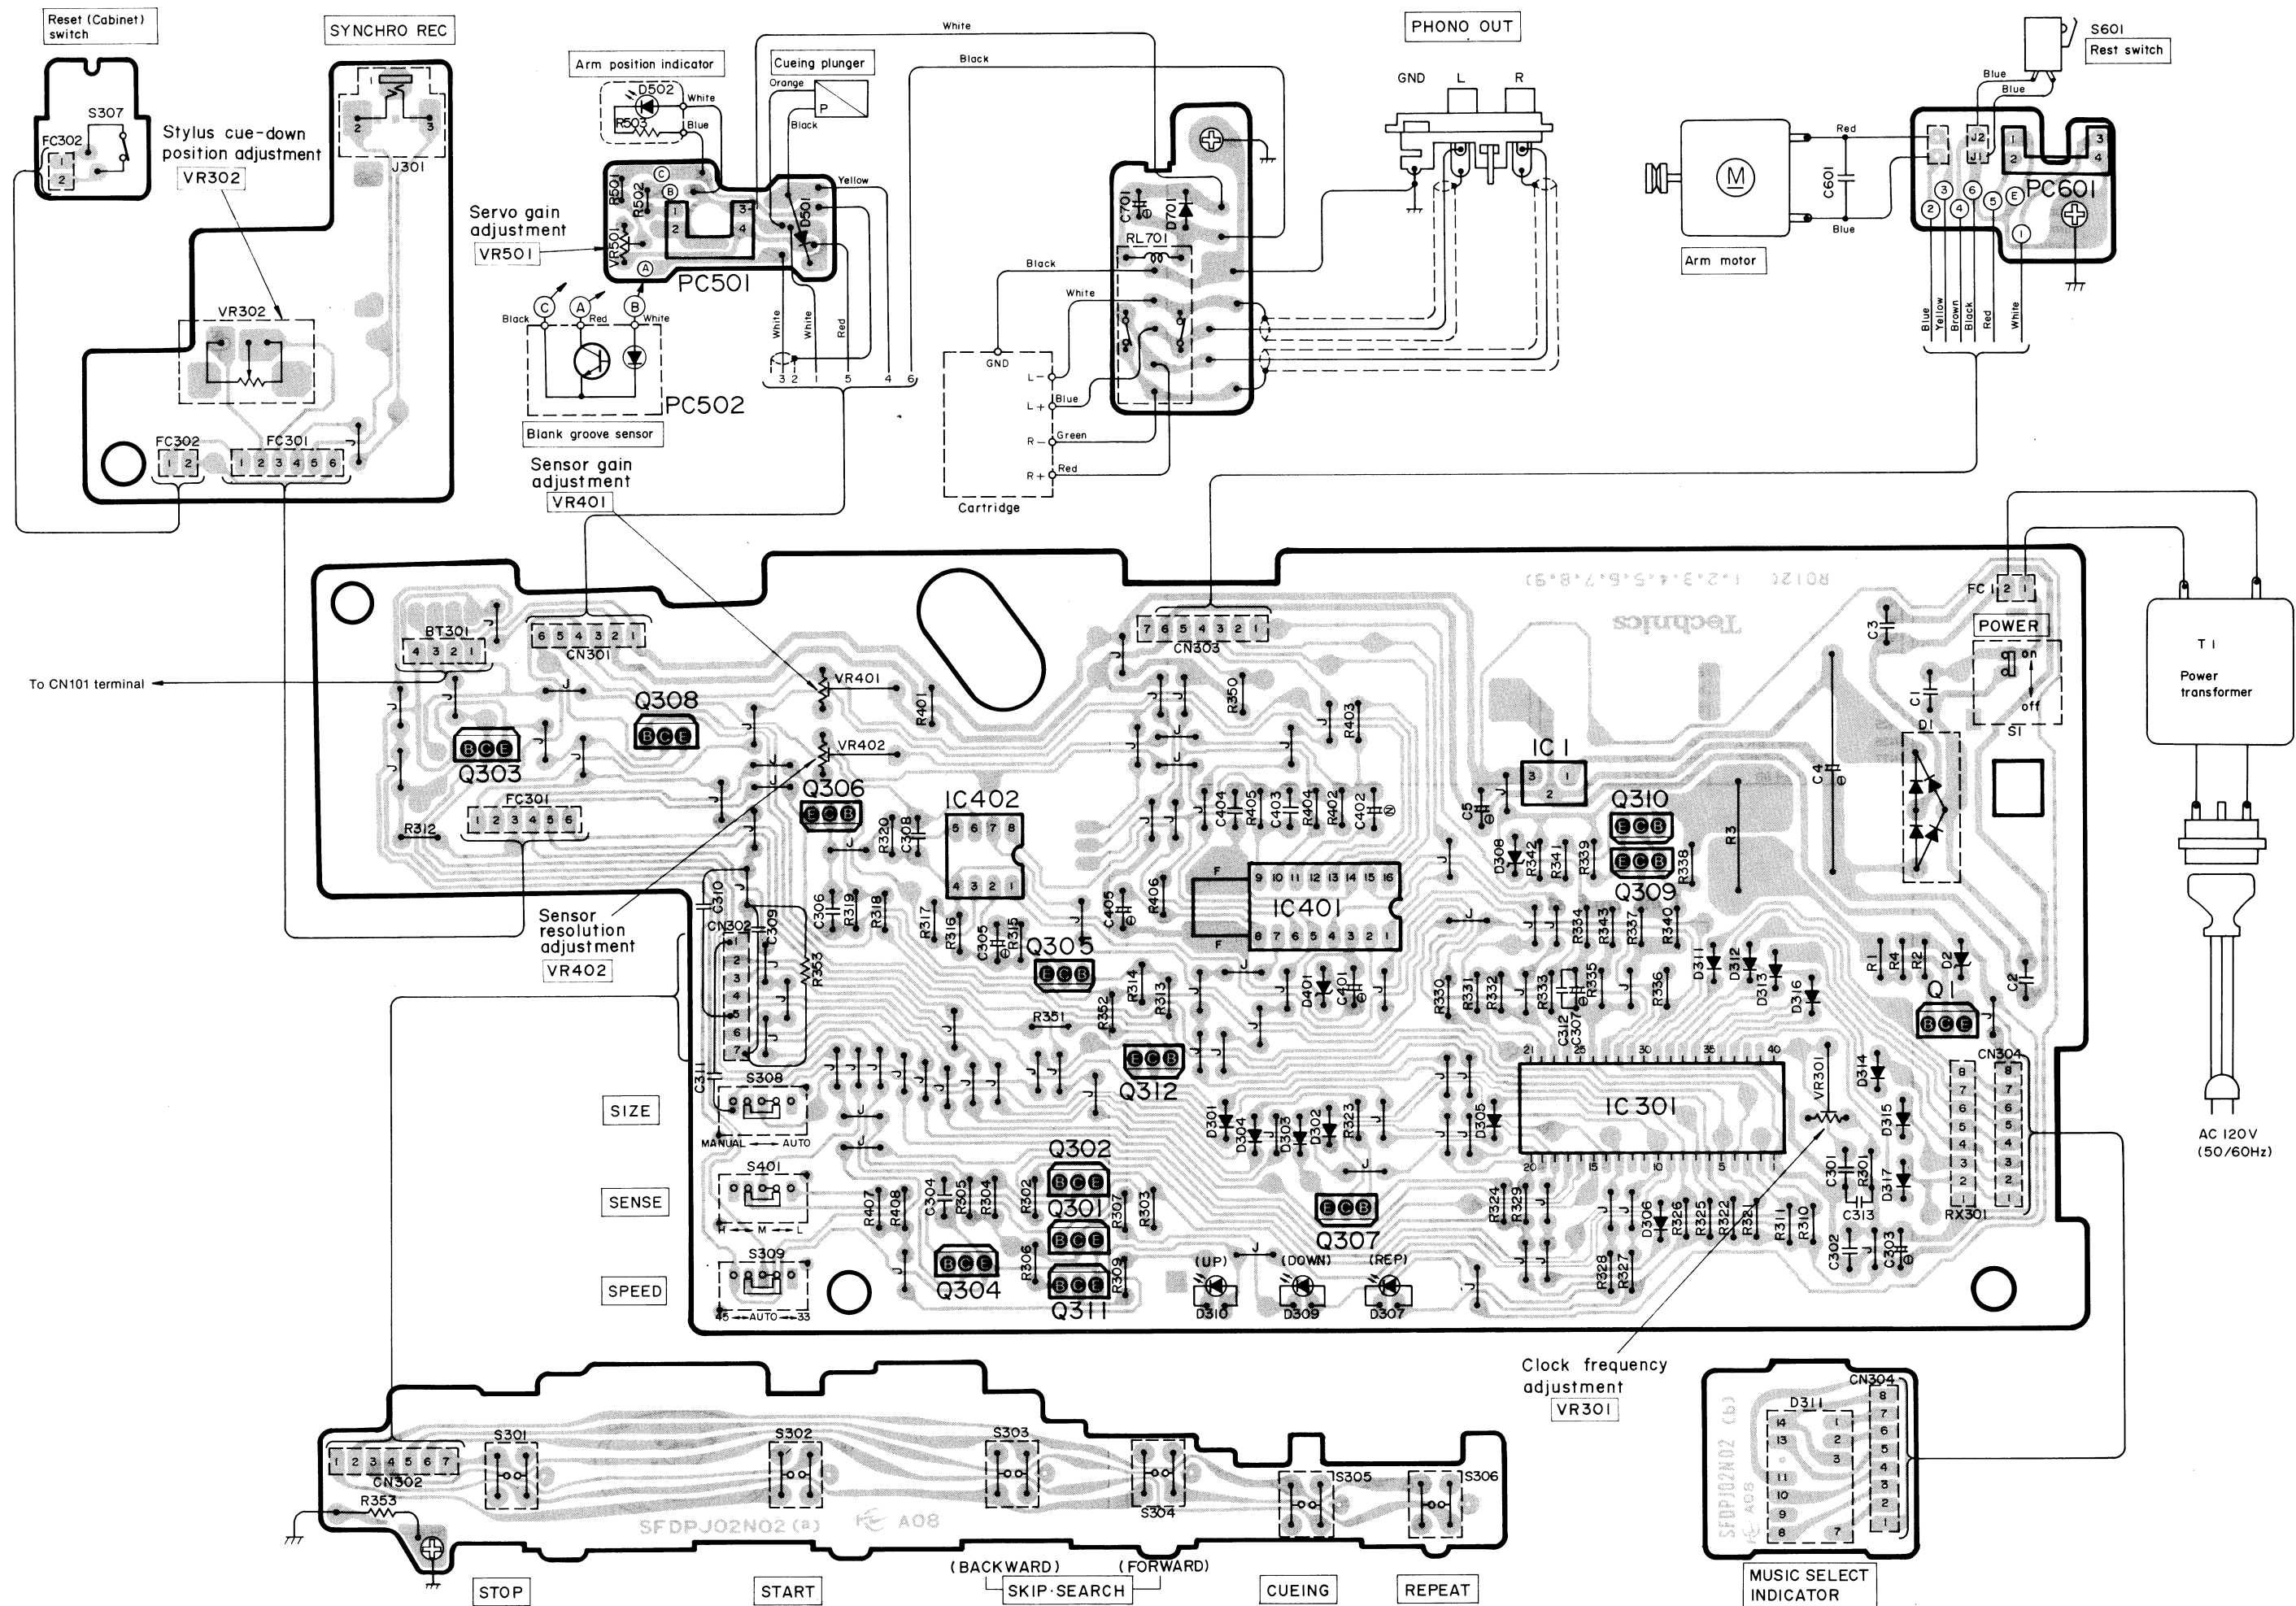

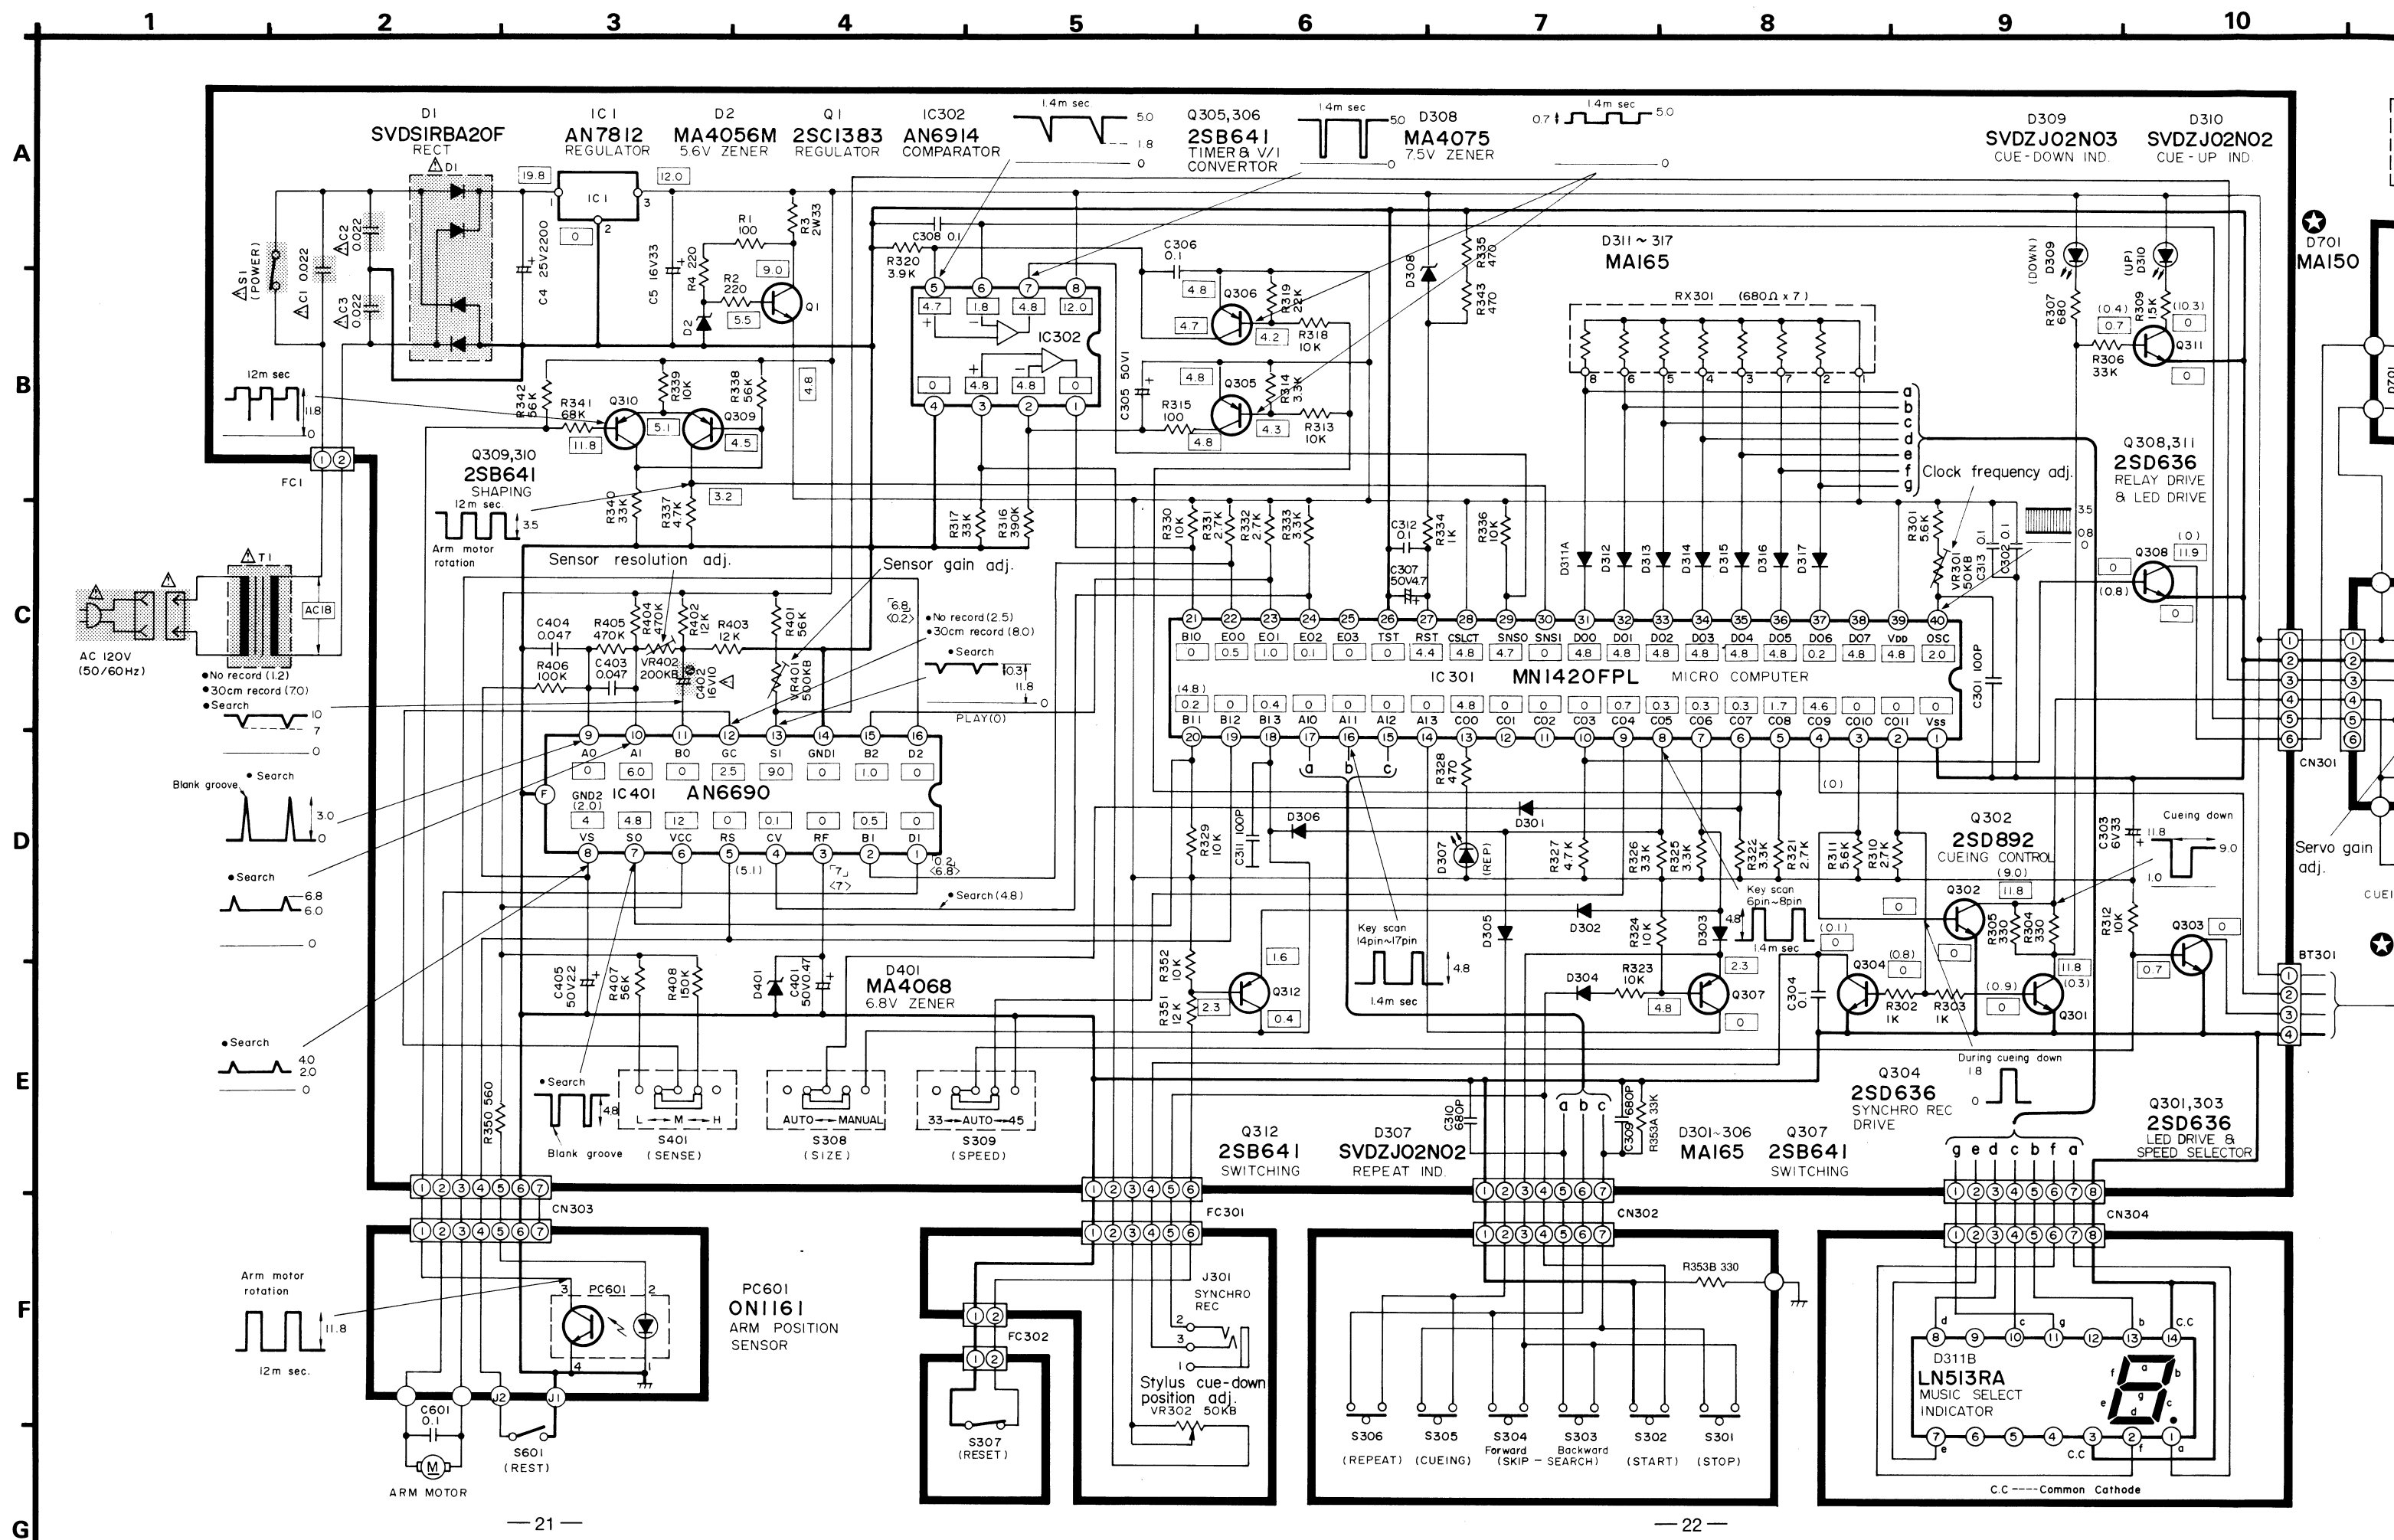

■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with development of new technology.)

IMPORTANT SAFETY NOTICE

The shaded area on this schematic diagram incorporates special features important for protection from fire and electrical shock hazards. When servicing it is essential that only manufacturer's specified parts be used for the critical components in the shaded areas of the schematic.

● Product for MC only

FUSE REPLACEMENT

Symbol located near the fuse indicates fast operating type. For continued protection against fire hazard, replace with same type fuse. Refer to the symbol for fuse rating.


FUSIBLE REMPLACEMENT

Le symbole qui se trouve près du fusible signifie un fusible à action rapide. Pour une protection continue contre les risques d'incendie, n'utiliser que des fusibles du même type. Se rapporter au symbole pour la valeur des fusibles.



Notes:

- 1. S1 : Power switch in "on" position.
- 2. S301 : Stop switch.
- 3. S302 : Start switch.
- 4. S303 : Backward skip/search switch.
- 5. S304 : Forward skip/search switch.
- 6. S305 : Cueing control switch.
- 7. S306 : Repeat switch.
- 8. S307 : Cabinet (Reset) switch in "on" position. (Upper cabinet is closed)
- 9. S308 : Record size selector switch in "auto" position.
- 10. S309 : Speed selector switch in "auto" position.
- 11. S401 : Sensitivity selector switch in "M" position.
- 12. S601 : Rest switch in "off" position. (Presently tonearm is on rest.)
- 13. The voltage value and waveform are the standard values of this measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Therefore, the voltage value and waveform may include some error due to the internal impedance of the tester or the measuring unit.
 - * is the voltage when turntable is stop.
 - * is the voltage when turntable is in rotation.
 - * is the voltage when tonearm is in lead-in mode.
 - * is the voltage when tonearm is in return mode.
 - * is the voltage at 45 rpm.
- 14. Positive voltage lines.
- 15. Important safety notice: Components identified by mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.






*The part No. of diodes mentioned in the schematic diagram stand for production part No. Regarding the part No. with mark the production part No. are different from the replacement part No. Therefore, when placing an order for replacement part, please use the part No. in the replacement parts list.

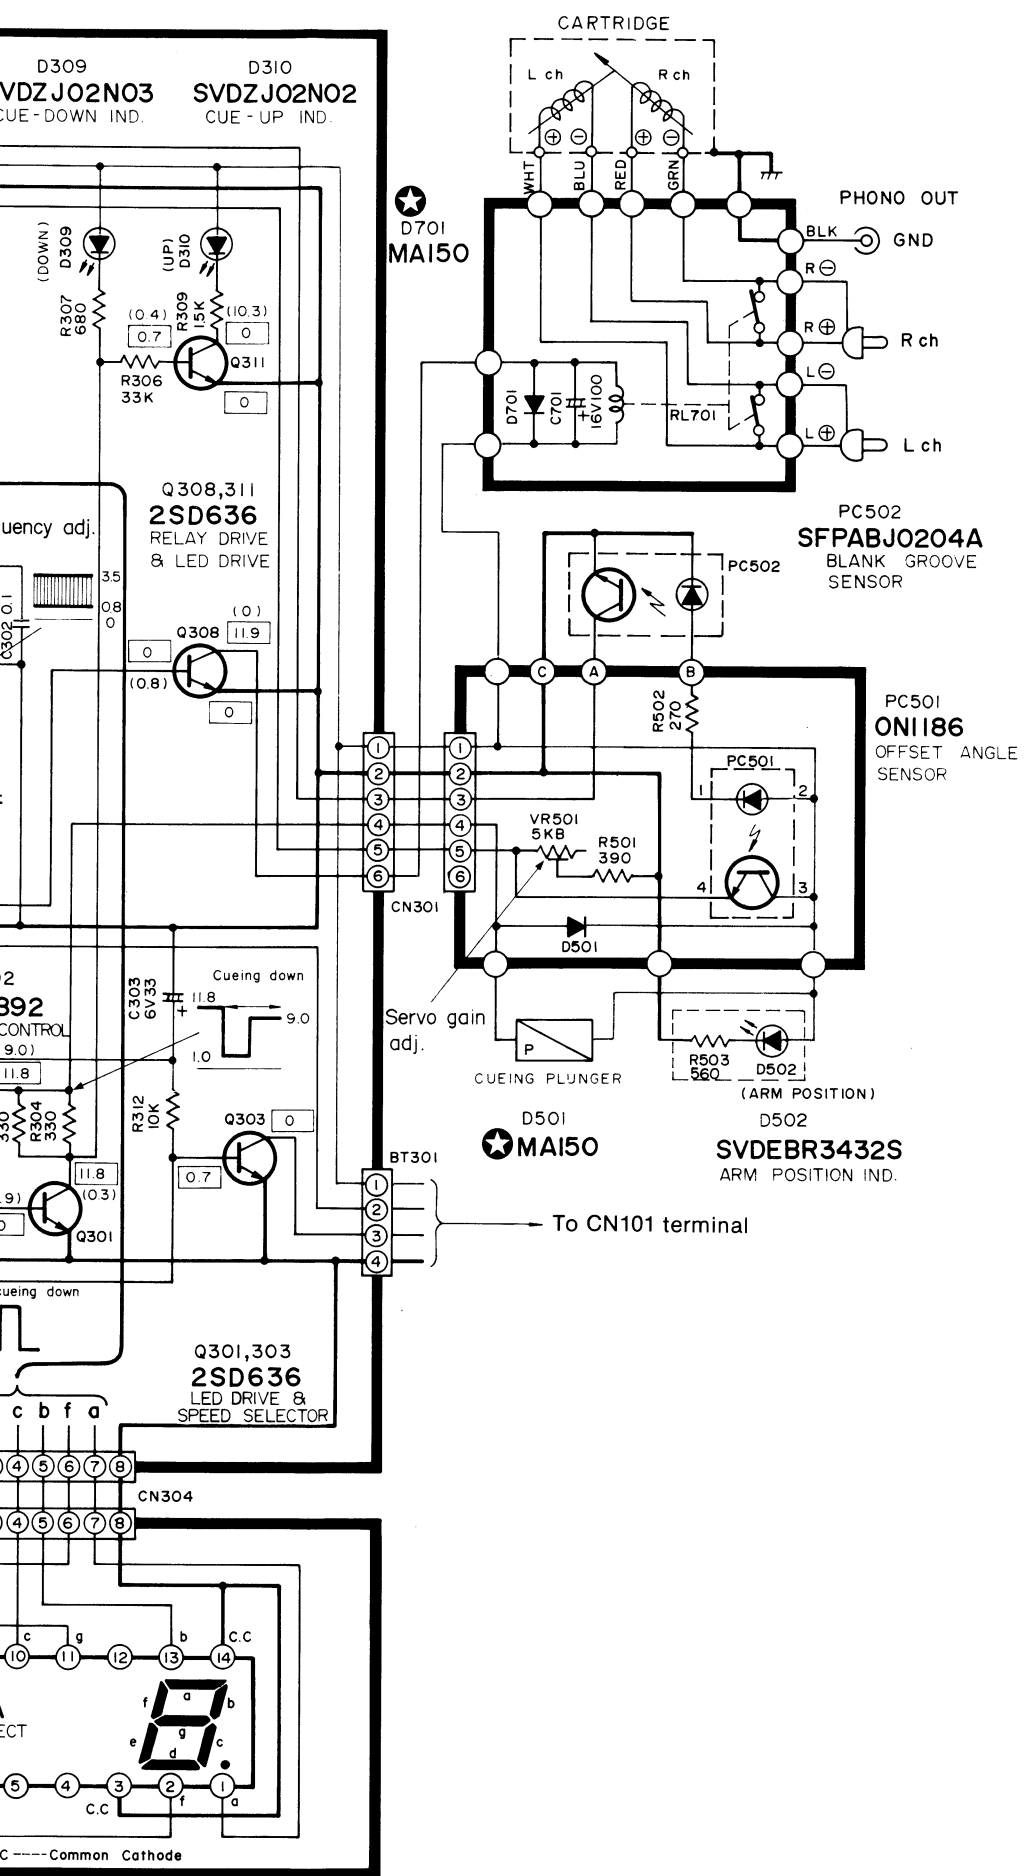

● Power source circuit
Product for [MC] only.

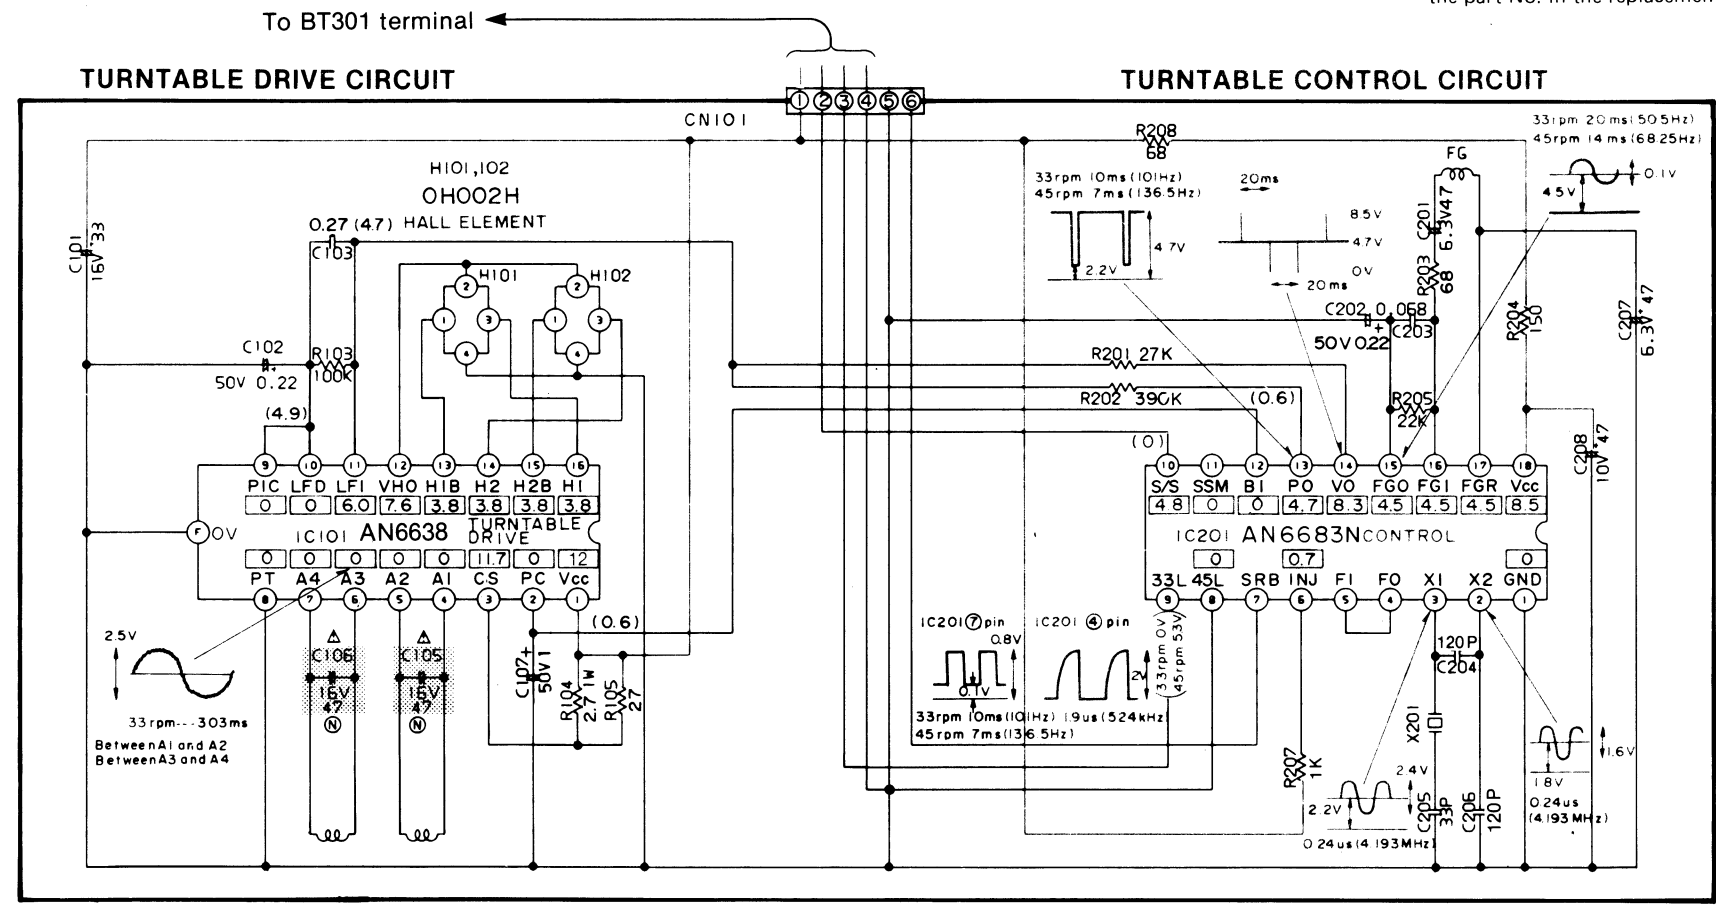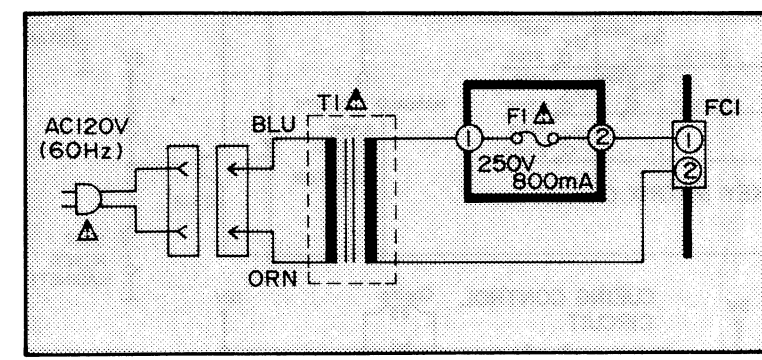


BLOCK DIAGRAM

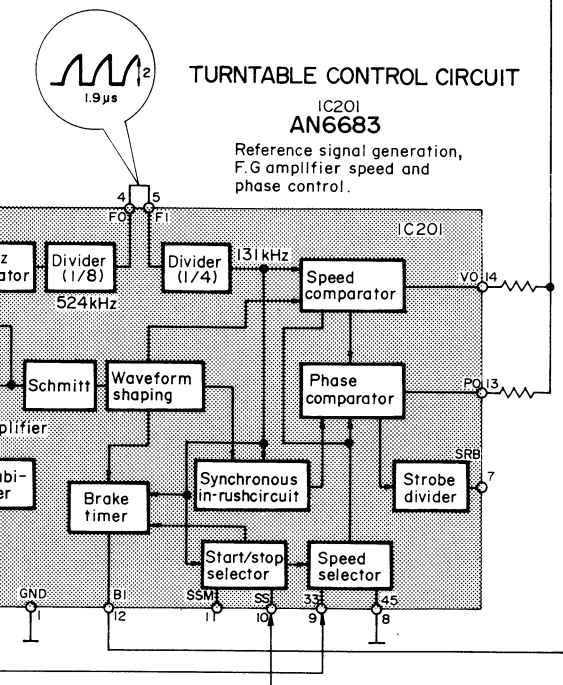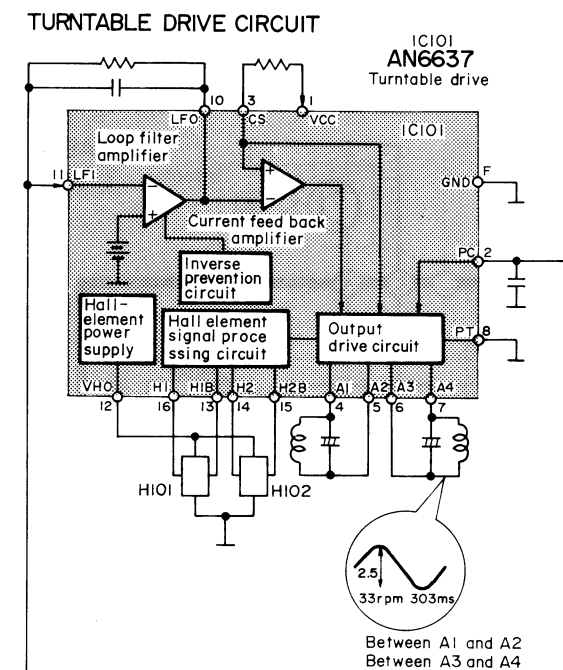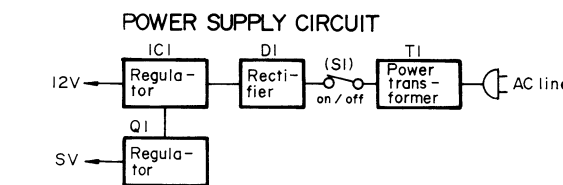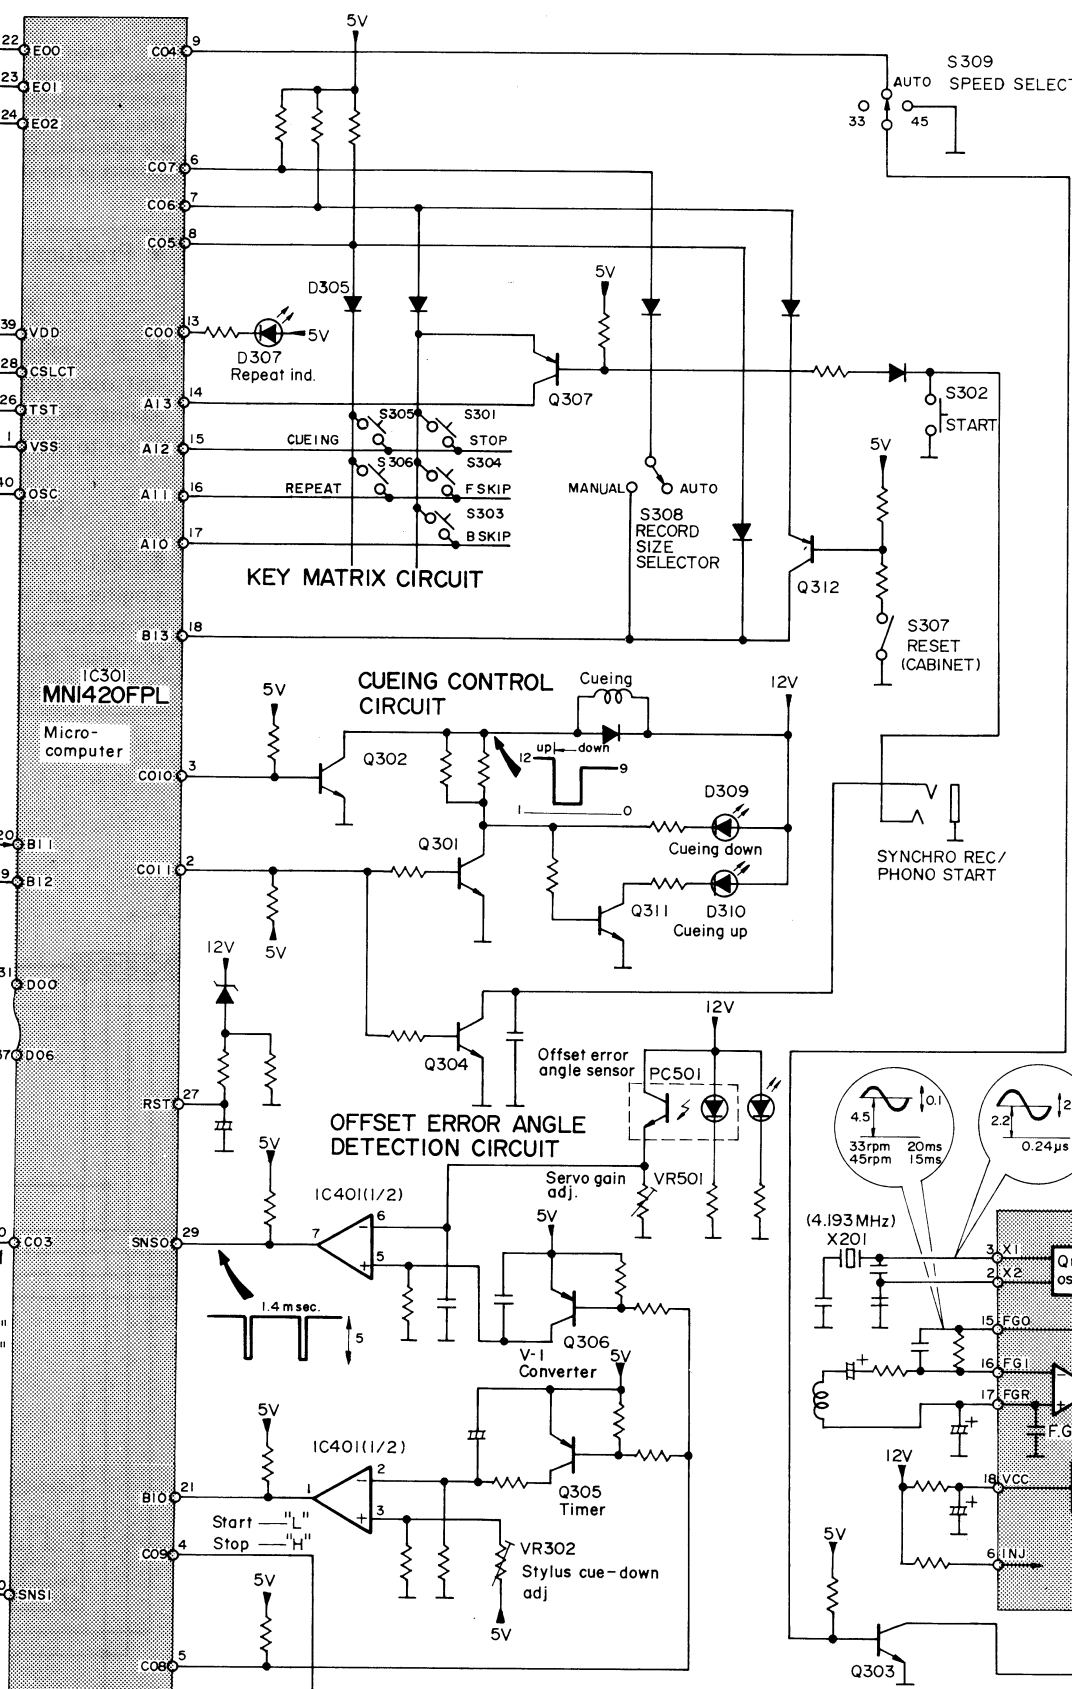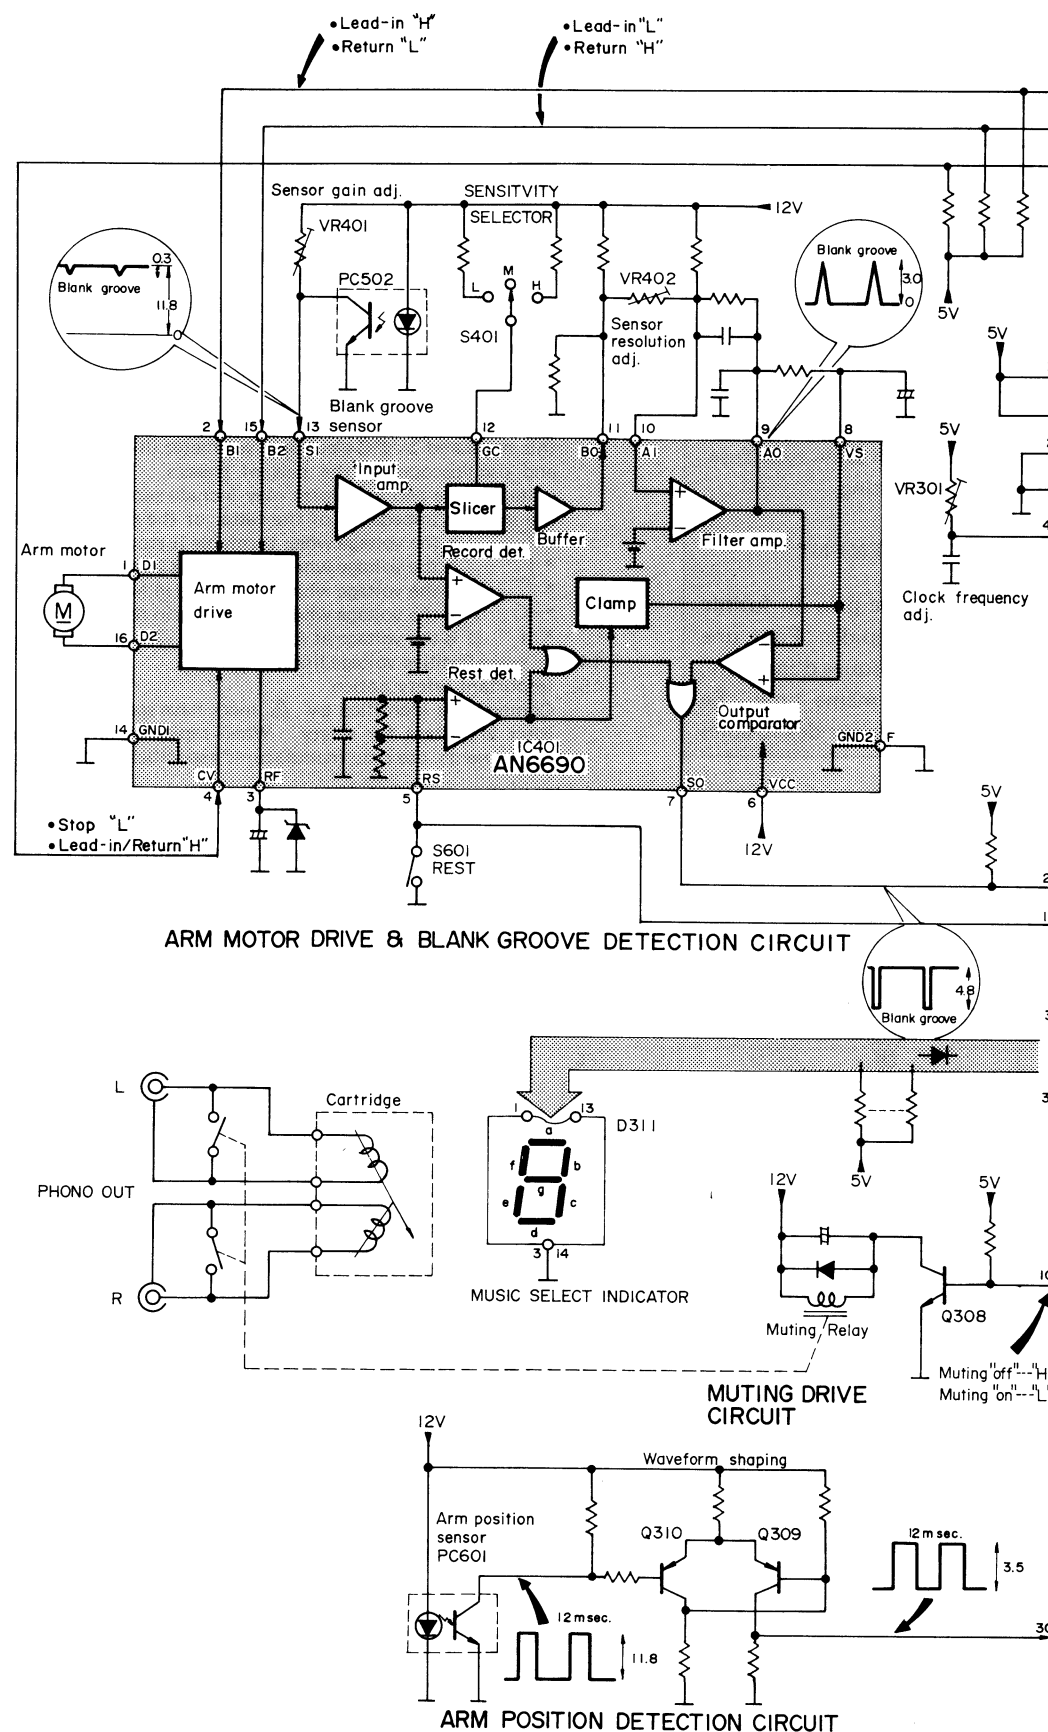

• Music selector indicator microcomputer (IC301)

D311 (LN513RA)

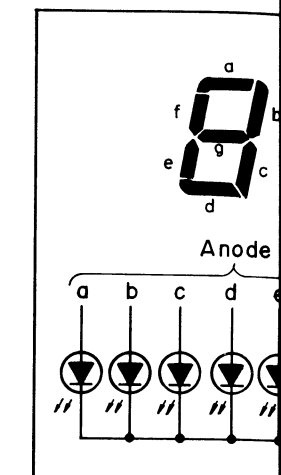


IC301 (MN1420FPL)

Pin No.	31 (DO0)	32 (DO1)	33 (DO2)
Display	a	b	c
0	H	H	H
1	L	H	H
2	H	H	L
3	H	H	H
4	L	H	H
5	H	L	H
6	H	L	H
7	H	H	H
8	H	H	H

- Music selector indicator (D311) and microcomputer (IC301) terminal voltage

D311 (LN513RA)

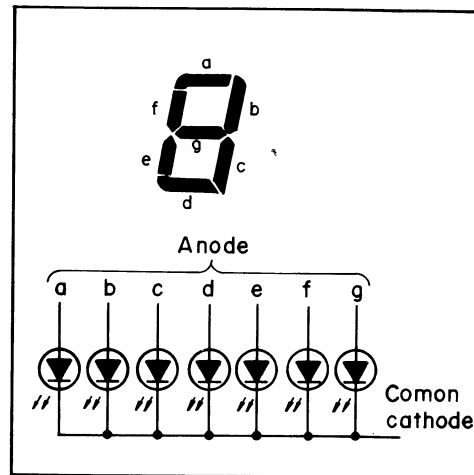

IC301 (MN1420FPL)


Pin No.	31 (DO0)	32 (DO1)	33 (DO2)	34 (DO3)	35 (DO4)	36 (DO5)	37 (DO6)
Display	a	b	c	d	e	f	g
0	H	H	H	H	H	H	L
1	L	H	H	L	L	L	L
2	H	H	L	H	H	L	H
3	H	H	H	H	L	L	H
4	L	H	H	L	L	H	H
5	H	L	H	H	L	H	H
6	H	L	H	H	H	H	H
7	H	H	H	L	L	H	L
8	H	H	H	H	H	H	H
9	H	H	H	H	L	H	H

FUNCTION OF TERMINAL (MN1420FPL)


Pin No.	Symbol	Description
1	VSS	Ground terminal
2	CO11	Cueing control terminal ("H" during cueing and cueing down)
3	CO10	Cueing control terminal ("H" only cueing down)
4	CO9	Turntable start/stop select terminal (Start at "L", stop at "H")
5	CO8	Key scan output terminal (Each key is read in through key scan with A-port)
6	CO7	
7	CO6	
8	CO5	
9	CO4	Turntable speed select output terminal (45 rpm "L", 33 rpm "H")
10	CO3	Muting control terminal (Muting on "L", Muting off "H")
11	CO2	Not used in this unit
12	CO1	
13	CO0	Repeat indicator output terminal (Indicator ON at "L")
14	A13	Key scan input terminal (Each key is read in through key scan with C-port)
15	A12	
16	A11	
17	A10	
18	B13	Record size selector input terminal (Read in through key scan with C-port)
19	B12	Rest position detection input terminal ("L" when tonearm is on rest)
20	B11	Blank detection and record detection terminals (Blank pulse is active at "L"; 30 cm record is present with "H" at rest position; 30 cm record is not present with "L". When it is at "L" outside the rest position, 17 cm is present; and no record is present at "H".)
21	B10	Cueing time read input terminal
22	EO0	Arm motor drive control terminal
23	EO1	
24	EO2	
25	EO3	Not used in this unit
26	TST	Test terminal
27	RST	Reset terminal (Micom is reset at "L")
28	CSLCT	Select terminal
29	SNS0	Offset angle detection signal input terminal
30	SNS1	Arm position detection signal input terminal
31	DO0	Segment display output terminal (Lights up at "H")
32	DO1	
33	DO2	
34	DO3	
35	DO4	
36	DO5	
37	DO6	
38	DO7	Not used in this unit
39	VDD	Power supply terminal
40	OSC	Oscillation circuit (Clock frequency is adjusted to 1.36ms)

PACKING


- Open the upper cabinet and fit the spacer in place.

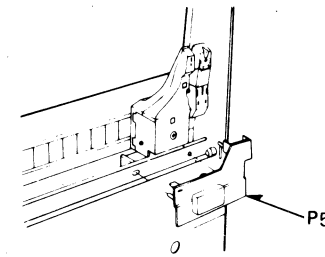


- Fit the turntable platter clumper and dust cover spacer in place.

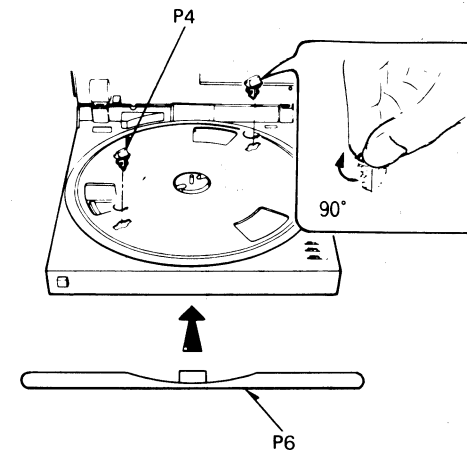


- Put the into polyethylene bag, and make the package as shown below.

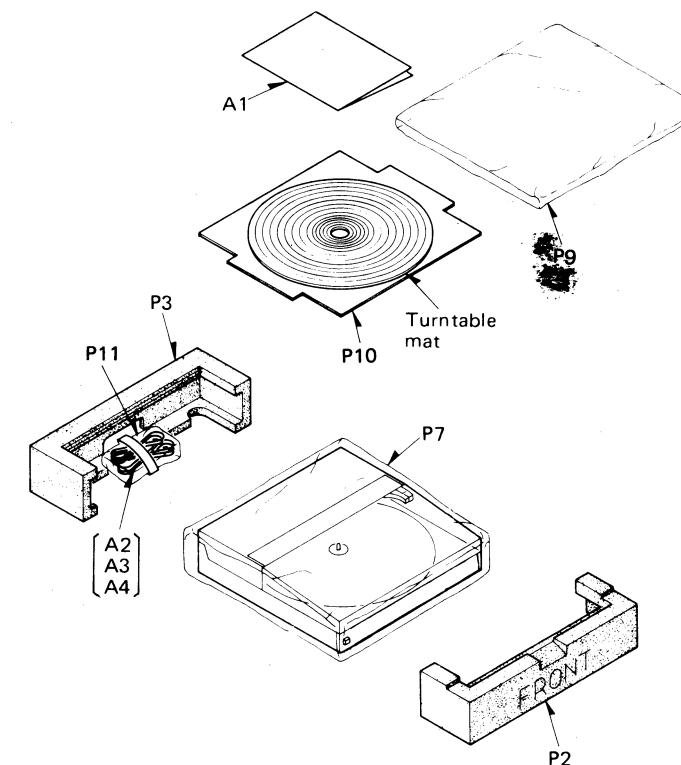

- Place the unit (with cushions attached) as illustrated.
- Fold the flaps according to the line marks.
- Seal the top with adhesive tape.
 - *Use gum tape or adhesive cloth tape of 50mm wide at least.
- For the edges, first fold the flap "a" and then flap "b", and staple. Remember to staple only flap "b". (Use 15 or 16mm staple)

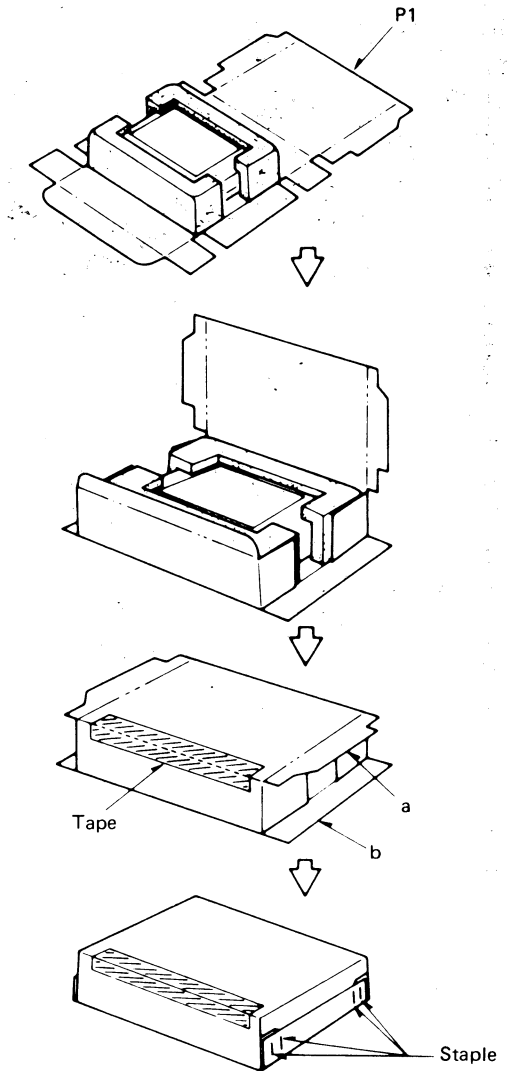

*Stapling positions are shown below.

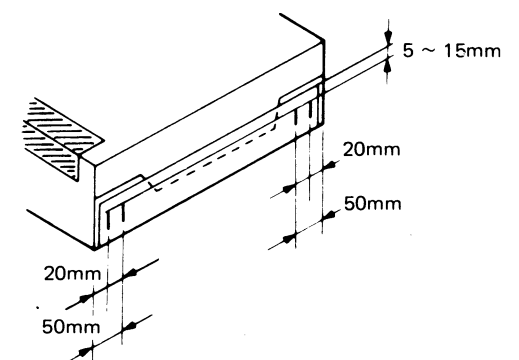

Service Manual

Quartz Direct Drive Automatic Turntable System

SL-J2

Supplement-1



Please use this manual together with the service manual for Model No. SL-J2, Order No. DAD84050089C1 and DAD84060093C8.

- Notes:** ★ The circuit of SL-J2 has been changed for the improvement of performance, and correct the adjustment method of servo again and offset voltage.
★ The changes are mentioned in this supplement. Please keep this point in mind when servicing.
★ This supplement should be field with the service manual for Model No. SL-J2.
(Order No. DAD84050089C1 or DAD84060093C8)

CHANGES

■ SCHEMATIC DIAGRAM

- Blank groove detection circuit

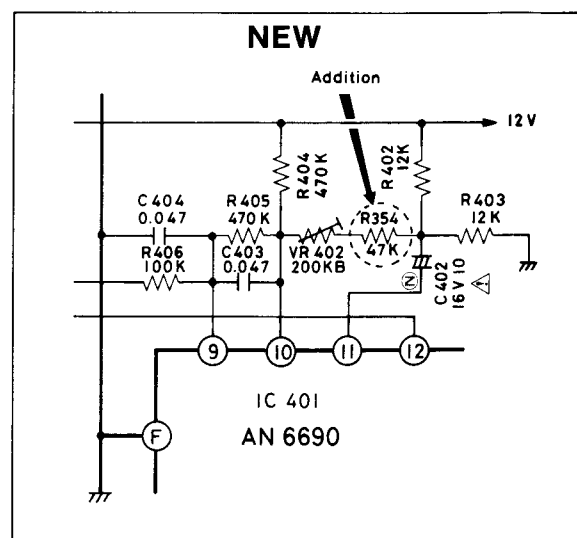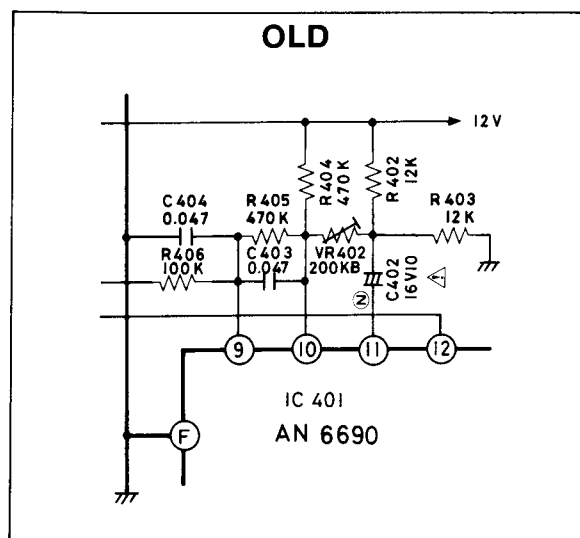

Matsushita Engineering and Service Company
50 Meadowland Parkway,
Secaucus, New Jersey 07094

Panasonic Hawaii Inc.
91-238 Kauhi St. Ewa Beach
P.O. Box. 774
Honolulu, Hawaii 96808-0774



Matsushita Electric of Canada Limited
5770 Ambler Drive, Mississauga,
Ontario, L4W 2T3

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 De Infanteria, KM 9.7
Victoria, Industrial Park
Carolina, Puerto Rico 00630



Matsushita Electric Trading Co., Ltd
P.O. Box 288, Central Osaka Japan

Technics



- **Power source circuit**

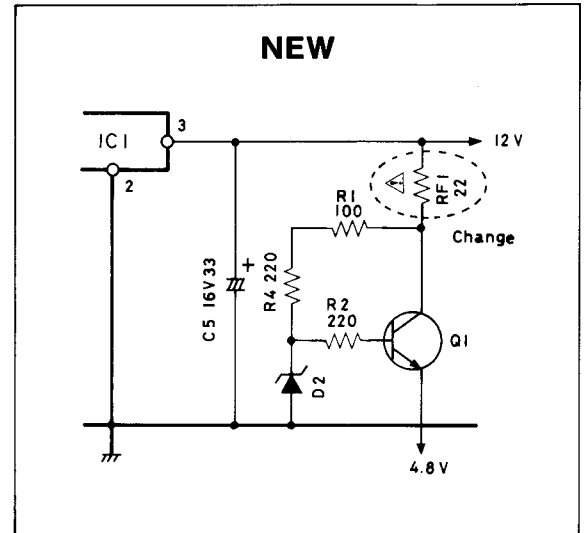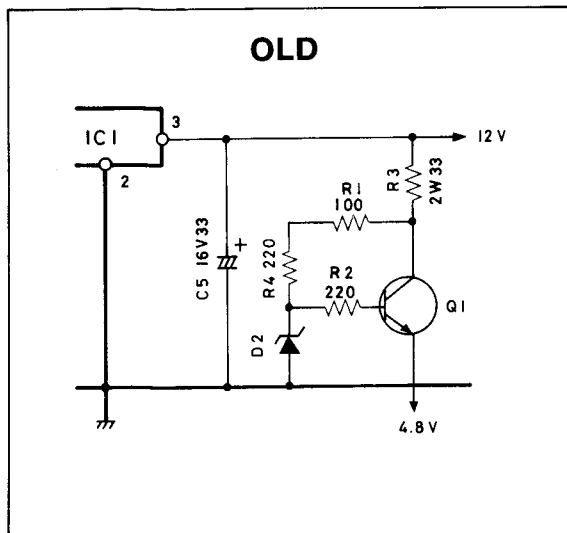

- **LED drive circuit**

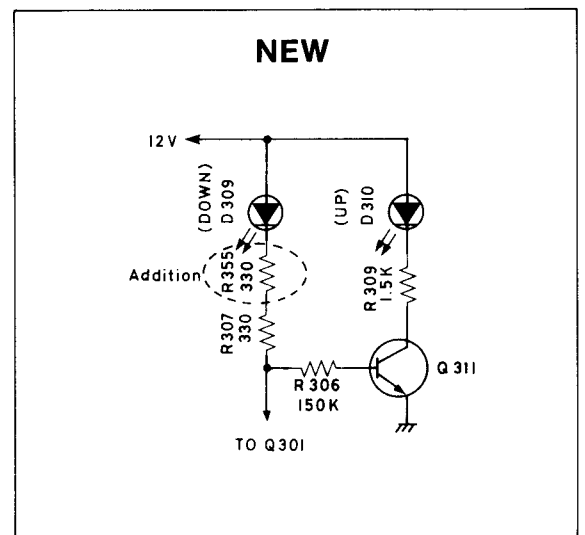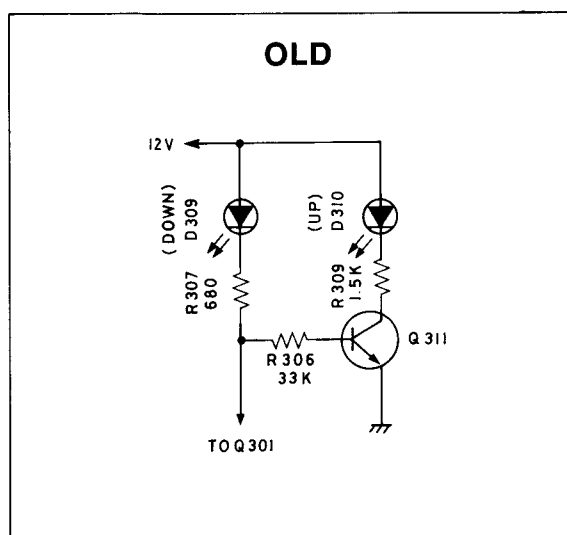

- **Reset circuit**

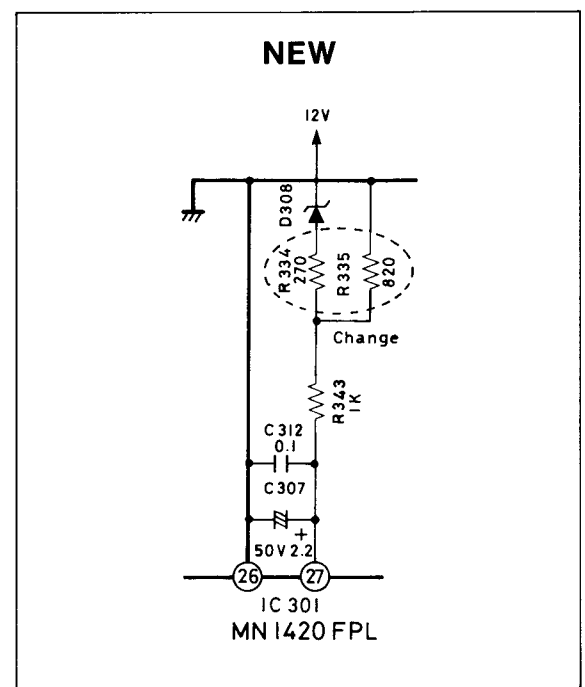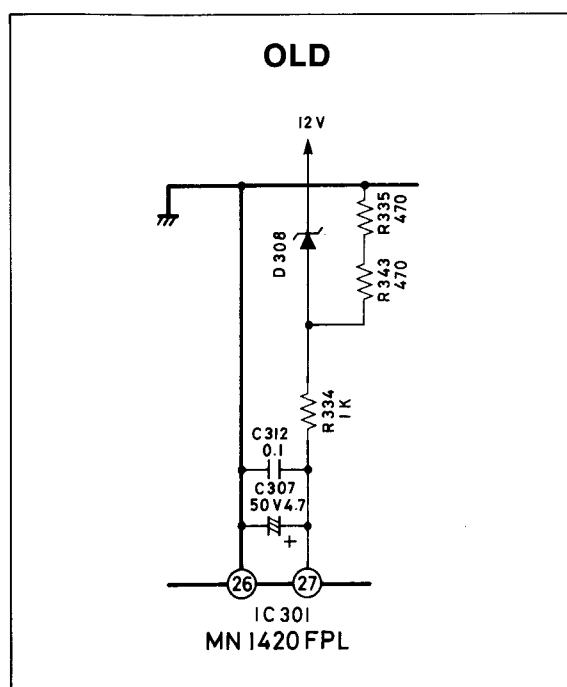

■ REPLACEMENT PARTS LIST (Change in replacement parts list)

Ref. No.	Change of Part No.		Part Name & Description	Per Set (Pcs.)	Remarks
	SL-J2 (OLD)	➡ SL-J2 (NEW)			
DIODES					
D2	MA4056	Zener, 5.6 V	1	Addition
D5	MA4056	0	Deletion
D308	MA4075	MA4062	Zener, 6.2 V	1	Change
D311B	LN513RA	LN513RK	Music Select Indicator	1	Change
D502	SVDEBR3432S	SVDSL31VC3	Tonearm Position Indicator	1	Change
VARIABLE RESISTOR					
VR301	EVN61AA00B54	EVN61AA00B24	Clock Frequency Adj., 20 kΩ (B)	1	Change
PHOTO INTERRUPTER					
PC502	SFPABJ0204A	SFPABJ0205R	Blank Groove Sensor	1	Change
RESISTORS					
R3	ERG2SJ330	0	Deletion
RF1	ERD2FCG220P	Fuse type Carbon, 1/4 W, 22 Ω, ±5%	1	Addition
R306	ERDS2TJ333	ERDS2TJ154	Carbon, 1/4 W, 150 kΩ, ±5%	1	Change
R307	ERDS2TJ681	ERDS2TJ331	Carbon, 1/4 W, 330 Ω, ±5%	1	Change
R343	ERDS2TJ681	ERDS2TJ102	Carbon, 1/4 W, 1 kΩ, ±5%	1	Change

Ref. No.	Change of Part No.		Part Name & Description	Per Set (Pcs.)	Remarks
	SL-J2 (OLD)	➡ SL-J2 (NEW)			
RESISTORS					
R344 ~ 349	ERDS2TJ681	0	Deletion
R350	ERDS2TJ681	ERDS2TJ561	Carbon, 1/4 W, 560 Ω, ±5%	1	Change
R351	ERDS2TJ103	ERDS2TJ123	Carbon, 1/4 W, 12 kΩ, ±5%	1	Change
R352	ERDS2TJ103	Carbon, 1/4 W, 10 kΩ, ±5%	1	Addition
R354	ERDS2TJ473	Carbon, 1/4 W, 47 kΩ, ±5%	1	Addition
R355	ERDS2TJ331	Carbon, 1/4 W, 330 Ω, ±5%	1	Addition
R401	ERDS2TJ563	ERDS2TJ103	Carbon, 1/4 W, 10 kΩ, ±5%	1	Change
R503	ERD25FJ561	ERD25FJ471	Carbon, 1/4 W, 470 Ω, ±5%	1	Change
CAPACITORS					
R307	ECEA1HU4R7	ECEA1HU2R2	Electrolytic, 50 V, 2.2μF	1	Change
R405	ECEA1HU2R2	ECEA1CU220	Electrolytic, 16 V, 22μF	1	Change

■ ADJUSTMENT

 Change of part

• English

Servo gain and offset voltage	1. Remove the dust cover. (Refer to "DISASSEMBLY INSTRUCTION")	VR501 (Servo gain)	1. Turn the power switch on.
	2. Open the upper cabinet and hold the cabinet switch with tape.		2. Keep the F skip switch depressed to move the tonearm.
	3. Connect the DC voltmeter to CN301 5-pin (+) and 2-pin (-).	Screw (Offset voltage) (Fig. 20)	3. Open the upper cabinet.
	4. Remove the sensor cover.		4. Completely shift the tonearm to the left. Then, adjust VR501 so that the voltage is 6V . (Servo gain)
			5. Set the tonearm to the center and make sure that the output voltage is 3V .
			6. If the voltage is not 3V , adjust screw so that the output voltage is 3V . (Offset voltage)

• Deutsch

Servo-Verstärkung und Offsetspannung	1. Die Staubabdeckung entfernen. (Siehe "ANLEITUNG FÜR DIE DEMONTAGE".)	VR501 (Servo-Verstärkung)	1. Den Ein/Aus-Schalter einschalten.
	2. Das Gehäuseoberteil öffnen und den Gehäuseschalter mit Klebband in der gedrückten Stellung arretieren.		2. Den F-Überspring-Schalter gedrückt halten, um den Tonarm zu bewegen.
	3. Das Gleichstrom-Voltmeter an CN301, Stift 5 (+) und Stift 2 (-) anschließen.	Schraube (Offsetspannung) (Abb. 20)	3. Das Gehäuseoberteil öffnen.
	4. Die Sensorabdeckung entfernen.		4. Den Tonarm ganz nach links bewegen. Dann VR501 so justieren, daß die Spannung 6V beträgt. (Servo-Verstärkung)
			5. Den Tonarm zur Mitte hin stellen und überprüfen, daß, die Ausgangsspannung 3V beträgt.
			6. Falls die Spannung nicht 3V beträgt, ist die Schraube so zu justieren, daß die Ausgangsspannung 3V beträgt. (Offset-Spannung)

• Français

Amplification servo-mécanique et tension d'écart de réglage	1. Retirer le couvercle protège-poussière. (Se référer aux "INSTRUCTIONS POUR LE DÉMONTAGE".)	VR501 (Amplification servo-mécanique)	1. Mettre en circuit l'interrupteur d'alimentation.
	2. Ouvrir le boîtier supérieur et maintenir appuyée la touche du boîtier avec une bande adhésive.		2. Maintenir enfoncé le commutateur de saut F pour déplacer le bras de lecture.
	3. Raccorder le voltmètre à C.C. à la broche 5 (+) et à la broche 2 (-) de CN301.	Vis (Tension de décalage) (Fig. 20)	3. Ouvrir le boîtier supérieur.
	4. Retirer le couvercle du dispositif détecteur.		4. Déplacer complètement le bras de lecture vers la gauche. Puis, ajuster VR501 de telle sorte que la tension soit de 6V . (Amplification servo-mécanique)
			5. Régler le bras de lecture au centre et s'assurer que la tension de sortie soit de 3V .
			6. Si la tension n'est pas de 3V , ajuster la vis de telle sorte que la tension de sortie soit de 3V . (Tension de décalage)

• Español

Ganancia del servo-mecanismo y tensión de desnivel	<ol style="list-style-type: none"> 1. Remover la tapa contra el polvo. (Referir a "INSTRUCCION DE DESMONTAJE") 2. Abrir el gabinete superior y sujetar el interruptor del mismo con cinta. 3. Conectar el voltímetro de CC a 5 pernos (+) y 2 pernos (–) de CN301. 4. Remover la cubierta de sensor. 	VR501 (Ganancia del servo-mecanismo) Tornillo (Tensión de desnivel) (Fig. 20)	<ol style="list-style-type: none"> 1. Encender el interruptor de la corriente. 2. Mantener el interruptor de salto F oprimido para mover el brazo sonoro. 3. Abrir el gabinete superior. 4. Mover completamente el brazo sonoro a la izquierda. Luego, regular VR501 de manera que la tensión sea 6V. (Ganancia del servomecanismo) 5. Colocar el brazo sonoro en el centro y asegurarse de que la tensión de salida sea de 3V. 6. Si la tensión no es 3V, regular el tornillo de manera que la tensión de salida sea 3V. (Tensión de desnivel)
---	--	---	---